



OLIVER
TRAVEL TRAILERS

2023

LEGACY ELITE II
OWNER'S
MANUAL



VIEW THIS MANUAL ONLINE AT [OLIVERTRAVELTRAILERS.COM](https://www.olivertraveltrailers.com)



WELCOME TO THE OLIVER FAMILY

Thank you for investing in an Oliver Travel Trailer. There are many choices out there, but we firmly believe you have made the best one. We are not only committed to building the best quality travel trailers on the road, but we back it up with the best customer service we can offer.

Since we first started building travel trailers in 2008, we have come a long way with the help of our owners. Our direct relationship with our owners allows us to gather feedback and make our travel trailers better every year. We look forward to you being a part of the Oliver family of owners.

If you would like to learn more about how to use your new Oliver Travel Trailer, we have created a library of videos that include just about every aspect of using and maintaining your Oliver. See the video section on our website or channel on YouTube for more details.

As an owner, we encourage you to take part in some of the activities and communication outlets that are available to you. With transparency in mind, we have created a forum on our website. This is a great place to meet people with similar interests, discuss places to go during your adventures and advice on how to use or modify your Ollie to your needs. Oliver Travel Trailer owners have also created a private Facebook group. Search “Oliver Trailer Owners” on Facebook and request to join.

The purpose of this manual is to answer questions that commonly occur. Read it in its entirety. We want you to enjoy your Oliver Travel Trailer to the fullest and to help make your road to vacationing freedom more pleasant and relaxing.

If you have any questions or concerns, please do not hesitate to contact us!

Sincerely,

Scott Oliver

Scott Oliver, President

Oliver Travel Trailers Sales, Inc.



TABLE OF CONTENTS

INTRODUCTION

- 6 OVERVIEW
- 6 GETTING ACQUAINTED
- 7 COMPONENT OPERATING INSTRUCTIONS
- 7 SEE OUR VIDEOS ON YOUTUBE
- 7 SCAN THE QR CODES FOR QUICK ACCESS
- 7 CAUTION AND INFORMATION SYMBOLS
- 8 WEIGHT RATING DEFINITIONS
- 8 DECALS & VIN INFORMATION
- 8 FEDERAL CERTIFICATION TAG
- 8 INCLUDED ITEMS
- 9 MODEL SPECIFICATIONS

LIMITED WARRANTIES

- 10 WHAT IS COVERED
- 10 WARRANTIES
- 10 LIMITATIONS OF LIABILITIES
- 11 WHAT IS NOT COVERED
- 11 INDEMNIFICATION BY BUYER
- 12 CHANGES AND IMPROVEMENTS
- 12 OWNER OBLIGATIONS
- 12 HOW TO OBTAIN SERVICE
- 13 WARRANTY AUTHORIZATION

SAFETY

- 14 LP SYSTEM SAFETY
- 16 ALARMS
- 16 FIRE EXTINGUISHER
- 17 FIRE SAFETY
- 18 EMERGENCY EGRESS WINDOW
- 19 REPORTING SAFETY DEFECTS

TOWING & SETUP

- 20 TOWING VEHICLE REQUIREMENTS
- 21 DRIVING TIPS
- 22 LOADING AND WEIGHT DISTRIBUTION
- 25 COUPLING
- 28 BRAKE CONTROLLER
- 28 ELECTRIC JACK STABILIZATION SYSTEM
- 29 BRAKING AND BURNISHING BRAKES
- 29 PARKING ON A SLOPE
- 30 TOWING CHECK LIST
- 31 SET UP CHECK LIST

ELECTRICAL

- 32 OVERVIEW
- 32 CONNECTING TO SHORE POWER
- 33 CONNECTING TO A GENERATOR
- 33 SURGE PROTECTOR
- 33 BATTERY COMPARTMENT
- 34 BATTERY SAFETY
- 34 12-VOLT BATTERY SYSTEM
- 35 STANDARD 12-VOLT BATTERIES
- 35 SMART CHARGE WIZARD
- 36 INVERTER/CHARGER
- 38 SOLAR PACKAGE
- 39 AGM BATTERIES
- 39 LITHIUM BATTERIES OVERVIEW
- 40 130 AH LITHIUM BATTERIES
- 41 130 AH LITHIUM BATTERIES RESTART
- 41 320 AH LITHIUM BATTERIES
- 42 LITHIUM BATTERY STORAGE PROCEDURE
- 42 CIRCUIT BREAKERS
- 42 120-VOLT PANELS
- 44 12-VOLT FUSES & PANEL
- 46 OUTLETS AND CHARGING STATIONS
- 46 LIGHTING & SWITCHES

PLUMBING

- 48 OVERVIEW
- 48 CURBSIDE ACCESS PANELS
- 48 VALVE CONFIGURATIONS
- 49 PLUMBING SYSTEM COMPONENTS
- 49 WATER PUMP & ACCUMULATOR
- 50 TANK MONITORING
- 50 INLETS
- 53 SUBURBAN WATER HEATER
- 54 TRUMA AQUAGO WATER HEATER
- 54 FAUCETS AND SHOWER
- 55 TOILET
- 55 BACK-FLOW PREVENTER
- 55 DUMPING WASTE
- 58 WATER SYSTEM TROUBLESHOOTING
- 58 WINTERIZATION
- 62 DE-WINTERIZATION
- 63 SANITIZATION
- 64 DECALCIFICATION OF PLUMBING SYS.
- 66 PLUMBING DIAGRAM

PROPANE

- 67 OVERVIEW
- 67 PURGING THE SYSTEM
- 67 PROPANE TANK HOUSING
- 68 USING THE REGULATOR
- 68 USING THE QUICK CONNECTS OPTION
- 68 REPLACING OR REMOVING THE TANKS

EXTERIOR

- 69 ENTRY STEPS
- 69 ENTRY DOOR
- 69 EXTERIOR STORAGE
- 70 AWNING
- 71 STORAGE BASKET
- 72 CURBSIDE FOLDABLE TABLE
- 72 REAR BUMPER RECEIVER

INTERIOR

- 73 MAXXAIR CABIN FAN
- 73 MAXXAIR BATH FAN
- 73 HEATING AND COOLING
- 73 TRUMA COMPONENTS & CP PLUS CONTROL PANEL
- 73 DOMETIC THERMOSTAT
- 73 GALLEY
- 74 COUNTERTOPS
- 74 COOKTOP
- 74 REFRIGERATOR
- 75 MICROWAVE
- 75 SHOWER TRACK PACKAGE
- 75 BATH VANITY
- 75 BATH LIGHT & STORAGE
- 75 ENTERTAINMENT SYSTEM
- 75 FURRION STEREO
- 76 TELEVISION
- 77 INTERIOR STORAGE
- 78 SEATING AND SLEEPING
- 78 DINETTE
- 79 FLOOR PLAN DIAGRAMS

MAINTENANCE

- 81 OVERVIEW
- 81 FIBERGLASS
- 82 FRAMES
- 82 AXLES & SUSPENSION
- 82 SEALS AND ADHESIVES
- 82 DRAINAGE SYSTEM
- 83 WINDOWS AND DOORS
- 83 UPHOLSTERY
- 83 ELECTRICAL
- 84 PROPANE
- 84 CABINETS, COUNTERTOPS, & APPLIANCES
- 85 ROOF VENTS
- 85 LIGHTING
- 85 CONDENSATION
- 86 STORING YOUR OLIVER
- 87 TIRES
- 89 CHANGING A TIRE
- 90 TIRE SAFETY INFORMATION
- 103 MAINTENANCE SCHEDULE



INTRODUCTION

OVERVIEW

This manual has been prepared by Oliver Travel Trailers in conjunction with the component manufacturers to provide information and instructions covering the operation and maintenance of your travel trailer.

Read all component manuals and validate warranties by mailing the individual warranty cards as some component manufacturers require. Always keep this owner's manual with your travel trailer for easy reference, making sure to comply with all notes and warnings. A careful owner is the best insurance against an accident.

This owner's manual is as current as possible at the time your travel trailer was produced. However, since our products are constantly being upgraded and improved, some standard items and/or options may vary. If this occurs, follow the separate component manufacturer's instructions provided in their literature.

We reserve the right to change the construction or material of any part(s) at any time without incurring the obligation to install such changes on delivered units.

Oliver Travel Trailers, Inc. is furnishing you with this guideline to assist you through your travels. If further assistance is needed, please contact our technical support department at **(888) 526-3978** during our normal business hours of Mon-Friday, 8 AM - 5 PM CST.

GETTING ACQUAINTED

Throughout the manufacturing process, your travel trailer has been inspected by trained personnel and then again prior to delivery. Along with the new smell comes the knowledge that you will be the first to set up camp and extensively use all the standard and optional systems.

When traveling far from home you definitely do not want any unexpected surprises or frustrating questions. Spend a weekend camping at home. Make a point to use and become familiar with all the systems both inside and out. How long does the stored water last? How much battery power does it take to keep your beverages ice cold? Find out what camping items are really needed, or not needed at all.

Take note of any concerns or ideas you might have that would make things better. Call us with your questions or suggestions, we would love to hear from you.

Best Regards,
The Oliver Family

COMPONENT OPERATING INSTRUCTIONS

Some of the equipment shown in this manual may be optional equipment not included or available with your travel trailer. To view specific information about the standard and optional components listed in this manual and optional components, visit <https://olivertraveltrailers.com/oliver-university/>.


SEE OUR VIDEOS ON YOUTUBE

We have created a library of videos to help you get familiar with your travel trailer and the components. Please see our Delivery Series videos on YouTube at: <https://tinyurl.com/3v5mcr99>

SCAN THE QR CODES FOR QUICK ACCESS!



OLIVER
UNIVERSITY

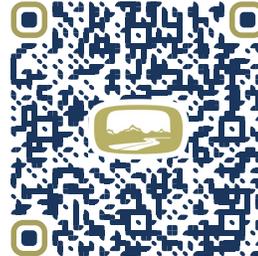

YOUTUBE
VIDEOS

CAUTION AND INFORMATION SYMBOLS

Throughout this manual, we have placed special emphasis on information that requires your absolute attention. These symbols indicate information that the user must be aware of since failure to heed these cautions or warnings may result in product damage, property damage, serious injury, or death.

⚠ WARNING	<ul style="list-style-type: none"> • SPECIAL ATTENTION SHOULD BE GIVEN TO ALL INFORMATION PRECEDED BY THESE SYMBOLS. FAILURE TO DO SO MAY RESULT IN PRODUCT DAMAGE, SERIOUS INJURY, OR DEATH. • READ THE ENTIRE MANUAL AND HEED ALL CAUTION AND WARNING STATEMENTS PRIOR TO OPERATION OF YOUR OLIVER TRAVEL TRAILER.
⚠ CAUTION	
⚠ DANGER	
NOTICE	



INTRODUCTION

WEIGHT RATING DEFINITIONS

GVWR (Gross Vehicle Weight Rating) - The maximum permissible weight of this trailer when fully loaded, including all weight at the trailer's axle, plus tongue.

GAWR (Gross Axle Weight Rating) - The maximum allowable weight that an axle system is designed to carry.

UVW (Unloaded Vehicle Weight) - The weight of the trailer as manufactured at the factory, includes all the weight of the trailer axle and the tongue.

CCC (Cargo Carrying Capacity) - Equal to GVWR minus each of the following; UVW, full potable water weight and full LP Gas weight.

LABELS & VIN INFORMATION

Labels throughout the trailer will indicate warnings, service instructions and component identification. Be sure to read all warnings and instructions before operating your recreational vehicle.

The Oliver Travel Trailer VIN (Vehicle Identification Number) is located on the driver's side, towards the lower front of the trailer in the area of the reflector.

FEDERAL CERTIFICATION TAG

The Federal Certification Tag on travel trailers and fifth wheels is located on the Road Side near the front of the unit and contains the GVWR, GAWR (front and rear) and tire pressure limits.

INCLUDED ITEMS

You will receive the following items at delivery:

- **Owner's Manual**
- **USB Flash Drive with Component Manuals**
- **Component Remotes**
- **Water Hose**
- **Sewage Drain Kit**
- **30-amp Shore Power Cord**
- **Lug Wrench**
- **Manual Jack Wrench**
- **Water Inlet Pressure Regulator**

TRAVEL TRAILER SPECIFICATIONS

LEGACY ELITE II

GVWR	7,000 LBS
DRY WEIGHT (APPROX.)	4,900 LBS
TONGUE WEIGHT (APPROX.)	490 LBS
OUTSIDE LENGTH	23' 6"
OUTSIDE HEIGHT	8' 6"
OUTSIDE HEIGHT (TOP OF A/C UNIT)	9' 7"
OUTSIDE WIDTH	7'
INSIDE HEIGHT	6' 6"
INSIDE WIDTH	6' 7"
FRESH WATER TANK CAPACITY	32 GAL DESIGN CAPACITY 30 GAL USABLE
GREY WATER TANK CAPACITY	32 GAL DESIGN CAPACITY 30 GAL USABLE
BLACK WATER TANK CAPACITY	15 GAL
SEATS	7
SLEEPS	3



LIMITED WARRANTIES

WHAT IS COVERED

Oliver Travel Trailers Inc. (Oliver) provides the following limited warranties with its recreational vehicle ("RV") which sets forth what Oliver will cover and what Oliver will do if a defect exists. Neither limited warranty is a guarantee about the RV for any period of time. Please read them closely prior to your purchase of the RV.

Oliver Travel Trailers are manufactured for recreational purposes only and are not intended for commercial, residential, or rental purposes. Use for these purposes will void your warranty. Oliver Travel Trailers are built in accordance with manufacturer's specifications and any modifications not performed by Oliver will potentially void your warranty.

These warranties only extend to the original retail purchaser, are not transferable, and begin on the date of original retail delivery.

WARRANTIES

Oliver provides the following limited warranties with its RV, which establishes what Oliver will cover and what Oliver will do if a defect exists:

- **One-year limited warranty** on all components against defects in material or workmanship.
- **Two-year limited warranty** on all components manufactured and installed by Oliver against defects in material or workmanship.
- **Five-year limited warranty** on the fiberglass body and aluminum chassis undercarriage against defects in material or workmanship.

LIMITATIONS OF LIABILITY

Oliver's liability with respect to products sold hereunder will be limited as provided in the Warranties section and concerning other performance will be limited to the contract price of the portion of the goods on which such liability is **OLIVER WILL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES WHATSOEVER, EXPRESSED OR IMPLIED, WHETHER BASED ON CONTRACT, TORT, OR OTHER THEORIES OF LAW, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, WITH RESPECT TO GOODS OR SERVICES FURNISHED BY IT OR WITH RESPECT TO ANY UNDERTAKINGS, ACTS, OR OMISSIONS RELATED THERETO.**

Without limiting the generality of the foregoing, Oliver expressly disclaims any liability for property or personal injury damages, penalties, special or punitive damages, damages for lost profits, loss of use of equipment, cost of capital, cost of substitute products, facilities, or services, or any other type of economic loss or claim. Oliver will not be liable for any damages as a result of any delay or failure to timely deliver for any reason.

OLIVER SPECIFICALLY DISCLAIMS ALL CONSEQUENTIAL, INCIDENTAL, AND CONTINGENT DAMAGES WHATSOEVER.

WHAT IS NOT COVERED BY THIS LIMITED WARRANTY

This Limited Warranty does not provide coverage for any of the following:

- Oliver RV's are manufactured for recreational purposes only and are not intended for commercial, residential, or rental purposes. Use for these purposes will void the warranty.
- Oliver warranty is only extended to the original Buyer, is not transferable, and begins on the date of original retail delivery.
- Normal deterioration due to wear or exposure, including but not limited to rust, corrosion, oxidation, and cosmetic blemishes.
- Normal maintenance and service items. Examples include but are not limited to bulbs, fuses, lubricants, tires, etc.
- After-market equipment or accessories installed after completion of manufacture by Oliver, or any defects or damage caused by such items.
- Defects or damage caused by, in whole or in part, or in any way related to: Accidents, misuse (including off-road use), or negligence.
- Failure to comply with instructions and maintenance schedules outlined in owners and component manuals.
- Alteration or modification of the RV not performed and approved by Oliver.
- A force majeure such as acts of God; war; civil commotion; fire, flood, inclement weather; government regulations; pandemics or epidemics; or other causes reasonably beyond Oliver's control.
- Chemicals applied to the RV.
- Condensation and the results of condensation.
- Improper electric power supply.
- Acts or omissions of any person or entity other than Oliver.

INDEMNIFICATION BY BUYER

Buyer will indemnify and hold Oliver harmless from and against any and all losses, damages, legal fees, or expenses of Buyer in whatever form or nature arising out of or in connection with the products sold to Buyer if Oliver is proven to have no cause in the occurrence. This provision does not limit in any way any term, feature, or benefit specified in the Warranties.

CHANGES AND IMPROVEMENTS

Oliver may furnish suitable substitutes for materials or goods unobtainable because of priorities or regulations established by governmental authority or the unavailability of material or goods from suppliers. Oliver has no obligation to furnish the Buyer with changes in the design or construction of goods previously shipped despite the incorporation of such changes in current shipments. If the particular model of goods ordered by the Buyer has been replaced by a new model, Oliver may at its option ship the new model of such goods.

OWNER OBLIGATIONS

The owner is responsible for all maintenance and upkeep. If a problem occurs which the owner believes, is covered by this warranty, the owner shall contact Oliver Travel Trailers, giving them sufficient information to resolve the matter. The owner is responsible for transport of camper to and from service center for repairs.

The owner is also responsible for inspection and maintenance of all seals and joints around all attachment doors and windows, air units, satellite or television cable connections, as well as seams for plumbing fixtures, storage or discharge.

⚠ WARNING

THE OWNER'S FAILURE TO PERFORM SUCH INSPECTIONS AND MAINTENANCE WHICH RESULTS IN WATER DAMAGE OR ANY OTHER DAMAGE SHALL VOID THE WARRANTY.

It is the owner's responsibility to notify Oliver Travel Trailers of a defect in a timely manner. Failure to notify promptly will void all or portions of the limited warranty.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Dealers or any other persons are not authorized to make modifications to this written, any additional statements concerning this warranty, whether oral or written, are not the responsibility of the manufacturer and should not be relied upon.

HOW TO OBTAIN SERVICE

To obtain service on your travel trailer under this Limited Warranty, contact our Technical Support Department at **1-888-526-3978** or visit our service portal to submit a Service Ticket at:

<https://support.olivertraveltrailers.com/portal/en/newticket>



WARRANTY AUTHORIZATION

For the Buyer to claim any warranty, the Buyer must contact Oliver's technical support department to obtain authorization for repairs to be made under warranty. Oliver may recommend a service provider or may request the travel trailer to be returned to Oliver for repair. **Warranty repairs made without authorization may be subject to denial or partial payments.** Oliver does not control scheduling at third-party service centers and repairs at the Oliver facility may not be immediately available. Delays may be encountered in the scheduling and completion of repairs. All costs associated with transporting the RV for warranty service are the responsibility of the owner.

Any parts that require replacement that are covered under the terms of the warranty should be retained and returned to Oliver Travel Trailers Technical support department, along with your invoice. This way they are able to check what has occurred and also make sure you are properly reimbursed for your expenditures.

Modifications made to your travel trailer without proper authorization can result in reduction or loss of warranty coverage. Please make sure to contact the Oliver Travel Trailer Technical support department before making such changes.

NOTICE

ANY WARRANTY REPAIRS TO INSTALLED COMPONENTS MUST BE MADE WITHIN THE DESIGNATED TIME FRAME PER THE MANUFACTURERS' WARRANTY. NOTIFYING OLIVER OF A WARRANTY ISSUE BUT NOT RESOLVING IT THROUGH THE VENDOR DOES NOT MEET WARRANTY COVERAGE REQUIREMENTS AND MAY RESULT IN THE VENDOR NOT HONORING THE WARRANTY.

WARRANTY CONTACT INFORMATION

Refer to the component contact information for the majority of standard third-party component manufacturers used by Oliver Travel Trailers.



SAFETY

LP SYSTEM SAFETY

SAFETY REGULATIONS

These guidelines are for the safe usage of the LP gas systems and appliances.

The following warnings are posted throughout your recreational vehicle to provide information on the LP gas system. They have been installed not only because of requirements to do so but also as a constant reminder to our customers to exercise proper caution when using or being around LP gas appliances and equipment. We are listing them here so that you may study them and make sure that you and your family understand and follow them.

⚠ WARNING	DO NOT PLACE PROPANE CYLINDERS INSIDE THE VEHICLE. PROPANE CYLINDERS ARE EQUIPPED WITH SAFETY DEVICES THAT RELIEVE EXCESSIVE PRESSURE BY DISCHARGING PROPANE INTO THE ATMOSPHERE. PROPANE GAS IS HIGHLY FLAMMABLE. CAN LEAD TO A FIRE OR EXPLOSION AND RESULT IN DEATH OR SERIOUS INJURY.
------------------	--

A warning label is located near the LP gas container. This label reads:

⚠ DANGER	ALL PILOT LIGHTS, APPLIANCES, AND THEIR IGNITERS (SEE OPERATING INSTRUCTIONS) SHALL BE TURNED OFF BEFORE REFUELING OF MOTOR FUEL TANKS AND/OR PROPANE CONTAINERS. CAN CAUSE IGNITION OF FLAMMABLE VAPORS, WHICH CAN LEAD TO A FIRE OR EXPLOSION AND RESULT IN DEATH OR SERIOUS INJURY.
-----------------	---

⚠ WARNING	DO NOT FILL PROPANE CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY. A PROPERLY FILLED CONTAINER CONTAINS APPROXIMATELY 80 PERCENT OF ITS VOLUME AS LIQUID PROPANE. OVERFILLING PROPANE CONTAINER(S) CAN RESULT IN UNCONTROLLED PROPANE FLOW, WHICH COULD LEAD TO A FIRE OR EXPLOSION AND RESULT IN DEATH OR SERIOUS INJURY.
------------------	--

⚠ WARNING

THE PROPANE PIPING SYSTEM IS DESIGNED FOR USE WITH PROPANE ONLY. DO NOT CONNECT NATURAL GAS TO THIS SYSTEM. SECURELY CAP INLET WHEN NOT CONNECTED FOR USE. AFTER TURNING ON PROPANE, EXCEPT AFTER NORMAL CYLINDER REPLACEMENT, TEST PROPANE PIPING AND CONNECTIONS TO APPLIANCES FOR LEAKAGE WITH SOAPY WATER OR BUBBLE SOLUTION. DO NOT USE PRODUCTS THAT CONTAIN AMMONIA OR CHLORINE TO TEST FOR LEAKS. CAN LEAD TO A FIRE OR EXPLOSION, WHICH COULD RESULT IN DEATH OR SERIOUS INJURY.

⚠ WARNING

THE PROPANE REGULATOR MUST ALWAYS BE INSTALLED WITH THE REGULATOR VENT FACING DOWNWARD. THE PROPANE REGULATOR COVER MUST BE KEPT IN PLACE TO MINIMIZE VENT BLOCKAGE THAT COULD RESULT IN EXCESSIVE PROPANE PRESSURE CAUSING FIRE OR EXPLOSION.

⚠ WARNING

DO **NOT** STORE ANY ITEMS THAT EMIT A SPARK OR A FLAME IN THE COMPARTMENT! FAILURE TO ADHERE TO THIS WARNING MAY CAUSE AN EXPLOSION RESULTING IN PERSONAL INJURY OR DEATH.

ALL ITEMS MUST BE COMPLETELY SECURED!

The following labels has been placed in the trailer near the range area:

BEFORE COOKING:

- Turn on the main cabin exhaust fan. See the MaxxAir Fan operating instructions in the manufacturer's manual.

This warning label has been located in the cooking area to remind you to provide an adequate supply of fresh air for combustion. Unlike homes, the amount of oxygen supply in a travel trailer is limited and proper ventilation when using the cooking appliances will avoid dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating as the danger of asphyxiation is greater when the appliance is used for long periods of time. Failure to comply could result in serious injury or death.

⚠ DANGER

DO NOT USE GAS COOKING APPLIANCES FOR COMFORT HEATING. CAN LEAD TO CARBON MONOXIDE POISONING, WHICH CAN LEAD TO DEATH OR SERIOUS INJURY.

⚠ WARNING

GAS COOKING APPLIANCES NEED FRESH AIR FOR SAFE OPERATION. BEFORE OPERATING:

- **OPEN VENTS OR WINDOWS SLIGHTLY OR TURN ON EXHAUST FAN PRIOR TO USING COOKING APPLIANCE.**
- **GAS FLAMES CONSUME OXYGEN, WHICH SHOULD BE REPLACED TO ENSURE PROPER COMBUSTION.**
- **IMPROPER USE CAN RESULT IN DEATH OR SERIOUS INJURY.**

⚠ DANGER**IF YOU SMELL PROPANE**

- 1. EXTINGUISH ANY OPEN FLAMES, PILOT LIGHTS AND ALL SMOKING MATERIALS.**
- 2. SHUT OFF THE PROPANE SUPPLY AT THE CONTAINER VALVE(S) OR PROPANE SUPPLY CONNECTION.**
- 3. DO NOT TOUCH ELECTRICAL SWITCHES.**
- 4. OPEN DOORS OR OTHER VENTILATING OPENINGS.**
- 5. LEAVE THE AREA UNTIL THE ODOR CLEARS.**
- 6. HAVE THE PROPANE SYSTEM CHECKED AND LEAKAGE SOURCE CORRECTED BEFORE USING AGAIN.**

IGNITION OF FLAMMABLE VAPORS COULD LEAD TO A FIRE OR EXPLOSION AND RESULT IN DEATH OR SERIOUS INJURY.

ALARMS

Your trailer is equipped with two safety alarms; a LP/CO Alarm and a Smoke/CO Alarm. You will see the following warning below the Smoke/Co Alarm.

⚠ WARNING

TEST SMOKE ALARM OPERATION AFTER VEHICLE HAS BEEN IN STORAGE, BEFORE EACH TRIP, AND AT LEAST ONCE PER WEEK DURING USE. FAILURE TO DO SO CAN RESULT IN DEATH OR SERIOUS INJURY.

For operating instructions and troubleshooting, view the manufacturer's manual.

FIRE EXTINGUISHER

In the case of a fire, you will find a Fire Extinguisher mounted on the exterior of the closet door.

For operating instructions and troubleshooting, view the manufacturer's manual.

FIRE SAFETY

⚠ WARNING

DO NOT USE PORTABLE FUEL BURNING EQUIPMENT, INCLUDING WOOD AND CHARCOAL GRILLS AND STOVES, INSIDE THE RECREATIONAL VEHICLE BECAUSE THE USE OF SUCH EQUIPMENT INSIDE THE RECREATIONAL VEHICLE CAN CAUSE FIRES OR ASPHYXIATION. FAILURE TO DO SO CAN RESULT IN DEATH OR SERIOUS INJURY.

Fire safety is an important part of owning a recreational vehicle. The following basic rules of fire prevention can reduce the possibility of a fire. Make sure that everyone in your recreational vehicle is familiar with the location of exits, including the emergency exit window, which is located at the rear of your travel trailer.

Follow safety rules and prevent hazardous situations:

- Use smoking materials properly. Never smoke in bed.
- Keep matches or lighters away from children;
- Keep electrical appliances in good condition and don't overload electrical circuits;
- Never leave anything cooking on the stove unattended;
- Keep portable heaters and open flames, like candles, away from flammable materials;
- Never store flammable liquids in the recreational vehicle.
- Keep cooking surfaces clean.
- Never allow children to play with the LP gas or electrical equipment.
- Never use an open flame as a flashlight.
- Always repair faulty or damaged wiring and electrical components.
- Locate and repair LP leaks immediately.
- Do not allow rubbish to accumulate.
- Never clean with a flammable liquid.
- Spray fabrics annually with a flame retardant liquid.

If a fire does start, make sure to follow these basic rules of safety.

1. Have everyone evacuate the recreational vehicle as quickly as possible.
2. After everyone is clear, check the fire to see if you can attempt to put it out. If it is large, (cannot get within 10 feet) or the fire is fuel-fed, get clear of the recreational vehicle and have the fire department handle the emergency.
3. Make sure you know how to use the fire extinguisher. Read the label on the fire extinguisher and study the information in this manual to become familiar with the safe operation and maintenance of the extinguisher.

4. Feel doors before opening them to see if they are hot. If a door is cool, open it slowly and check for fire and heat before you proceed. **DO NOT** open a hot door – use an alternate escape route. Stay close to the floor if air is smoky. Take short shallow breaths through a wet cloth if possible.

DO NOT return to your trailer, until fire officials say that it is safe.

5. Once outside, go to your selected meeting place and make sure everyone is there. Call the Fire Department from outside of the travel trailer at a safe location.

EMERGENCY EGRESS REAR WINDOW

WARNING

DO NOT UTILIZE THIS RV UNLESS FULLY SET UP AND EMERGENCY EXITS ARE ACCESSIBLE. FAILURE TO DO SO CAN RESULT IN DEATH OR SERIOUS INJURY.

In the event of a fire or other emergency situation and you cannot exit the trailer from the door, you can escape through the Emergency Egress Rear Window.

TO EXIT FROM THE EGRESS REAR WINDOW:

1. Push the TV up to secure it up and under the cabinet to gain access to the rear egress window.
2. Raise the night shade and lower the day shade, exposing the window without a shade in the way. (You can also pull the frame off the window if necessary)
3. At the bottom left of the window screen, pull the red tab to remove the screen from the window.
4. Pull the red handles on the right and left sides of the window to unlock.
5. Push the window open and exit the trailer.

REPORTING SAFETY DEFECTS

If you believe that your vehicle has a defect, which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Oliver Travel Trailers.

If NHTSA receives similar complaints, it may open an investigation and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer or Oliver Travel Trailers.

To contact NHTSA, you may either call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153), go to <http://www.safercar.gov>; or write to:

**Administrator NHTSA
1200 New Jersey Avenue S.E.
Washington, DC 20590**



TOWING & SETUP

This section covers coupling, towing, and other important steps to setup your trailer for camping.

TOWING VEHICLE REQUIREMENTS

⚠ WARNING

- **AN IMPROPERLY COUPLED TRAILER CAN RESULT IN DEATH OR SERIOUS INJURY. USE OF A TOW VEHICLE WITH A TOWING CAPACITY LESS THAN THE LOAD RATING OF THE TRAILER CAN RESULT IN LOSS OF CONTROL, AND MAY LEAD TO DEATH OR SERIOUS INJURY.**
- **DO NOT TRANSPORT PEOPLE OR PETS INSIDE THE TRAILERS. THE TRANSPORT OF PEOPLE PUTS THEIR LIVES AT RISK AND MAY BE ILLEGAL.**
- **OVERLOADED TRAILERS CAN RESULT IN A LOSS OF CONTROL OF THE VEHICLE; THIS COULD LEAD TO DEATH OR SERIOUS INJURY.**
- **DO NOT EXCEED THE TRAILER'S GROSS VEHICLE WEIGHT (GVWR) OR AN AXLE'S GROSS AXLE WEIGHT RATING (GAWR).**
- **ALWAYS TEST DRIVE YOUR HITCHED TOW VEHICLE AFTER MAKING CHANGES TO TONGUE WEIGHT, AND DO NOT ATTEMPT TO ADJUST HITCH WITH ANY WEIGHT ON TONGUE!!!**
- **THE PROPER SELECTION AND CONDITION OF THE COUPLER AND HITCH IS ESSENTIAL TO THE SAFE TOWING OF YOUR TRAILER. A LOSS OF COUPLING MAY RESULT IN DEATH OR SERIOUS INJURY.**

Be sure your hitch and tow vehicle are rated for the Gross Vehicle Weight Rating (GVWR) of your trailer. Be sure the hitch load rating is equal to or greater than the load rating of your coupler. Make sure the hitch size is the same as the coupler size. Replace worn, corroded, or cracked hitch components before coupling the trailer to the tow vehicle. Make sure all hitch components are tight before coupling the trailer to the tow vehicle. Tongue weight can play an important part in handling and control.

DRIVING TIPS

GENERAL

Get to know how your tow vehicle handles with the added weight of your RV. The brakes and steering operation will be different. Before taking a trip practice making right and left turns, braking, backing up, and accelerating.

CLEARANCE

Watch for overhanging branches, awnings, or similar obstructions that can damage your vehicle's roof or equipment/accessories mounted on top of it.

TURNING

Generally, the wheels of your travel trailer are set wider than those of your tow vehicle. To avoid hitting curves or other vehicles, pull several feet farther ahead before turning to allow for this extra width and the length of your travel trailer. Left turns require a wider than normal swing into the new lane of traffic to keep the trailer from encroaching into the opposing lane. Use turn signals early to communicate to traffic behind and slow down well in advance of any turn.

PASSING

Avoid sudden maneuvers when passing a slower-moving vehicle. Remember that additional time and distance are required to pass safely. Wait until the road is clear of oncoming traffic. Check the outside rear-view mirrors and signal lane change before passing. When you have safe clearance, signal lane change and return to your original lane.

BRAKING

Allow a safe distance to stop; follow no closer than one combined tow vehicle – RV length for each ten mph. Pump the brake pedal lightly to stop on wet or icy roads. If you start to slide, turn the steering wheel in the direction of the slide. **DO NOT stomp the brake pedal!!** A panic stop may increase the slide and could cause your unit to jackknife.

BACKING

When backing your RV, place your right or left hand at the bottom of the steering wheel. To move your trailer to the left, move your hand to the left; to move the trailer to the right, move your hand to the right. If the trailer starts to jackknife, stop, pull forward, and start again.

DOWNGRADES

Reduce speed and shift the transmission to a lower gear to assist in braking on long or steep downgrades. Avoid situations that require excessive and prolonged use of the brakes. Apply and release brakes at short intervals to give them time to cool.

UPGRADES

Reduce speed to 45 M.P.H. or less when climbing a steep upgrade. Shift the transmission to a lower gear to avoid engine overheating.

LOADING AND WEIGHT DISTRIBUTION

PROPER WEIGHT DISTRIBUTION

Your recreational vehicle has been designed to carry loads within specified limits. Exceeding these limits will greatly affect the handling of the recreational vehicle. These limits are defined in two ways.


WEIGHT DISTRIBUTION WHEN LOADING

Towing an Oliver Travel Trailer comes with new challenges and great care and responsibility should be taken when doing so. After all, an accident while pulling a trailer is far more severe in most cases than an accident in a car. We have designed a trailer for you, that when towed properly, will be safe and dependable for years to come. It is now up to you to continue safe practices while loading and towing your trailer. Distributing the cargo properly is critical to the safety and handling of your Oliver.

The most critical safety issue when towing a trailer is knowing all of the different weights involved and how to properly load your Oliver. The first thing to determine is how much is being towed and determining whether it is within the capacity limit. It is also critical to determine where to store certain items in the Oliver based on the weight of that item.

Make sure your load is balanced. Do not load too much on one side. A balanced load is much easier to tow or drive. Front to back balance is also important. Step back and look at your trailer, making sure that there is not too much weight on the hitch, or the rear of the trailer. Secure all items, as loose items can cause damage and become a safety issue.

The cargo carrying capacity is listed on the Tire and Loading Information sticker near the front on the streetside of the trailer.

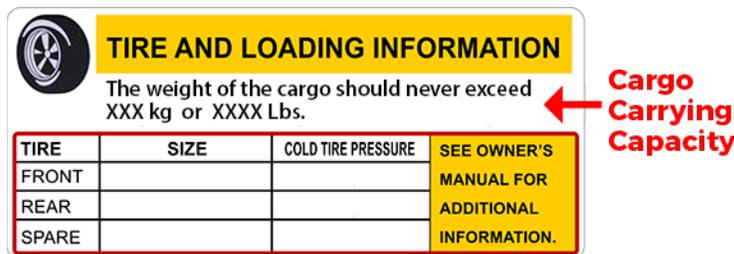

TIRE AND LOADING INFORMATION

The weight of the cargo should never exceed
XXX kg or XXXX Lbs. ← **Cargo Carrying Capacity**

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S
FRONT			MANUAL FOR
REAR			ADDITIONAL
SPARE			INFORMATION.

DO NOT assume that you can fill all tanks and all storage areas and be within the GVWR. Weights of stored items will vary greatly and will affect the total weight of your Oliver Travel Trailer. Always weigh the Oliver at a certified weigh station equipped with platform scales. Check the telephone directory, online, or with local authorities for the location of weigh stations in your area. If you find that you have exceeded the GVWR of the Oliver, you will have to remove items until you are within specified limits.

Oliver Travel Trailers weighs the trailer when finished to arrive at the vehicle's weight. That number is subtracted from the GVWR of the trailer and listed under **THE WEIGHT OF CARGO SHOULD NEVER EXCEED** on the tag, the total weight of all cargo, including aftermarket modifications or additions (bike rack hitch/storage basket), water, and propane should never exceed the number listed.

When loading the trailer, keep the following in mind:

- Gross Vehicle Weight Rating (GVWR)
- Tire Weight Rating

⚠ WARNING	<p>NEVER EXCEED THESE RATINGS. YOUR SAFETY DEPENDS ON NOT OVERLOADING THE TRAILER AND TIRES.</p> <ul style="list-style-type: none"> • The GVWR for an Oliver Legacy Elite II is 7000 lbs.
------------------	--

The total weight of your trailer, fully loaded, should never exceed the GVWR. To determine just how much cargo you are safely allowed to load onto your trailer, simply subtract the dry weight of your trailer from the factory from the GVWR.

EXAMPLE: (GVWR) 7000 lbs. – (Dry Weight) 4900 lbs.= Cargo 2100 lbs.

WEIGHING YOUR OLIVER

Proper weight and load distribution is essential to safe towing. Common recommendations place approximately 9% to 15% of the loaded weight on a travel trailer hitch. Therefore, if you are towing a 6000 lbs. trailer, the tongue weight should be measured at approximately 600 lbs. Oliver Travel Trailers confirms that the tongue weight is 9-15% of the dry weight before the trailer leaves the factory.

Too much or too little weight on the hitch leads to dangerous driving conditions such as sway and reduced tow vehicle control. **DO NOT** exceed the GVWR OR GAWR posted load weights.

Easy Weighing of Your Oliver, Tow Vehicle, Tongue Weight, and Tongue Weight Ratio:

1. Drive your tow vehicle onto the scale but do not drive your trailer axle onto the scale. Record the weight A: (Tow Vehicle Plus Tongue Weight) 7,600 lbs. **See Step 1 in the illustration on the next page.**
2. Pull forward so that both the tow vehicle and the trailer are on the scale. Record the weight B: (Gross Vehicle Weight of Tow Vehicle plus Trailer) 13,000 lbs. **See Step 2 in the illustration on the next page.**
3. Pull tow vehicle off of the scale, disconnect the trailer from the tow vehicle while leaving trailer on the scale. Record the weight: C (Gross Vehicle Weight of Trailer) 6,000 lbs. **See Step 3 in the illustration on the next page.**

Calculate Weight of Tow Vehicle:

B minus C = D or 13,000-6,000 = 7,000 lbs.

 
Calculate Tongue Weight:


A minus D or 7,600 – 7,000 = 600 lbs. tongue weight


Calculate Tongue Weight Ratio:

Tongue Weight divided by C or 600/6000 =10%

TOWING & SETUP

 Step 1  **Weight A: (Tow Vehicle plus Tongue Weight) 7,600 lbs.**

 Step 2  **Weight B: (Gross Vehicle Weight of Tow Vehicle plus Trailer) 13,000 lbs.**

Step 3  **Weight C: (Gross Vehicle Weight of Trailer) 6,000 lbs.**

Now that you have these weights recorded, check to see if you can safely pull your Oliver with your tow vehicle. The GVW (Gross Vehicle Weight) of the trailer must not exceed 7,000 lbs. Your tongue weight should be between 9-15% of that weight. If these weights are within regulation, then feel free to enjoy the open road!

To locate a public CAT scale in your area, follow this link: <https://catscale.com/>

To check out a ball hitch that measures your tongue weight for you, follow this link: <https://weigh-safe.com/>

TRAVEL SUGGESTIONS

It is a good idea to empty the holding tanks before leaving on a trip, and as often as possible when traveling, to help keep weight within acceptable limits. A gallon of water weighs about eight pounds, and a full tank weighs about 260 pounds. Try to carry only as much water as you will use when traveling.

All items stored inside and outside the Oliver should be secure, as well as all doors and drawers.

DO NOT add any rack or frame to the Oliver frame or chassis. The alteration may result in unstable handling, be a safety hazard, could damage the Oliver Trailer, and void your warranties. In any case, the Oliver warranty will be affected.

- Once you become familiar with loading your trailer, how to distribute the weight, and which items you carry, make a list and diagram you can use for future reference.
- Plan your loading and storage so that emergency items are easily accessed.
- Place heavier or breakable items on the travel trailer floor and lowest storage compartments for better load stability.
- Make sure these items are well packed and secured to prevent movement.
- Take extra care not to overload the front and rear ends of the trailer. Place any light items in the upper cabinets.
- Make sure to use packing material around breakable items such as plates and glasses in the cupboards if you will be towing over rough roads or terrain.
- It is a good idea to use non-skid materials under heavier items to help prevent shifting.
- Most new trailer owners tend to carry more supplies than they need.
- It is important to remember that each item added brings extra weight to tow and distribute.

COUPLING

For operating instructions and troubleshooting, view the manufacturer’s manual.

Your Oliver Travel Trailer is equipped with a Class III Bulldog Steel Coupler rated for the GVWR of your trailer.

The standard bulldog coupler requires a 2” ball on your tow vehicle. You may have upgraded the bulldog hitch to the 2-5/16” model and will require a 2-5/16” ball.

⚠ CAUTION	BE CAREFUL TO AVOID GETTING FINGERS OR SKIN PINCHED WHEN LOCKING AND UNLOCKING THE COUPLER.
------------------	--

SAFETY CHAINS

After you have the travel trailer coupler properly attached to the hitch ball, the safety chains must be attached. To do so:

1. Cross the safety chains under the tongue and hitch.
2. Attach the hooks to the attachment loops provided on the tow bar portion of the hitch or to the vehicle frame. Do not fasten to any part of the hitch unless the hitch has holes or loops specifically for that purpose.

NOTICE	IF D-LINKS ARE NEEDED TO CONNECT THE SAFETY CHAINS TO THE TOW VEHICLE, EACH D-LINK MUST BE RATED AT 7,000 LBS FOR ELITE II MODEL TRAILERS.
---------------	---

⚠ WARNING	IMPROPER RIGGING OF THE SAFETY CHAINS CAN RESULT IN LOSS OF CONTROL OF THE TRAILER AND TOW VEHICLE, LEADING TO DEATH OR SERIOUS INJURY. DO NOT ATTEMPT TO REPAIR A DAMAGED CABLE. IF THE SAFETY CHAIN HAS BEEN DAMAGED, IT MUST BE REPLACED.
------------------	---

BREAKAWAY SWITCH

This switch is designed to engage the trailer’s brakes; if the trailer were to become disconnected from the tow vehicle. Always be sure to connect the breakaway cable to the tow vehicle when hooking up!

INSPECTING & TESTING THE BREAKAWAY SWITCH

You should inspect the breakaway switch periodically to ensure proper function of the product/system. Essentially you should inspect the wires, cables, and switch box for wear or damage and do a pull test to ensure the pin still comes out and is not broken and the trailer brakes engage when the pin is pulled. If there is any damage or malfunction then replace the damaged components.



TOWING & SETUP

1. Visually inspect the electrical wires from the switch box to where they are connected into the battery system and the brake system. Make sure the wires are not broken or damaged. Make sure the black coating is not damaged and that the copper wire is not exposed anywhere along the wire or at the connection point. If the wiring is damaged or exposed then replace the switch box and wiring.
2. Visually inspect the coiled breakaway cable. Make sure the cable is not damaged or frayed anywhere along the cable. If damaged, replace the cable.
3. Last, test the function of the breakaway switch system. Before doing this, make sure the trailer electrical plug is not connected to the tow vehicle (or the breakaway system could damage the tow vehicle's trailer brake controller or other electrical systems). Then, pull the cable near the pin (be careful to prevent recoil of the cable and pin that could cause injury) to remove the pin from the electrical switch box. The pin should pull out with a reasonable amount of pull force. Inspect the plastic pin to verify it is not broken or damaged. If the pin is too hard (more than 40 lbs pull force) to remove or is loose and comes out too easily or is damaged then replace the pin and cable. Check that the trailer brakes engage once the pin is removed from the switch. One way to do this is to connect the trailer to the tow vehicle (but leave the trailer electrical plug disconnected from the tow vehicle) and try to gently pull forward with the pin removed from the Zip breakaway switch box. The brakes should engage and prevent the trailer from moving. If the brakes engage and lock the tires do not try to overpower the brakes by pulling excessively hard with the tow vehicle. Finally, with the tow vehicle back in park and the park brake engaged, insert the pin back into the breakaway switch box. Do not leave the pin out of the switch box for more than a couple minutes.

⚠ WARNING

- **DO NOT LEAVE THE PIN OUT OF THE BREAKAWAY SWITCH FOR AN EXTENDED PERIOD OF TIME. THIS WILL RESULT IN THE BRAKES BEING CONTINUALLY ENGAGED AND MAY RESULT IN DAMAGE TO THE BRAKES OR WIRING.**
- **BEFORE YOUR TRIP, ENSURE YOUR BATTERIES ARE FULLY CHARGED. YOUR TRAILER BREAKAWAY SWITCH UTILIZES THE TRAVEL TRAILER'S ON-BOARD BATTERIES TO ENGAGE THE TRAILER BRAKES IN THE EVENT OF AN ACCIDENTAL DECOUPLING FROM THE TOW-VEHICLE. THE BREAKAWAY SWITCH WILL NOT BE ABLE TO FUNCTION AS INTENDED WITHOUT AN ADEQUATE CHARGE ON THE BATTERIES.**

NOTE: The lack of heavy brake application could be due to the brakes being out of adjustment, low breakaway battery voltage, or a heavily loaded trailer.

⚠ WARNING

THE FOLLOWING INFORMATION IS FROM THE BREAKAWAY CABLE AND SWITCH MANUAL.

1. Loose or corroded connections may cause brake failure. Solder all wire connections.
2. The breakaway switch is connected to the travel trailer's battery system. Low or dead batteries may cause brake failure. Do not use the safety brake system as a parking brake. When parked, secure the trailer with wheel chocks.
3. Fatigue and wear may cause shorts or open circuits resulting in brake failure. Test safety brake system for proper operation before each trip.
4. Obstructions may restrict breakaway pin from being pulled in an emergency. Install switch and couple cable in a location that allows the pin to be freely pulled. Do not feed or loop the cable through safety chain(s).
5. Rigid switch attachment may restrict breakaway pin from being pulled in an emergency. Do not over tighten the installation bolt.
6. Safety chain or hitch ball failure may be the cause of trailer separation. Attach breakaway cable directly to the tow vehicle.

⚠ WARNING


DO NOT ATTACH THE BREAKAWAY CABLE TO SAFETY CHAINS, HITCH BALL, OR BALL MOUNT.

A frayed or damaged cable may result in brake failure. Inspect cable before each trip and replace as needed.

TOW VEHICLE WIRING

It also is necessary to install a proper electrical connection from the tow vehicle to your travel trailer. A car end pigtail has leads of adequate length to allow connection to your tow vehicle wiring system. Make sure that you use wiring of the correct gauge with sufficient slack between the travel trailer and tow vehicle to allow for turning without dragging on the ground. Have your tow vehicle dealer and/or hitch installer assist you with the installation.

The wiring color code for the connections of the trailer to the tow vehicle is as follows:

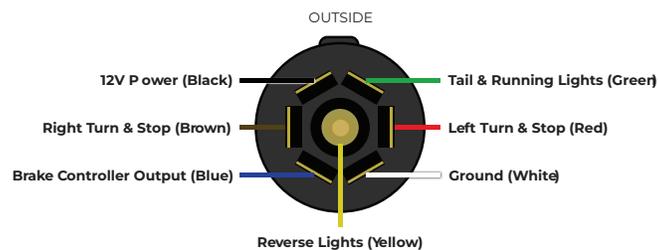

Although your travel trailer has been checked at the factory, we recommend that you visually check to see that all lights are functioning properly before using the trailer.

7-IN ELECTRICAL HOOK-UP

Plug the travel trailer electrical 7-pin connector into the socket located on the tow vehicle. Be sure there is enough slack to prevent disconnection during a full 90-degree turn.

7-PIN MAINTENANCE

Periodically check the 7-PIN to ensure it is clean and dry. Apply dielectric grease on the connectors as needed.



BRAKE CONTROLLER

ELECTRONIC BRAKE CONTROLLER ADJUSTMENT: Refer to manufacturer for more information.

NOTICE

A BRAKE CONTROLLER IS REQUIRED IN YOUR TOW VEHICLE WHICH WILL SYNCHRONIZE YOUR TRAILER BRAKES. IT MAY BE NECESSARY TO ADJUST THE BRAKE CONTROLLER. PLEASE FOLLOW THE DIRECTIONS PROVIDED BY THE MANUFACTURER OF YOUR BRAKE CONTROLLER.

ELECTRIC JACK STABILIZATION SYSTEM

For operating instructions and troubleshooting, view the manufacturer's manual.

Use the electric stabilization jacks along with wheel chocks and blocks/cribbing to stabilize your trailer.

⚠ WARNING

REVIEW ALL WARNINGS IN THE MANUFACTURER'S MANUAL BEFORE OPERATING THE ELECTRIC JACK STABILIZATION SYSTEM.

ELECTRIC TONGUE JACK

Located at the front of the frame of the trailer. The jack toggle switch is located below a 3-way float level and next to a night light (which illuminates the hitch work area). With the attached footplate, this jack can raise and lower the front of the trailer for hitching and unhitching on the ball. It also is used in conjunction with the two rear electric stabilizing jacks to stabilize the trailer side-to-side when unhitched.

REAR ELECTRIC JACKS

The left and right rear stabilizing jacks are operated from switches mounted inside the basement storage compartment on the street side of the travel trailer. To operate, hold the switch in the position you wish to move the jack; either up or down. When released, the switch will automatically return to its center off position.

MANUAL JACK OPERATION

It may be necessary to use the Emergency Hand Crank Wrench if loss of power occurs. This is located in the basement storage or closet at delivery. **See our video on YouTube.**

NOTICE

IF POWER HAS BEEN LOST, CHECK THE 30 AMP SLOW BLOW IN-LINE FUSE NEAR THE JACK IN THE YELLOW CAPSULE, WHICH IS USUALLY THE PROBLEM. BE SURE TO REPLACE IT WITH ONLY THE SAME SIZE AMP FUSE.

MANUAL OPERATION OF FRONT JACK

On the tongue jack, access to the jack post can be obtained by twisting the retaining ring and bulls-eye level counterclockwise. Insert the emergency jack wrench handle onto the jack post and crank the emergency hand crank wrench to raise or lower the jack as required.

NOTICE

YOU DO NOT HAVE TO REMOVE OR LOOSEN SCREWS ON LEVEL TO REMOVE THE LEVEL ASSEMBLY. IF THE POWER-HEAD IS REMOVED, CRANK CAN STILL BE USED TO RAISE AND LOWER JACK.

MANUAL OPERATION OF REAR JACKS

Rear jacks can be manually hand cranked from inside the trailer. Remove bedding and cushions on both sides of the trailer and remove the access panels. Locate the rear jack posts (jack covers not installed) and use the emergency jack wrench to raise or lower the rear jacks as required.

BRAKING AND BURNISHING BRAKES

The electric braking system will need to be burnished-in according to the manufacturer's instructions in order to obtain optimal performance. This will allow the brake shoes and magnets to slightly wear into the drum surfaces.

1. To burnish-in the brakes on your travel trailer, you will need to apply the brakes 20 to 30 times with approximately a 20 mile per hour decrease in speed between braking.
2. Allow ample time for the brakes to cool between applications.

For more information on Dexter axles and braking systems, contact Dexter or visit their website.

PARKING ON A SLOPE

Parking vehicles on an upgrade or downgrade is not recommended. If necessary, apply the brakes and have a passenger place wheel chocks behind the tires of your RV. When they are in place, slowly release brakes until chocks stop the unit. Apply the parking brake and place transmission in park position (place in first gear for manual shift vehicles).



TOWING CHECK LIST

1. Close and Secure all interior drawers and doors.
2. Close all windows and draw all blinds.
3. Secure the microwave plate.
4. Close the roof vents.
5. Close the backflow preventer valve.
6. Close and lock the storm door and the entry door.
7. Retract all stabilizer jacks.
8. Disconnect and store all power cords, cables, and hoses.
9. Shut off the propane tanks and secure the fiberglass tank enclosure properly.
10. Secure the awning tightly in its casing and turn off the master power switch. Store the remote.
11. Secure the coupling to the hitch ball and lock the hitch pin.
12. Secure the 7-PIN connector plug to the tow vehicle.
13. Raise the steps up and into the storage position.
14. Check and secure the safety chains and safety breakaway cable.
15. Check all the operating lights and brake lights.
16. Secure any items in the storage basket or any attachments in the accessory receiver.
17. Check the lug nuts for the correct torque (110 ft/lbs recommended)
18. Check the tires for the proper pressure

SET UP CHECK LIST

1. Pull or back into the campsite and ensure the trailer is level from side to side using leveling blocks. Chock tires and disconnect safety chains, 7-PIN cable, and breakaway switch.
2. Unlock the trailer coupler from the hitch ball by pushing the lever on the coupler forward.
3. Lower the front jack to raise the trailer off of the hitch ball.
4. Pull the tow vehicle forward so that you can level the trailer front to back using the front jack.
5. Lower rear jacks for stabilization only.
6. Pull out aluminum double step.
7. Make sure all appliances are in the off position.
8. Open propane tanks.
9. Plug in the trailer's 30 AMP shore power cord to the correct 30 AMP, 120-volt source. (In most cases there will be a 30 AMP breaker at the pedestal that must be flipped on after hooking up.)
10. If there is a city water source, connect a potable hose to the spigot and the other end to the City Water Inlet at the rear, street side of the trailer. Be sure to connect the pressure regulator. Turn the water on.
11. Open the backflow preventer before using any water source in the trailer.



ELECTRICAL

OVERVIEW

The 30-amp electrical power supply provided for the Oliver is a dual system, operating with 120-volt AC and/or 12-volt DC.

AC power is provided by either connecting the Oliver to an outside power source when parked, through use of your 30-amp power cord, adding an inverter option, or by use of a generator. A generator will supply AC power based on the generator's limitations.

120-volt functions in the Oliver include the refrigerator, air conditioner, convection/microwave, and the Suburban 3-way Self-Igniting Hot Water Heater, TV, and all GFCI protected 120-volt outlets. All other electrical functions in the Oliver are supplied with 12-volt DC power.

When it is not possible to access 120-volt power, the 12-volt battery system can supply the 12-volt system functions. The battery system is rechargeable by power converter/ battery charger when the Oliver is attached to an outside 120-volt power source, by use of an external generator, or optional solar package.

CONNECTING TO SHORE POWER

30-amp services are 120-volt limited to a total draw of 30 amps. The power cord from the RV is three-pronged. 30-amp service is the most common in the RV industry and is used widely in campgrounds through the U.S. Even though any appliance in the RV can operate by itself, due to the 30-amp limitations, you may not be able to run certain groups of appliances at the same time (especially starting them at the same time). For instance, most air conditioners will draw up to 16 amps to start and then run continuously around 11 amps. A microwave or convection oven may pull as little as 11 amps or as much as 18. Doing both simultaneously may overload the circuit, causing a breaker to trip.

The following warning is located near the shore power receptacle(s) on the outside of your travel trailer:

⚠ WARNING

THIS CONNECTION IS FOR 110-125-VOLT AC, 60 HZ, 30 AMPERE SUPPLY. DO NOT EXCEED CIRCUIT RATING. EXCEEDING THE CIRCUIT RATING CAN CAUSE A FIRE AND RESULT IN DEATH OR SERIOUS INJURY.

A 30-amp shore power cord is provided to attach the Oliver to a grounded power source. The electric utility service connection is located on the street side of the Oliver. The shore power cord is stored inside the basement storage or closet.

NOTICE

WE DO NOT RECOMMEND USING AN EXTENSION CORD TO PROVIDE POWER TO YOUR TRAILER. IF NECESSARY, ONLY USE A 3-PRONG, 10 GAUGE, 30 AMP EXTENSION CORD WITH A MAXIMUM LENGTH OF 25 FEET.

CONNECTING TO A GENERATOR

Oliver recommends a generator with a 30-amp connector for optimal performance. You will need a 30-amp generator to operate your travel trailer as normal; however, you will need to use a neutral ground plug.

Running on an insufficient generator may not allow electrical components to run properly. Oliver recommends using a 3500-watt generator when an alternative power source is required.

SURGE PROTECTOR

Your travel trailer is equipped with a Progressive Industries EMS-HW30C (electrical management system) surge protector.

The surge protector is designed to protect the trailer's electrical system that is connected on the output side of the surge protector. The shore power connection, cord to the surge protector, and transfer switch (if equipped with optional second shore power connection) are not protected by the onboard surge protector.

NOTICE

IF YOU ARE CONCERNED ABOUT PROTECTING THE SHORE POWER CONNECTION, CORD TO THE SURGE PROTECTOR, AND TRANSFER SWITCH (IF APPLICABLE) OF THE TRAVEL TRAILER, YOU WILL NEED TO USE AN EXTERNAL 30 AMP SURGE PROTECTOR THAT CONNECTS BETWEEN THE SHORE POWER CORD AND THE POWER SOURCE (E.G., GENERATOR OR POWER POLE AT CAMPSITE).

For operating instructions and troubleshooting, view the manufacturer's manual.

BATTERY COMPARTMENT

The battery compartment is located on the street side of your Oliver. The marine-style latch can be locked using the small key found on your key ring. After opening the battery compartment box, you will notice a slide-out tray holding your batteries. Simply push the battery tray in to take pressure off the latch and pull the ball handles on the two side latches to unlatch the tray. Pull the tray out to inspect the batteries as needed.

The batteries have been strapped down to prevent them from shifting during transit. Periodically check the battery compartment to ensure the battery straps are tight, battery terminals are clean/corrosion free, and wire connections are tight.

NOTICE

**NOT A DRY STORAGE COMPARTMENT!
REGULAR MAINTENANCE MAY BE REQUIRED TO PROTECT CONTENTS FROM DETERIORATION.**

BATTERY SAFETY

⚠ WARNING

- **ALWAYS SHIELD YOUR EYES WHEN WORKING NEAR BATTERIES**
- **BATTERIES CAN EXPLODE!! DO NOT SMOKE OR EXPOSE ANY BATTERY TO ELECTRIC SPARKS OR FLAME. BATTERIES GENERATE HYDROGEN WHEN CHARGING OR DISCHARGING. HYDROGEN AND AIR ARE A VERY EXPLOSIVE MIXTURE. DO NOT SHORT ACROSS THE BATTERY TERMINALS. THE SPARKS COULD IGNITE THE GASES.**
- **DO NOT WEAR METAL JEWELRY OR A WATCH WHEN WORKING ON A BATTERY. BEFORE DOING ANY WORK ON THE ELECTRICAL SYSTEM, DISCONNECT BATTERY CABLE AND 120-VOLT POWER CORD.**
- **DO NOT RECONNECT THE CABLES UNTIL ALL WORK IS COMPLETED; THIS WILL AVOID THE POSSIBILITY OF SHORTING OR CAUSING DAMAGE TO ELECTRICAL COMPONENTS OR SHOCK TO THE SERVICING PERSON.**
- **THE BATTERY ELECTROLYTE IS CORROSIVE, POISONOUS, AND CONTAINS SULFURIC ACID. AVOID CONTACT WITH SKIN, EYES, CLOTHING, OR ANY PAINTED SURFACE.**

12-VOLT BATTERY SYSTEM

The heart of the 12-volt system are the batteries. Batteries are essentially storage devices for electrical energy.

NOTE: Differing loads affect the ampere-hour rating of a battery. In normal use, loads vary in both amperage and the length of time they are applied, so these figures should be considered a guide rather than an accurate representation. Ampere-hour ratings vary depending on the size of the battery, the manufacturer, and the method used to calculate the rating. When ampere-hour ratings are known, they can be used to determine how many and what size batteries you need for your RV.


STANDARD 12-VOLT BATTERIES

If your trailer is equipped with the standard batteries, you will find four wet cell batteries installed.

The standard equipment batteries are RV or Marine Deep Cycle, Lead-Acid types. These batteries contain lead plates and liquid sulfuric acid electrolytes in sections called cells.

If wet cell batteries are installed on your trailer, they are maintenance free and do not require topping off. Wet cell batteries also release gas that requires venting, which you will find on the battery compartment door.

LEGACY ELITE II 12-VOLT BATTERY CONFIGURATION (FOUR BATTERIES)

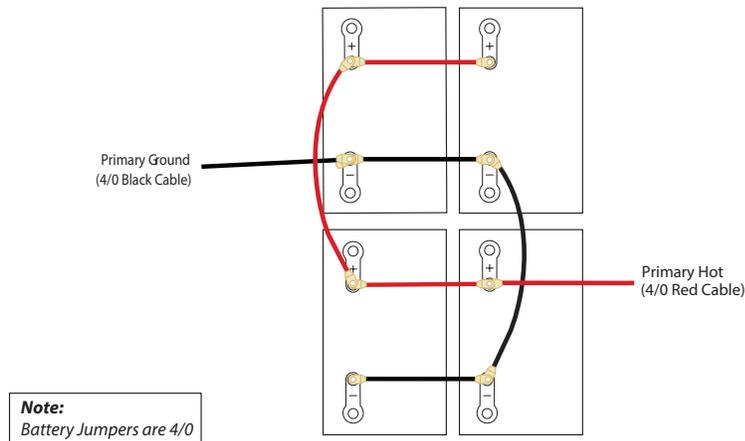

SMART CHARGE WIZARD STANDARD 12-VOLT BATTERIES ONLY

For operating instructions and troubleshooting, view the manufacturer's manual.

The smart charge wizard operates as the battery charger. It charges the batteries when it is connected to a 120-volt power source. If the battery is below its full charge, the charge wizard will begin operation at a rate that reflects the level of discharge.

The converter will supply "clean" power from input voltages that range from 105-130 VAC. At normal input voltages the full load capacity is available. At input voltages less than 105 VAC the converter may not supply full rated output capacity.

The power converter/charger is designed to provide reliable filtered DC power to all recreational vehicle 12-volt lighting and appliance CIRCUITS. The converter also provides safe and rapid recharging of the RV batteries. Built-In features such as electronic current limiting, reverse battery protection, high voltage protection, low voltage operation, and over temperature shut down ensure long term reliability.

ELECTRICAL

The built-in Charge Wizard is a microprocessor-controlled system that constantly monitors the battery voltage and ensures rapid; yet, safe, recharge. The Charge Wizard can select one of three charging voltages and one of four operating modes depending on the condition and use of the battery.

BOOST MODE: If the voltage drops below a preset level the output voltage is increased to approximately 14.4 VDC to rapidly recharge the battery.

NORMAL MODE: Output voltage is set at approximately 13.6 VDC

STORAGE MODE: If there is no significant battery usage for 30 hours the output voltage reduces to 13.2 VDC for minimal water usage. In storage mode, the output voltage increases to 14.4 VDC for approximately 15 minutes every 21 hours to help prevent sulfation of the battery plates.

INVERTER/CHARGER (OPTIONAL EQUIPMENT)

USED WITH AGM AND LITHIUM BATTERY PACKAGES ONLY

For operating instructions and troubleshooting, view the manufacturer's manual.

The optional inverter/charger is a combination of an inverter, battery charger and transfer switch into one complete system. When AC power is available, the inverter/charger recharges the batteries. It also allows surplus AC power to pass through and power downstream AC loads, such as a television, microwave, or air conditioner. When AC power is disconnected, the unit can invert DC battery power into AC electricity.

The inverter/charger will charge batteries in a sequence known as three-stage charging. The charging voltage delivered to the battery depends on the battery's type, temperature & state of charge. The three automatic charge stages are Boost, Absorption & Float.

Bulk Stage: the first stage in the charging process provides the batteries with a controlled, constant current. Once the battery voltage rises to the absorption voltage threshold, the charger switches to the absorption stage.

Absorption Stage: during the absorption stage, the inverter/charger begins operating in a constant voltage mode and the current falls gradually as the amp hours are returned to the battery.

Float Stage: maintains the batteries slightly above shelf discharge voltage. The charger automatically switches to the float stage after the batteries have received a bulk and absorption charge.

INVERTER/CHARGER SETUP

Your optional equipment will be setup before delivery and should not require changes. See the settings chart for each model & battery type:

SETTING #		SETTING NAME	ELITE II		
BATTERY PACKAGE TYPE -->		6V AGM 440 AH	12V LITHIUM 390 AH	12V LITHIUM 640 AH	
*01	INVERTER IGNITION CONTROL	OFF	OFF	OFF	
*02	LBCO VOLTAGE	10.5V	12.1V	12.1V	
*03	LBCO SHUTDOWN DELAY TIMER	300	10	10	
*04	LBCO RECOVERY VOLTAGE	13.1V	13.1V	13.1V	
*05	POWER SAVE TIME	OFF	OFF	OFF	
*06	POWER SAVE MODE (LOAD SENSING)	dls	dls	dls	
*07	OUTPUT FREQUENCY	60	60	60	
*08	OUTPUT VOLTAGE	120V	120V	120V	
*09	INVERTER OUTPUT POWER LIMIT	2.0	3.0	3.0	
*10	INVERTER OUTPUT LIMIT TIMER	300	300	300	
*11	TRANSFER MODE	APL	APL	APL	
*12	UTILITY AC UNDER VOLTAGE	90	90	90	
*13	INVERTER SHUTDOWN RECOVERY	nAt	nAt	nAt	
*14	AUDIBLE ALARM	b0n	b0n	b0n	
*20	BATTERY TYPE	AGM	LFP (LIFEPO)	LFP (LIFEPO)	
*21	BATTERY TEMPERATURE	HOT	HOT	HOT	
*22	CUSTOM ABSORPTION				
*23	CUSTOM FLOAT VOLTAGE				
*24	CHARGER CURRENT	60	150	150	
*26	CHARGE IGNITION CONTROL	OFF	OFF	OFF	
*27	EQUALIZE CHARGING	dls	dls	dls	
*28	AC INPUT BREAKER	25	25	25	

INVERTER TRANSITION

The inverter automatically detects when shore power is present and when it becomes unavailable or drops to less than 106 VAC. The inverter will transition from grid mode to battery mode in less than 20 milliseconds and starts drawing from the batteries. When operating on battery mode and shore power becomes available, the inverter will begin a 20 second countdown to verify stability of the shore power. If shore power remains stable the inverter will switch to shore power mode.

⚠ WARNING

YOUR OLIVER CAMPER IS EQUIPPED WITH AN ONBOARD SURGE PROTECTOR THAT CONTROLS INCOMING SHORE POWER AND SHUTS IT OFF WHEN THE VOLTAGE DROPS BELOW 104V OR GOES ABOVE 132V. LEAVING THE INVERTER ON TO TRANSITION INTO BATTERY MODE AUTOMATICALLY MAY RESULT IN BATTERY DISCHARGE.

NOTE: The Xantrex Remote Panel Display; green Status LED, will light up to show which mode the inverter is in.

MAINTENANCE

Periodically you should:

- With all sources of power off, clean the exterior of the unit with a damp cloth to prevent the accumulation of dust and dirt.
- Ensure that the DC cables are secure and fasteners are tight.
- Make sure the ventilation openings are not clogged.

NOTE: The information provided in this manual is a basic overview. For the full Xantrex Pro owner’s manual please see the Options Manual.

SOLAR PACKAGE (OPTIONAL EQUIPMENT)

For operating instructions and troubleshooting, view the manufacturer’s manual.

The optional solar system is a 12-volt system that provides an off-grid ability to recharge your batteries when shore power is not available. It is important to understand that the solar does not charge as quickly as a 120-volt shore connection. If the batteries are severely depleted you may need to connect to a generator or 30 AMP shore connection. When you are off-grid you should check periodically on the battery voltage or state of charge.

SOLAR DISCONNECT SWITCH

In the event you need to stop charging the batteries from your solar panels, there is a solar disconnect switch in the streetside upper cabinet above the stereo.




Located in Upper Cabinet to the Left of the Stereo on the Streetside on Elite II Models

AGM BATTERIES (OPTIONAL EQUIPMENT)

For operating instructions and troubleshooting, view the manufacturer's manual.

The 6-volt AGM Battery is specifically designed for deep-cycle applications. The Elite II model has four 6-volt batteries wired in series & parallel to provide 12-volt power. AGM batteries can effectively deliver 50% of their total amp hour capacity. The AGM batteries on the Elite II model delivers a usable 220 amp hours.

LEGACY ELITE II 6-VOLT AGM BATTERY CONFIGURATION (FOUR BATTERIES)

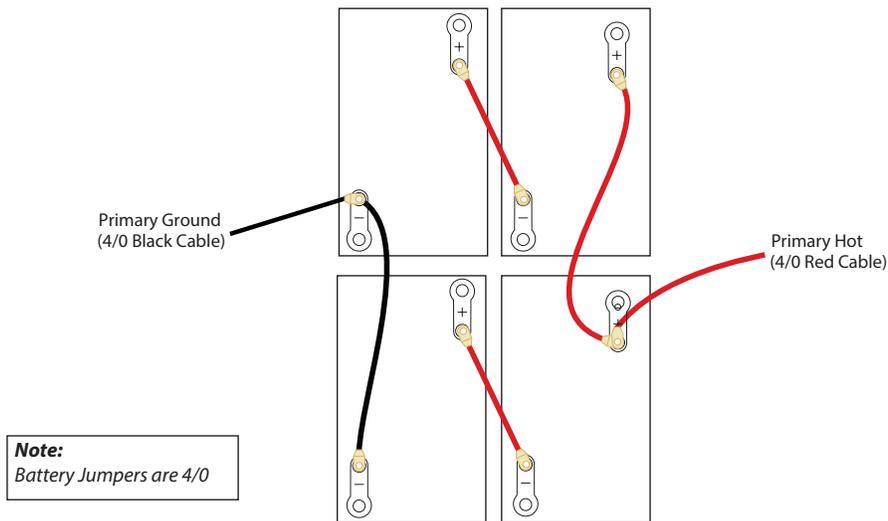

LITHIUM BATTERIES OVERVIEW (OPTIONAL EQUIPMENT)

Lithium batteries feature a built-in Battery Management System (BMS). The BMS features different protection modes including, over and under voltage, over and under temperature, over current, short circuit and more. The Bluetooth mobile app communicates directly with the battery to allow you to monitor temperature and charge status.

Lithium batteries can effectively deliver 90% capacity at 12-volts and the remaining 10% capacity below 12-volts. Once the battery reaches the last 10% capacity they will shut down, however the user can turn the batteries back on and utilize the remaining 10% for emergency situations.

NOTICE

DUE TO THE HIGH AMPERE DRAW OF THE INVERTER WHILE CHARGING THE BATTERIES, DO NOT USE A 30 AMP ADAPTER INTO A 15 AMP OUTLET TO CHARGE LITHIUM BATTERIES.


130 AH LITHIUM BATTERIES (OPTIONAL EQUIPMENT)

For operating instructions and troubleshooting, view the manufacturer’s manual.

When a charge cycle is desired on the batteries and the temperature outside the trailer is above freezing then no action is needed. If the temperature outside the trailer is below freezing, the Lithium batteries will need to be warmed before they can be charged. You will need to access the battery compartment and switch on the battery thermal blanket. The switch will be an in-line on/off switch located on the battery harness on top of the batteries. Once the heater has been turned on be sure to close the battery compartment door. When the battery core temperature is above freezing, the battery will begin accepting a charge.

NOTE: The colder the core is, the longer it will take to warm up to above freezing. The battery’s thermal blanket is thermostatically controlled between 35 degrees Fahrenheit and 45 degrees Fahrenheit. If a single charge is desired, switch off the battery’s thermal blanket when charging is complete. If the travel trailer is being used in a cold environment, leave the thermal blanket switch on for the duration of the trip and switch it off when the trip is over.

LEGACY ELITE II 12-VOLT LITHIUM BATTERY CONFIGURATION (THREE BATTERIES)

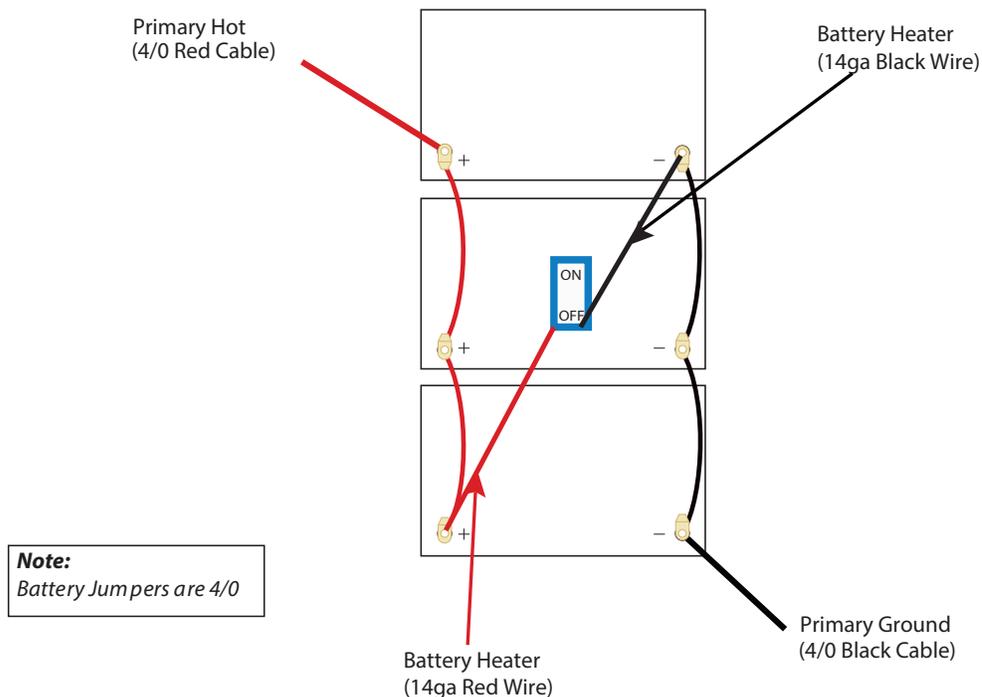

130 AH LITHIUM BATTERIES PROPER RESTART

If the inverter is OFF, drained or has entered Low Battery Cut Off (LBCO) and any or all of the batteries are OFF (no LED light on battery), you must properly restart/reboot the system to avoid damaging the internal Battery Management System (BMS). **See our video on YouTube.**

The following procedure should be followed to Reboot/Restart:

REBOOT/RESTART SEQUENCE

1. Ensure that the inverter is turned OFF.
2. Under the street side bed access panel, switch the inverter circuit breaker to the OFF position. Press the red button.

NOTE: This will cause a communication issue for the inverter remote display and requires a proper restart sequence to ensure proper communication between the inverter and remote display. (Error 20)

3. Turn all batteries ON
4. Switch inverter circuit breaker to the ON position. Press the leg back into position.
5. Turn the inverter ON at the inverter.
6. Verify communication software has loaded.

NOTE: Press the Up/Battery Button to scroll through.


7. Turn the inverter OFF at the inverter.
8. Turn the inverter remote display ON.

320 AH LITHIUM BATTERIES (OPTIONAL EQUIPMENT)

For operating instructions and troubleshooting, view the manufacturer's manual.

The 320 AH lithium battery has a built-in heating system and does not require a separate heat mat. When charging is required and temperatures are below freezing the built-in BMS will automatically heat the internal temperature of the battery so that it charges properly.

LEGACY ELITE II 12-VOLT LITHIUM BATTERY CONFIGURATION (TWO BATTERIES)

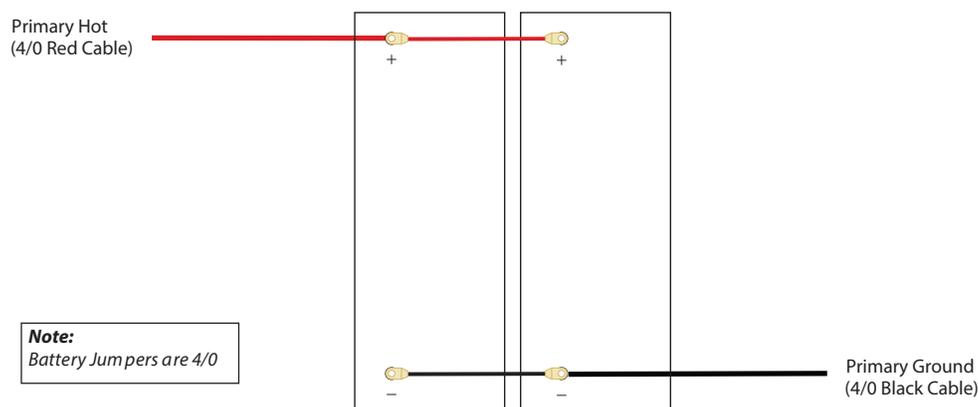

LITHIUM BATTERY STORAGE PROCEDURE

Storing your lithium batteries at the correct specifications is important as it keeps the battery in the healthiest state possible for the fastest deployment when needed.


See the manufacturer’s manual for proper lithium battery storage procedures.

CIRCUIT BREAKERS

The 120-volt system is protected by circuit breakers in the AC panel, located under the left front dinette seat, which automatically shuts the circuit off if the circuit load is too heavy or a short circuit occurs. If a circuit breaker has been tripped, do not reset the breaker until the cause of the problem is identified and corrected. Verify that the 120-volt GFCI outlet under the dinette is not tripped. In the event the outlet is tripped, it has to be reset by pushing the “reset” button on the 120-volt outlet.

NOTICE **GFCI IS ONLY ENERGIZED WHEN AC POWER IS PRESENT.**

2023 120V Panel, Standard Configuration

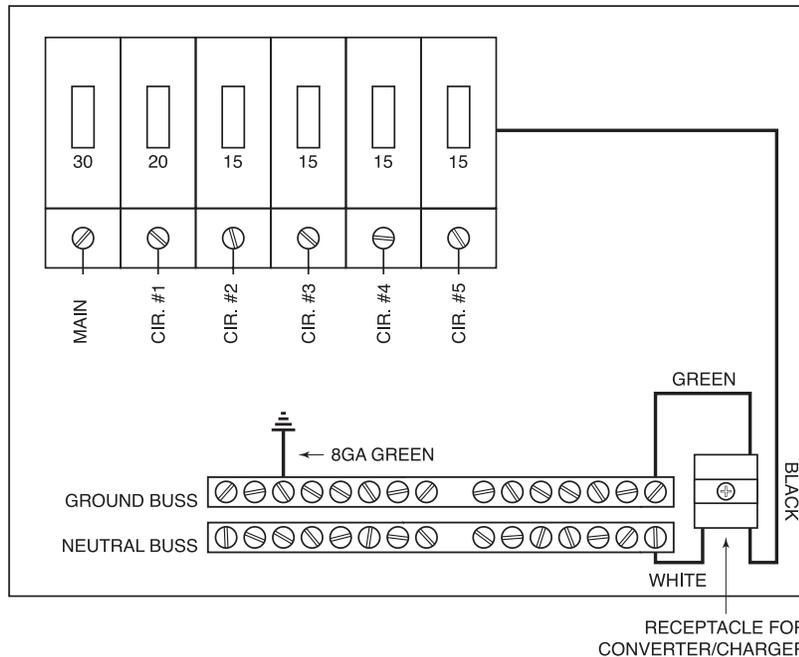


120V BREAKER DESCRIPTIONS		
MAIN	—	30 AMP
Cir. #1	FRIDGE / WATER HEATER	20 AMP*
Cir. #2	RECEPTACLES	15 AMP
Cir. #3	MICROWAVE RECEPTACLE	15 AMP
Cir. #4	AIR CONDITIONER	15 AMP**
Cir. #5	CHARGER	15 AMP

**If equipped with 12v Truma water heater option, refrigerator will be alone on this circuit which will be protected by a 15 amp breaker*

***Circuit will be protected by a 20 amp breaker when equipped with Truma A/C option*

2023 120V Panel, Pro 2000W Inverter Configuration

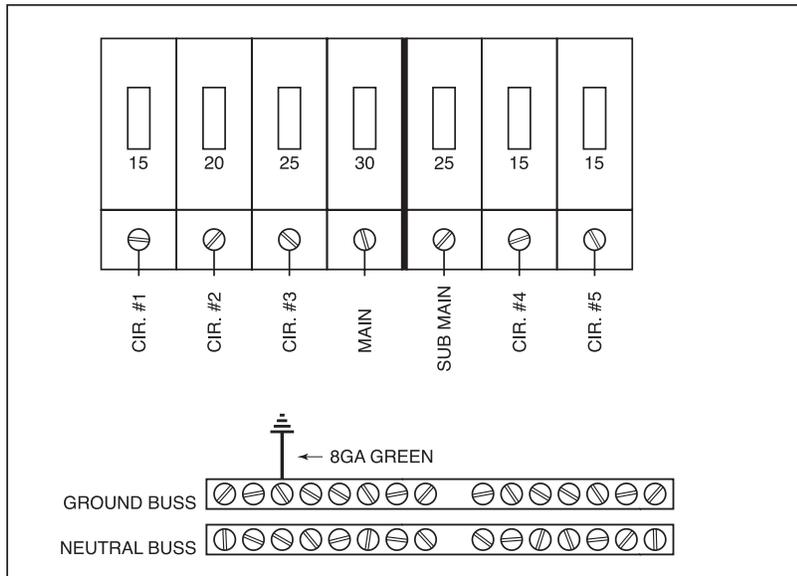


120V BREAKER DESCRIPTIONS		
Cir. #1	AIR CONDITIONER	15 AMP*
Cir. #2	FRIDGE / WATER HEATER	20 AMP**
Cir. #3	INVERTER	25 AMP
MAIN	—	30 AMP
SUB-MAIN	INVERTER SUB-PANEL	25 AMP
Cir. #4	RECEPTACLES	15 AMP
Cir. #5	MICROWAVE RECEPTACLE	15 AMP

**Circuit will be protected by a 20 amp breaker when equipped with Truma A/C option*

***If equipped with 12v Truma water heater option, refrigerator will be alone on this circuit which will be protected by a 15 amp breaker*

2023 120V Panel, Pro 3000W Inverter Configuration

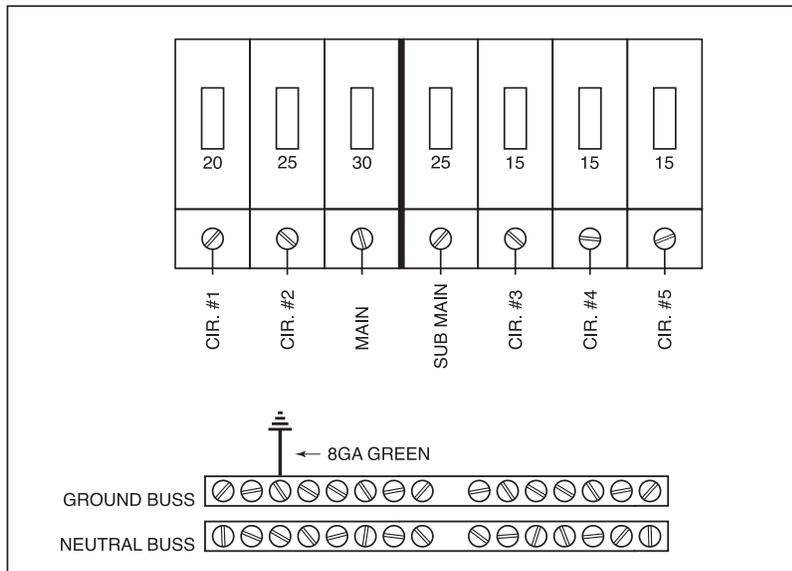

120V BREAKER DESCRIPTIONS		
Cir. #1	FRIDGE / WATER HEATER	20 AMP*
Cir. #2	INVERTER	25 AMP
MAIN	—	30 AMP
SUB-MAIN	INVERTER SUB-PANEL	25 AMP
Cir. #3	RECEPTACLES	15 AMP
Cir. #4	MICROWAVE RECEPTACLE	15 AMP
Cir. #5	AIR CONDITIONER	15 AMP**

**If equipped with 12v Truma water heater option, refrigerator will be alone on this circuit which will be protected by a 15 amp breaker*

***Circuit will be protected by a 20 amp breaker when equipped with Truma A/C option*


12-VOLT FUSES

A 12-volt DC distribution panel is located under the dinette. The panel contains fuses that protect the 12-volt circuitry. If any circuit is loaded beyond the capacity of its fuse, the fuse will blow. If a fuse is blown, replace it with a fuse of the same amp rating. Do not replace it with a larger fuse than indicated.

If the fuse continues to blow, contact the Oliver Travel Trailer Technical support department or a qualified RV service center for assistance.

It is a good idea to keep additional fuses on hand in your travel trailer. Replacement fuses are available at service stations, hardware stores, or automotive supply stores.

2023 12V Panel Configuration

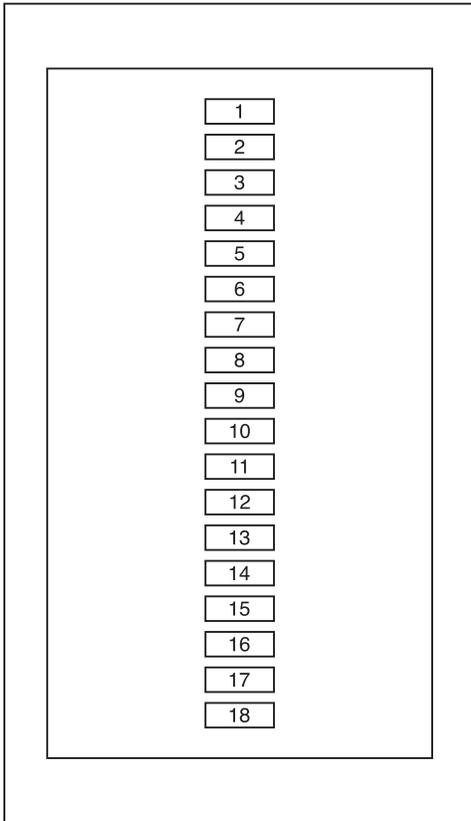

12V FUSE DESCRIPTIONS		
1	REFRIGERATOR	15 AMP
2	*ELECTRONICS	15 AMP
3	WATER PUMP	15 AMP
4	FURNACE	10 AMP
5	LIGHT MAIN	10 AMP
6	FANS	15 AMP
7	WATER HEATER	7.5 AMP
8	RADIO	10 AMP
9	**12V RECEPTACLE / USB	† 15 AMP
10	***12V RECEPTACLE / USB	† 15 AMP
11	CB AWNING (OPTIONAL)	† 10 AMP
12	ST AWNING (OPTIONAL)	† 10 AMP
13	CABIN / CABINET LIGHTS	5 AMP
14	OPEN	
15	OPEN	
16	OPEN	
17	OPEN	
18	OPEN	


* WIFI, CELL BOOSTER, BACK-UP CAMERA, TV, TANK MONITOR, OMNI-DIRECTIONAL ANTENNA

** 12V SOCKET/USB AT DINETTE, 12V SOCKET/USB UNDER ATTIC

*** 12V SOCKET IN ATTIC, 12V SOCKET/USB IN KITCHEN


† ATC STYLE TYPE 2 BREAKERS

2023 Elite II – Other 12V Breakers & Fuses

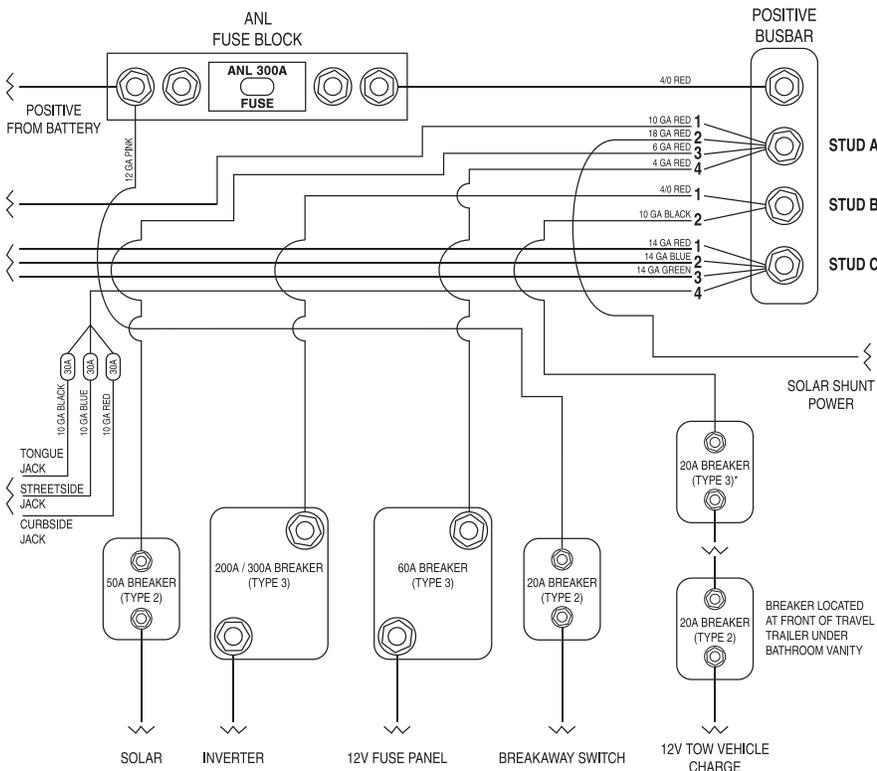

BUSBAR CONNECTIONS & ADDITIONAL FUSING/BREAKERING INFO.		
STUD A		
1	EXTERIOR SOLAR PORT	15 AMP (ATC FUSE)
2	SOLAR SHUNT POWER	1 AMP (SLOW BLOW)
3	SOLAR	50 AMP (TYPE 2 BREAKER)
4	DC FUSE PANEL	60 AMP (TYPE 3 BREAKER)
STUD B		
1	INVERTER CHARGER	200 AMP / 300 AMP (TYPE 3 BREAKER)
2	12V TOW VEHICLE CHARGE	20 AMP (TYPE 2 BREAKER)*
STUD C		
1	ELECTRIC BLADE VALVE	1/2 AMP (SLOW BLOW)
2	CO/LP DETECTOR POWER	1 AMP (ATC FUSE)
3	COMPOSTING TOILET POWER	2 AMP (GLASS FUSE)
4	ELECTRIC JACKS	30 AMP (SLOW BLOW)

*Breaker not installed when travel trailer is equipped with lithium batteries

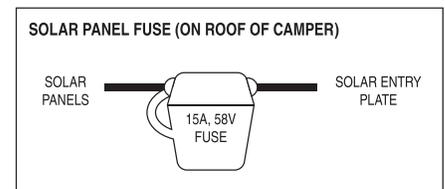

OUTLETS AND CHARGING STATIONS

All of the 120-volt outlets on the receptacle circuit in the Oliver are GFCI protected. You will find the main GFCI outlet below the right dinette seat.

Check the operation of your GFCI outlets monthly by depressing the test button on the main GFCI outlet, then re-energize the circuit by depressing the reset button.

If you find that your 120-volt outlets are not working on your trailer, troubleshoot by checking...

- Whether the main GFCI outlet under the dinette is tripped
- Whether the breaker for the receptacle circuit is tripped
- Whether the main breaker for the AC panel is tripped
- Ensure that 120-volt power is present and there are no errors on the surge protector.

NOTICE

GFCI IS ONLY ENERGIZED WHEN AC POWER IS PRESENT.

If any of the three are tripped, reset them. If they continue to trip, contact the Oliver Travel Trailer Technical support department or a qualified RV service center for assistance.

When it's time to charge your mobile phones or tablets, you will find charging stations located throughout the interior of your trailer. Each charging station is equipped with one 12-volt plug-in and two USB plug-ins.

LIGHTING & SWITCHES

The main light switches are located on the switch panel just inside the door.

MASTER LIGHTS switch allows you to turn on or off power to all light switches.

PORCH LIGHTS switch will turn on and off the LED porch lights on the curbside and street side of your travel trailer.

OUTSIDE COURTESY LIGHTS switch will turn on and off all of the outside courtesy lights located on both sides of your Ollie near the bottom of the shell.

MAIN CABIN LIGHTS switch controls the main LED lights that are located on the interior roof of the trailer.

CLOSET LIGHTS switch controls the LED light in the closet.

CURB AWNING switch is the master power button for the powered awning on the curbside of the trailer.

STREET AWNING switch is the master power button if the trailer is equipped with the optional powered awning on the street side of the trailer.

REAR CAMERA switch provides power to the optional rear backup camera.

CELL/WIFI AMPLIFIER switch is the master switch to provide power to the optional cell phone booster and WIFI booster.

CABINET LIGHTS switch controls the LED lights in the upper cabinets.

DINETTE LIGHTS are touch-enabled LED lights. Touch the center of each light to turn on or off as desired. The **MASTER LIGHTS** switch will turn these lights off but not on.

REAR LEFT LIGHTS are touch-enabled LED lights. Touch the center of each light to turn on or off as desired. The **MASTER LIGHTS** switch will turn these lights off but not on.

REAR RIGHT LIGHTS are touch-enabled LED lights. Touch the center of each light to turn on or off as desired. The **MASTER LIGHTS** switch will turn these lights off but not on.

BATHROOM LIGHTS switch is located on the bottom of the upper cabinet above the toilet on Legacy Elite II models.


WATER PUMP switch is the master switch to provide power to the water pump. There is one in the main cabin on the SEE LEVEL monitor and one in the bathroom.

INSIDE COURTESY LIGHTS switch is located under the pantry. The switch controls the LED lights near the floor throughout the interior of the trailer.

WATER HEATER switch is the master switch to provide power to light the burner on the water heater.

If your exterior lights are not working but you have power to trailer, check the fuses in the fuse panel located in the rear upper cabinet and replace if necessary.

ENTRY SWITCH PANELS

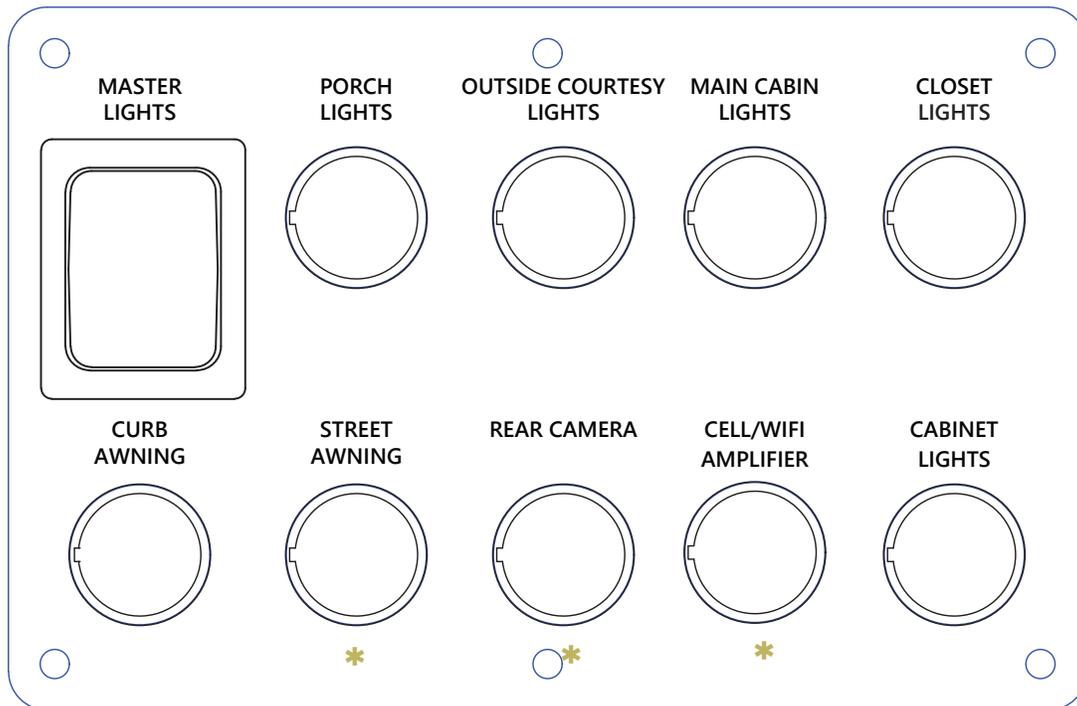

MAIN ENTRY SWITCH PLATE

** Switch will be plugged if not equipped with optional components.*



PLUMBING

OVERVIEW

Oliver's plumbing can be divided into two separate systems. The **freshwater system** consists of those items which are used to deliver water for your use. The **wastewater system** includes the drains and tanks that store and remove water that has been used.



The plumbing system has the dual ability to be self-contained with onboard storage, complemented by a digital holding tank monitoring system, or to use facilities provided by an external pressurized source. In either case, the components of the system operate like those in your home. Components of the plumbing system consist of strong, lightweight, corrosion-resistant materials. By following the instructions outlined here, you can expect efficient operation with minimum maintenance. Freshwater is provided from an external pressurized source or from the freshwater storage tank. These connections on the Oliver are located at the rear, bottom driver side corner of the trailer.

PLUMBING SYSTEM - CURBSIDE ACCESS PANELS

Most of the important plumbing components and valves are found under the curbside seating access panels. These components are referenced throughout the Plumbing section of this manual.


Below are diagrams of the Normal and Boondocking valve configurations.

ELITE II VALVE CONFIGURATION

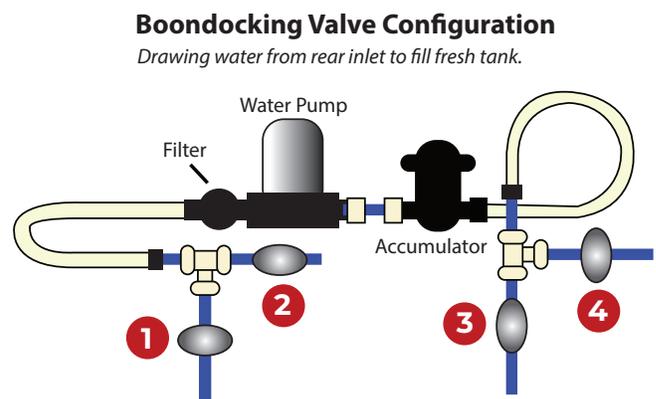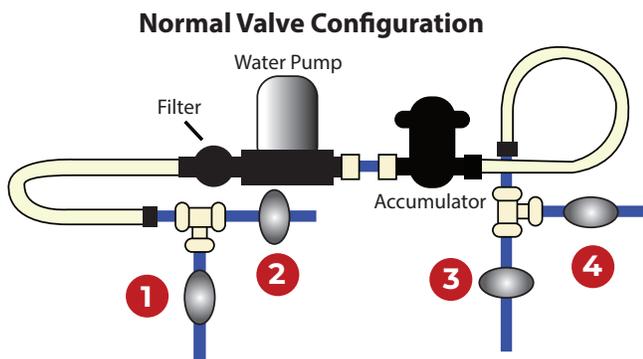

IMPORTANT PLUMBING SYSTEM COMPONENTS & VALVES

LEGACY ELITE II UNDER FRONT CURBSIDE SEATING ACCESS PANEL

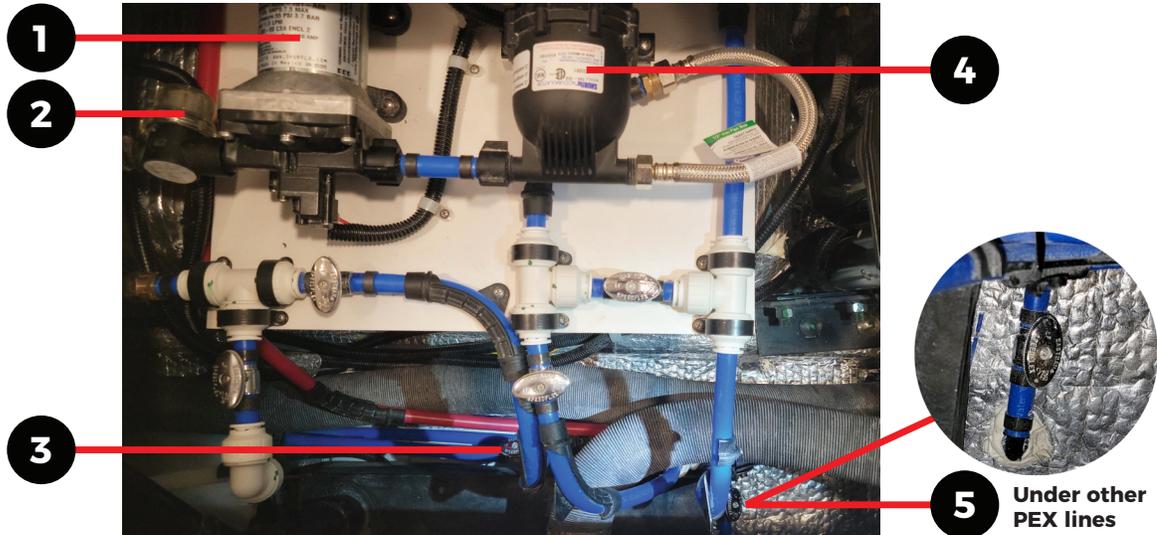

1. WATER PUMP
2. WATER PUMP STRAINER
3. FACTORY INSPECTION VALVE (ALWAYS LEAVE OPEN)
4. ACCUMULATOR
5. FRESHWATER DRAIN VALVE

WATER PUMP & ACCUMULATOR

For operating instructions and troubleshooting, view the manufacturer’s manual.

Under the curbside bed access panel, you will find the Water Pump, Accumulator, and other valves. When using water from the freshwater tank, the system must be pressurized. The self-priming 12-volt DC water pump is provided to handle this function.

The accumulator tank provides additional water storage to assist the pump in meeting the total demands of the system and helps minimize pulsation at the faucets.

As previously mentioned, the Water Pump can be used along with the Rear Water Inlet to push water from a portable potable water container into the Freshwater Tank. The pump can also be used during Winterization, Sanitization, and Decalcification.

Also, remember that an electrical problem can cause water system problems. A variety of reasons can cause a lack of power to the pump. If you are unsure of how to locate and/or repair a plumbing problem, it is best to have your dealer or a qualified plumber handle the job.

WATER PUMP SWITCH LOCATIONS:

- A “PUMP” on/off switch is located on the SeeLevel II monitor located in the main cabin. See the SeeLevel II Tank Monitor diagram later in this section.
- Another switch is in the bathroom above the towel bar in the vanity.

WHEN INITIALLY STARTING UP THE SELF-CONTAINED WATER SYSTEM:

1. Make sure the freshwater tank is filled with water.
2. Place the pump control switch in the ON position.
3. Allow time for the pump to fill the hot water tank and fully pressurize the system (approximately 2 minutes).
4. The system is now ready for use.

⚠ WARNING

RUNNING THE WATER PUMP WITHOUT WATER FOR MORE THAN 2 MINUTES MAY CAUSE PUMP FAILURE

NOTICE

THE SELF-CONTAINED WATER SYSTEM IS A DEMAND SYSTEM. THIS MEANS THAT THE WATER PUMP WILL RUN WHENEVER THERE IS A NEED FOR WATER.

TANK MONITORING

For operating instructions and troubleshooting, view the manufacturer’s manual.

The tank monitor consists of a display unit that mounts on an upper cabinet inside the travel trailer, and sender panels that stick to the side of the holding tank. The tank monitor will monitor the battery voltage, the freshwater tank, grey water tank, and black tank.

NOTE: The main water “PUMP” switch is located on the SeeLevel II Tank Monitor panel. The green indicator light will illuminate when the water pump is turned on.

INLETS

CITY WATER INLET

The city water connection is located on the lower rear street side of the trailer. Water provided from outside the Oliver is pressurized by the system from which it is delivered. When you connect your Oliver to an outside source, the freshwater tank and the water pump are kept separate from the remainder of the system by an in-line check valve.

TO ATTACH THE OLIVER TO A CITY WATER CONNECTION:

1. Remove the cap from the city water inlet on the side of the Oliver.
2. Attach a potable water hose to the outside source of water. An external water filter is recommended.
3. Connect the other end of the hose to the Oliver city water inlet. Be sure to use a pressure regulator (included at delivery) with a maximum 55 PSI.

⚠ WARNING	FAILURE TO USE A PRESSURE REGULATOR MAY DAMAGE THE INTERNAL WATER SYSTEM
------------------	---

4. Turn on the outside source of water. Open the various faucets gradually to clear the air from the lines. Close the faucets when the water flows freely. (May need to turn on the hot water side of the faucet to remove any air trapped in the water heater.)
5. Be sure the water heater is full of water before turning on the hot water heater.

NOTICE	DO NOT TURN THE WATER PUMP ON WHEN USING WATER FROM AN EXTERNAL PRESSURIZED SUPPLY. THIS COULD RESULT IN DAMAGE TO THE WATER PUMP.
---------------	---

FRESHWATER INLET

The freshwater connection is located on the lower rear street side of the trailer. The freshwater inlet allows you to pre-fill your on board water tank when planning to camp somewhere without an outside water source. The tank is filled through a standard pressurized water hose connection located at the rear area next to the city water inlet. The standard capacity of the freshwater tank is 30 gallons.

TO FILL THE FRESHWATER TANK FROM PRESSURIZED WATER:

1. Remove the cap from the freshwater inlet.
2. Attach a freshwater hose to an outside water source.
3. Attach the other end to the Oliver freshwater inlet.
4. Turn on the water source; fill until water starts to run from the freshwater overflow, which is located on the opposite side, between the aluminum steps and the refrigerator vent.
5. When the tank is filled, turn off and disconnect the outside water hose and re-install the water cap.



NOTICE

- IF YOU NOTICE WATER LEAKING UNDER THE CAMPER YOU MAY NEED TO CLOSE THE FRESH TANK DRAIN VALVE.
- ALWAYS FILL THE TANK WITH CLEAN WATER FROM A KNOWN SAFE SOURCE. MAKE SURE TO CAP THE WATER INLET WHEN THE TANK IS FILLED. ALSO, ALWAYS FILL THE SYSTEM WITH A HOSE THAT YOU KNOW IS CLEAN AND IS USED ONLY FOR THIS PURPOSE. WATER FROM TANKS IS NOT INTENDED FOR CONSUMPTION.

DRAINING THE FRESHWATER TANK

Under the curbside bed access panel below the water pump, you will see a standard T-valve (**See Fig 1-5 on page 49**). Opening this valve allows you to drain the freshwater tank before traveling, when winterizing, or as otherwise needed. The water will be released below the trailer near the rear bumper. Do not forget to close the valve after emptying the freshwater tank.

NOTICE

WHEN TRYING TO DRAIN THE ENTIRE ON-BOARD FRESHWATER SYSTEM, MAKE SURE TO OPEN FAUCETS AND REMOVE THE WATER HEATER DRAIN PLUG. THIS WILL EQUALIZE THE AIR PRESSURE AND ALLOW FREE WATER FLOW. IT MAY BE NECESSARY TO RAISE THE FRONT STABILIZING JACK SLIGHTLY TO ALLOW GRAVITY TO HELP DRAIN THE FRESHWATER TANK.

REAR WATER INLET

The rear water inlet is located on the lower right, rear of trailer. This inlet serves multiple purposes using the Water Pump to pull water into the freshwater tank or plumbing lines.

⚠ WARNING

THE SANITIZATION AND DECALCIFICATION PROCESS SHOULD NEVER BEEN DONE TOGETHER. MIXING VINEGAR AND BLEACH CAN CAUSE A LETHAL TOXIC GAS!

THE REAR WATER INLET IS USED FOR:

- To fill the freshwater tank from a potable water container using the onboard water pump when city water is not available.
- Pumping non-toxic RV antifreeze into the water lines when winterizing.
- Sanitization of the plumbing system.
- Decalcification the plumbing system.

TO FILL THE FRESHWATER TANK FROM A PORTABLE POTABLE WATER CONTAINER (NON-PRESSURIZED):

1. Remove the cap from the rear water inlet at the rear of the travel trailer.
2. Attach a cut-off potable hose to the rear water inlet that is 2 feet max in length.
3. Insert the other end into the potable water container.
4. Go inside and change the water pump valve configuration to the boondocking mode under the curbside access panel. (See valve configurations).
5. Turn the main water pump switch on until all water is pumped from the portable water container into the freshwater tank.
6. When the tank is filled, turn off the water pump, turn the water pump valves back to the normal configuration, disconnect the outside water hose and re-install the inlet cap.

SUBURBAN WATER HEATER

For operating instructions and troubleshooting, view the manufacturer’s manual.

The standard 6 gallon Suburban Direct Spark Ignition (DSI) water heater uses a porcelain-lined, steel water heater tank with a replaceable anode rod to “absorb” the electrolytical action - just like a typical water heater at home.


DRAINING AND STORAGE INSTRUCTIONS

If travel trailer is to be stored during winter months, the water heater must be drained to prevent damage from freezing. See the Winterization section for details.

BYPASS VALVE FOR SUBURBAN WATER HEATER

You will need to bypass the water heater when winterizing and sanitizing the plumbing system. The brass valve is located on the back of the water heater. You can access this under the curbside seating access panels.

BACK OF SUBURBAN WATER HEATER

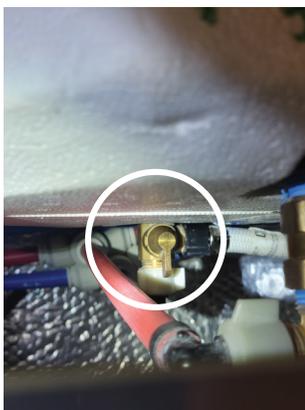

Valve Open
(allows water into water heater)



Water Heater Bypassed
(does not allow water into water heater)

HANDLE SHOULD BE POINTED TOWARD THE WHITE HOSE TO BYPASS THE WATER HEATER

TRUMA AQUAGO WATER HEATER (OPTIONAL EQUIPMENT)

For operating instructions and troubleshooting, view the manufacturer's manual.

FAUCETS AND SHOWER

BATHROOM FAUCET

The bathroom faucet is installed with a flexible hose for showering and for cleaning the shower. To turn on the bathroom faucet, lift the handle up to open the flow of water. Turn the lever counter-clockwise to adjust the water to the desired temperature. To use the bathroom faucet as a shower, pull the head from the faucet to extend the flexible hose and place it into the shower mount on the upper right wall. You can change the water flow from spray to stream by toggling the switch on the back of the faucet head.

⚠ CAUTION

THE BATHROOM FAUCET HOSE SHOULD ONLY BE PULLED OUT TO THE SHOWER HEAD MOUNT. PULLING IT OUT FARTHER MIGHT RESULT IN A KINKED OR DAMAGED HOSE.

KITCHEN FAUCET

The kitchen faucet features a pull-down spout and two-way spray head. To turn on the kitchen faucet, pull the handle toward you to open the flow of water. Push the handle right or left to adjust the water to the desired temperature. You can change the water flow from spray to stream by toggling the switch on the back of the faucet head.

SINKS

The kitchen and bathroom are fitted with stainless steel sinks.

⚠ WARNING

STAINLESS STEEL DOES NOT RUST HOWEVER HARD WATER CAN CAUSE WATER SPOTTING & MINERAL DEPOSITS ON THE SURFACE. IT IS IMPORTANT TO RINSE THOROUGHLY AND WIPE DRY AFTER EVERY USE. IF SOMETHING EXTERNAL HAS CAUSED RUST ON THE SURFACE, BAR KEEPERS FRIEND CLEANER IS EFFECTIVE AT REMOVING "SURFACE" RESIDUE SUCH AS: TARNISH, RUST, LIME DEPOSITS & HARD WATER STAINS.

OUTSIDE WASH STATION

The outside wash station is located in the basement storage compartment on the rear street side of the trailer. Pull the white cover down to access the faucet and controls. Turn the hot (red) and cold (blue) knobs as needed to the desired temperature. The faucet is connected to a flexible hose that stores inside the casing. Push the lever on the back of the shower head to open the flow of water. The flow of water can be locked open or closed by pushing or pulling the lever as needed.

⚠ CAUTION

BE SURE TO CLOSE HOT AND COLD KNOBS ON THE OUTSIDE WASH STATION AFTER USE. FAILURE TO DO SO CAN CAUSE BACK FEEDING OF WATER INTO PLUMBING LINES.

CARE OF SHOWER

From time to time you will want to remove soap film from the shower wall. Use any mild household foam cleaner. Never use harsh chemicals or abrasives on the shower walls or shower base. After taking your shower, leave the bath door open to allow the humidity and moist air to escape. Also, leave the bath door open when the unit is not in use. This allows circulation of air and prevents mildew.

TOILET

Your Oliver Travel Trailer is equipped with either a standard porcelain toilet or an optional composting toilet.

For operating instructions and troubleshooting, view the manufacturer’s manual.

BACK-FLOW PREVENTER

One of the most important things in the bathroom is the back-flow preventer. The black T-handle near the bottom of the wall is connected to a blade valve that controls the flow of used water from your shower pan and sink to the grey tank. If you ordered the optional electric blade valve on the Legacy Elite II, you will find the switch in the main closet of your Ollie. The black T-handle will not be present if you selected the optional electric Auto Drain option.

NOTICE

IT IS IMPORTANT TO OPEN THIS VALVE DURING CAMPING AND CLOSE THE VALVE BEFORE TRAVELING. THIS WILL PREVENT ANY WATER LEFT IN THE GREY TANK FROM BACK-FLOWING INTO THE SHOWER PAN WHILE DRIVING.

DUMPING WASTE WASTEWATER SYSTEM

The wastewater system in your Oliver can be described as two separate systems; a gray water system that consists of the drain lines and a holding tank for wastewater from the sinks and shower and a black water system, which includes the holding tank and drain for toilet wastes. Each system is self-contained and allows disposal of the wastewater at designated dump stations.

The gray water system has drain traps. Both tanks are vented to equalize air pressure and disperse odors caused by drain water and waste. Sometimes stop and go while driving may empty the drain traps of water and allow the odors of the gray water tank to come into the coach. Residue in the drain water lines also can produce odors. To combat gray water holding tank odor, an approved deodorizing agent should be used. An agent that dissolves grease and fats and contains a detergent will help keep tank and drain lines clean and free-flowing.

HOLDING TANKS

The Oliver Travel Trailers holding tanks hold 30 gallons in the grey tank and 15 gallons in the black tank. Each tank should be emptied often at a dump station designated for this purpose. Most national, state, and private campgrounds have dumping facilities. Many service stations, particularly along interstate highways, also have these facilities and are listed dumping station locations across the nation.

DUMP OUTLETS



TO EMPTY THE HOLDING TANKS:

1. Remove the two pins from both sides of the aluminum bumper, and pull the flexible sewer hose out.
2. Remove the end cover from the drain line and install the flexible drain hose. Position the flexible drain hose over the dump station inlet. Make sure the drain line is securely attached. Both drain termination handles are located in the basement storage compartment.
3. Open backflow preventer in the bathroom or open it using the optional Auto Drain switch in the closet to prevent the grey water tank from air locking.
4. Drain the black water tank first by pulling the termination valve handle toward you. Make sure to allow sufficient time for the tank to completely drain and then rinse the tank with several gallons of water by depressing the toilet's flush pedal. Close the toilet's flush lever and fill the toilet with water, then flush. This creates an additional force to clean the tank more completely.
5. Drain the gray water tank by pulling the termination valve handle toward you. Draining the gray water tank last, with its soapy water, helps to further rinse the drain and flexible drain hose.
6. When tanks are emptied, close termination valves by pushing handles back to closed positions. Ensure the backflow preventer is closed before traveling.
7. Remove flexible drain hose from the dump station inlet, using the shower hose, rinse off the flexible drain line if needed, cap it and replace it in the storage behind the rear bumper. Secure the bumper and cap the dump station inlet.

WASTE HANDLING

The following guidelines will help to ensure trouble-free operation:

- Never put anything in the black water tank other than toilet paper, especially for RV systems.

- Do not put automotive antifreeze, household toilet cleaners, drain cleaners, or any solid material into the wastewater system.
- Always use chemicals in the black water system, using cleaners made for the RV systems.
- Always keep the drain cap in place and termination valves closed when not dumping your tanks
- After every third time the holding tanks are emptied, fill and flush both tanks with clean, fresh water a couple of times to keep them clean and clear.

If connecting to a campsite sewer inlet, **DO NOT** open termination valves until tanks are $\frac{3}{4}$ full. **DO NOT** keep the black water valve open when parked. Solid wastes are not flushed directly into the sewer system. Only liquid waste is drained. Water must accumulate and chemicals in the tank need time to break down solids before they can be released. If draining gray water tank directly into sewer inlet while parked, make sure to close termination valve for a period of time before leaving, allowing some water to accumulate in the tank to use for flushing drain line and flexible hose.

NOTICE

WHEN DUMPING GREY WATER TANK, THE BACKFLOW PREVENTER MUST BE OPENED TO PREVENT THE GREY WATER TANK FROM AIR LOCKING. ENSURE THE BACKFLOW PREVENTER IS CLOSED BEFORE TRAVELING.

BLACK TANK FLUSH PORT

Your Oliver comes standard with a black tank flush port on the street side near the bottom of the unit; this allows you to connect an outside water supply and rinse out your black tank.

1. Hook up the appropriate hose to the black tank flush inlet. The plumbing to the black tank is designed to not allow waste from the black tank to feed back to the inlet. You do not have to worry about contaminating your hose.
2. Make sure the black tank valve handle is closed and turn on the water.
3. Watch the tank gauge on the See Level monitor and turn off the water before full.
4. Drain the tank into an approved dumping location.

⚠ WARNING

- **DO NOT OVERFILL THE BLACK TANK (15 GALLONS)!!!**
- **DO NOT OPEN THE BLACK TANK DUMP VALVE UNTIL YOU ARE READY TO DUMP!!!**
- **DO NOT POLLUTE!!!**

⚠ CAUTION

DO NOT USE THE TANK FLUSH VALVE UNLESS THE TANK TERMINATION VALVE IS IN THE OPEN POSITION. CAN RESULT IN AN UNSANITARY CONDITION LEADING TO ILLNESS OR PERSONAL INJURY.

WATER SYSTEM TROUBLESHOOTING

Your plumbing may develop problems. Most of these problems can be greatly reduced, if not altogether eliminated, by following a schedule of planned inspections and maintenance. Neglect of proper maintenance procedures is the usual cause of most water system problems.

Road vibrations and excessive pressure from some city water sources are the main physical causes of water system damage. It is important to inspect all plumbing joints and fittings often for cracks and leaks. Water leaking from a plumbing joint can cause considerable damage if left unchecked. Periodically, check all plumbing connections to ensure they are tight and not leaking.

There probably is a leak somewhere in the freshwater system if the pump is running and all the faucets and valves are closed. When the leaking fitting has been identified, turn off any external water source and turn off the water pump before attempting to stop the leak by tightening.

⚠ CAUTION

DO NOT OVER TIGHTEN! PLASTIC FITTINGS RARELY NEED TO BE TIGHTENED WITH A WRENCH. IF THESE FITTINGS LEAK AFTER TIGHTENING, DISCONNECT THE FITTING AND CHECK FOR DIRT, SCALE, OR OTHER FOREIGN SUBSTANCES THAT MAY BE CAUSING THE LEAK. CLEAN THE FITTING THOROUGHLY AND REINSTALL. IF LEAKING PERSISTS, SHUT OFF THE WATER SUPPLY UNTIL THE FITTING CAN BE PROPERLY REPLACED.

TERMINATION VALVE MAINTENANCE

During the camping season, use a slide valve lubricant. Two to four ounces of this water-soluble additive is poured down the drain into the gray tank and flushed down the toilet into the black tank to lubricate the inside of the dump valve blades and to coat the inside of the drains and tanks to aid in complete draining and trouble-free valve operation. One of the most disagreeable RV repairs is replacing a stuck or broken dump valve with a full holding tank. RV technicians hate it, and they get paid to do it. It is certainly no fun when it happens to you, miles from nowhere, in the middle of a vacation getaway. A little attention to the waste systems can avoid such scenarios.

WINTERIZATION

Proper winterization procedures of plumbing systems will typically be all that is necessary to prevent the damage caused by freezing. Freezing damage can harm any component of the system, including the water tanks, toilet, pump, and all piping. Be sure to follow the winterization process outlined below. Local climates vary, and winter maintenance needs may be affected.

If the Oliver is used in cold weather and left unheated for an extended period, the water in a tank or drain line may freeze. If this occurs, you should take immediate steps to thaw it

before damage to the system occurs. **DO NOT** continue to use water system components if such a condition exists. If damage has occurred, make sure to have it repaired before using it again.

⚠ WARNING	<p>DO NOT USE AUTOMOTIVE ANTIFREEZE. AUTOMOTIVE ANTIFREEZE IS POISONOUS AND NOT FOR USE IN POTABLE WATER SYSTEMS. ONLY USE ANTIFREEZE SUITABLE FOR DRINKING WATER SYSTEMS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH!!!</p>
------------------	---

OBJECTIVE SUMMARY: Prepare the travel trailer for winterization when it will not be in use to protect from freezing.

TOOLS/ITEMS REQUIRED:


- 1 and 1/16th socket, wrench, and extension (for Suburban Water Heaters)
- 3 gallon or larger bucket for draining water heater (if indoors)
- 3 gallons of non-toxic, concentrated RV antifreeze
- One 24-inch hose with male threaded end
- Antifreeze Hand Pump Kit

WINTERIZATION PROTOCOL:

Before we begin, please ensure your Black, Grey, and Freshwater tanks are empty. Also, we do not recommend using blown air to winterize your Oliver Travel Trailer. Doing so may damage your plumbing system.

1. The first step in the winterization process is to turn off the gas on all propane gas tanks connected to your travel trailer.
2. Next, turn off your water heater at the power switch. If your travel trailer is equipped with a Truma tankless water heater, you will also have to turn off the switch outside on the water heater itself. Next, turn off the water pump and then turn on the hot and cold water at any faucet to depressurize the water system. Once water ceases to flow from the faucet, turn the faucet handles to the off position.


BACK OF SUBURBAN WATER HEATER

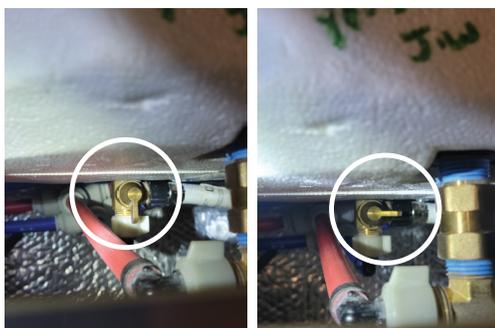

Valve Open
(allows water into water heater)

Water Heater Bypassed
(does not allow water into water heater)

BACK OF TRUMA WATER HEATER

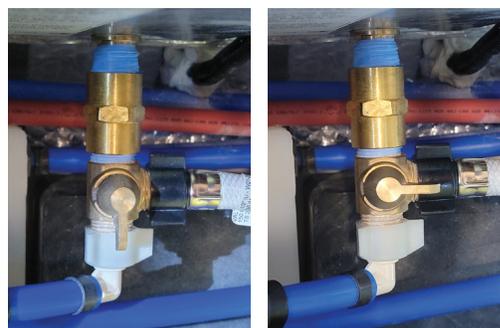

Valve Open
(allows water into water heater)

Water Heater Bypassed
(does not allow water into water heater)

HANDLE SHOULD BE POINTED TOWARD THE WHITE HOSE ON BOTH MODELS TO BYPASS THE WATER HEATER

PLUMBING

3. Next, you will need to close the by-pass valve on your Suburban or Truma water heater.
4. You can access the water heater by-pass valve through the curbside access panel below the bedding.
5. The bypass valve will be located near the back of the water heater.
6. Turn the bypass valve so the handle points toward the rear of the travel trailer.
7. Next, you will need to configure the water pump valves, which will allow you to pump RV antifreeze into the plumbing system from the inlet at the rear of the travel trailer.
8. You will find the pump and valves inside the camper under the curbside bed or seating area.
9. Configure the valves for winterization. See valve configuration diagrams.
10. Next, attach a hose approximately 2 feet in length to the winterization inlet located at the curbside rear of the travel trailer.



Rear Water Inlet located to the right of the rear bumper

11. Place the end of the hose into a gallon jug of non-toxic RV antifreeze. DO NOT dilute the antifreeze before pumping it into your plumbing system. It is important that you use only concentrated RV antifreeze for winterization.

NOTE: You will need about 3 gallons of RV antifreeze!

12. Now, go inside the travel trailer and turn on the water pump.
13. Turn on the cold water at the kitchen faucet and let it run until the flow turns from water to antifreeze and turn it off. Repeat this step for the hot water as well.
14. In the bathroom, turn on the cold water at the vanity sink until the flow turns from water to antifreeze and turn it off. Repeat this step for the hot water as well.
15. Next, open the lid on the toilet and press the flush lever until the flow turns from water to antifreeze.
16. Ensure some antifreeze remains in the bowl to keep the seal lubricated.
17. Next, at the outside wash station located at the rear street side of the trailer, turn on the cold water and let it run until the flow turns from water to antifreeze.
18. Turn off the cold water and repeat the same steps with the hot water as well.
19. Then, go inside the travel trailer and turn off the water pump.
20. Next, connect an antifreeze hand pump to the city water inlet on the street side, rear of the travel trailer and insert the other end into a gallon of RV antifreeze.

21. Open the outside wash station above the inlets and pull out the faucet from its holder and depress the button on the faucet head to lock the button in place. Then, turn on the cold water.
22. Prime the hand pump until antifreeze fills both hoses and pump antifreeze into the line until the flow from the faucet turns from water to antifreeze. This should take roughly 2 pumps. You do not have to repeat this process for the hot water.
23. Disconnect the hose from the city water and connect it to the Fresh Water inlet.
24. Prime the hand pump and pump 4 times to fill the line that runs to the freshwater tank. Disconnect the hose.
25. Locate the black tank flush inlet on the street side of the travel trailer and connect the hand pump hose to the inlet.
26. Prime the hand pump and pump 5 times to fill the line that runs to the black tank.
27. Remove the hose from the inlet.
28. Finally, go inside the travel trailer and pour around two cups of antifreeze into the kitchen sink drain, the bathroom vanity sink drain, and the shower pan to keep the P-traps from freezing.
29. Next, you will need to drain your water heater.
30. If you are indoors, place a large bucket below the water heater door before beginning the next step so you can catch the water as it drains.

SUBURBAN WATER HEATER WINTERIZATION

⚠ CAUTION

USE EXTREMELY CAUTION DURING THIS PROCESS AS SOME RESIDUAL HOT WATER MAY STILL BE IN THE WATER HEATER TANK. FAILURE TO DO SO MAY RESULT IN A SCALDING INJURY.

31. If your unit is equipped with a suburban water heater, use a 1 and 1/16th socket to remove the anode from the bottom of the water heater and leave it uninstalled while the water system is winterized.

Good and Bad Anodes



TRUMA AQUAGO WINTERIZATION (OPTIONAL EQUIPMENT)

⚠ CAUTION

LEAVING THE TRUMA WATER FILTER IN THE WATER HEATER MAY TRAP RESIDUAL WATER IN THE WATER HEATER AND MAY FREEZE AND CAUSE DAMAGE TO THE WATER HEATER. DO NOT REINSTALL THE WATER FILTER AFTER WINTERIZING.

32. If your unit is equipped with a Truma AquaGo, drain the water heater by lifting up the black tab while pulling down the yellow Easy-Drain Lever. Doing so will eject the unit's inlet filter which should **NOT** be reinstalled while the travel trailer is winterized.
33. If you have the AquaGo Electric Antifreeze Kit installed, you will need to unplug it before draining your Truma water heater.
34. Once the water has been drained, lift up on the Easy-Drain lever and lock it in place.

DE-WINTERIZATION


WARNING

DO NOT MIX BLEACH AND VINEGAR OR OTHER ACIDS. MIXING BLEACH WITH ANY ACID CAUSES CHLORINE GAS. CHLORINE GAS EXPOSURE, EVEN AT LOW LEVELS AND SHORT PERIODS WILL IRRITATION TO MUCOUS MEMBRANES (EYES, THROAT, AND NOSE), AND CAUSES COUGHING AND BREATHING PROBLEMS, BURNING AND WATERY EYES, AND A RUNNY NOSE. HIGHER LEVELS OF EXPOSURE CAN CAUSE CHEST PAIN, MORE SEVERE BREATHING DIFFICULTIES, VOMITING, PNEUMONIA, AND FLUID IN THE LUNGS. VERY HIGH LEVELS CAN CAUSE DEATH.

Before using the system again after Winterization, completely sanitize the entire plumbing system. Also sanitize the system before initial use; after extended periods of non-use; after at least once a year during continuous use; and whenever there is suspicion that the system has been contaminated.

1. Prepare a chlorine solution using a gallon of water and ¼ cup of liquid household bleach (5% sodium hypo chlorinate solution). Use one gallon of solution for every 15 gallons of tank capacity.
2. You will need to turn the bypass valve on the back of the water heater to halt the flow of water into the water heater. The water heater can be accessed through either of the curbside service access compartments inside the unit.

BACK OF SUBURBAN WATER HEATER

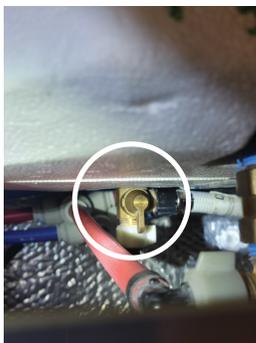

Valve Open
(allows water into water heater)



Water Heater Bypassed
(does not allow water into water heater)

BACK OF TRUMA WATER HEATER



Valve Open
(allows water into water heater)



Water Heater Bypassed
(does not allow water into water heater)

HANDLE SHOULD BE POINTED TOWARD THE WHITE HOSE ON BOTH MODELS TO BYPASS THE WATER HEATER

3. Connect a known good water source to City Water Inlet and allow water to flow out all faucets.
4. Open the freshwater tank drain valve to drain any antifreeze that may be in the tank.
5. Connect known good water source to Freshwater Inlet and open water source running for a few minutes to flush freshwater fill line and tank.
6. Configure for water valves for boondocking so solution goes into the tank.
7. Place the end of the hose into a container of the bleach solution and into your plumbing system using a winterization inlet.
8. Turn on the water pump from inside.
9. Let it run until the entire bleach solution has been pulled out of the container and into the camper.
10. Continue filling the freshwater tank, until it overflows on the curbside of the camper, using the known good water source still connected to the freshwater inlet.
11. Allow the water and bleach solution to sit inside the water lines and water tank for about 3 hours.
12. Turn the freshwater tank drain valve to allow the water and bleach mixture to drain.
13. Once drained, close the valve and repeat steps 9 & 11 with fresh water only
14. Connect known good water source to City Water Inlet and allow water to flow out all faucets flushing out bleach solution in plumbing lines.
15. Once again drain the freshwater tank and it is ready for use. Be sure to reset the water pump valves back to normal mode when you are ready to use the camper.

SANITIZATION

Regardless if you winterize your camper, just drain the water for storage, or use the system year round; at some point you will want to sanitize the fresh water system. This may sound tedious but with your Oliver Travel Trailer you can simply use the rear water inlet at the rear of the camper and let it do most of the work for you. **Watch the Sanitization video on YouTube.**

NOTE: If you did winterize your camper, you will want to de-winterize prior to sanitizing the system. Please see De-Winterization for details on how to de-winterize.

Sanitization can be done at any time but is most often done after pro-longed storage or pro-longed use.

USING BLEACH TO SANITIZE FRESH WATER SYSTEM

WARNING

DO NOT RUN BLEACH SOLUTION THROUGH THE WATER HEATER. YOU MUST BYPASS THE WATER HEATER USING THE BYPASS VALVE.

1. Prepare a ½ cup of bleach mixed with one gallon of water and place near the rear water inlet.
2. Connect a short piece of water hose, approximately 2 feet long to the port and in the gallon jug of bleach solution.



PLUMBING

3. Check to ensure that the fresh tank drain valve is closed (**see FIG 1 - 5 on page 49**).
4. If water pump valves are not already in the Boondocking Valve Configuration, then reconfigure valves accordingly. **See valve configuration diagrams on page 48.**
5. Turn the water heater bypass valve to the winterization or bypass mode.
6. Turn water pump on and let the pump pull the bleach water solution into the fresh tank.
7. Once all of the solution has been pumped into the fresh water tank, turn the water pump off.
8. Connect your fresh water hose to the fresh connection port and turn the water on filling the fresh water tank to 100%.
9. Once the tank is full, let this solution sit in the tank for at least 10 – 15 minutes.
10. Change the water pump valves to normal mode.
11. Turn the water pump on and allow to pressurize the system.
12. Turn on your kitchen, bath, and exterior faucet cold water to pull some of the bleach solution through the fresh water lines. 30 seconds for each faucet is plenty of time.
13. Open the fresh tank drain valve to allow bleach water to drain from tank.
14. Once again run water into the fresh water tank to rinse.
15. After rinsing at least 30 gallons of fresh water through the tank, be sure to close the drain valve.
16. Congratulations your fresh water system is now sanitized and ready to use.

DECALCIFICATION OF PLUMBING SYSTEM

⚠ WARNING

NEVER MIX BLEACH AND VINEGAR TOGETHER. TOGETHER THEY PRODUCE CHLORINE GAS, WHICH EVEN AT LOW LEVELS CAN CAUSE COUGHING, BREATHING PROBLEMS, AND BURNING, WATERY EYES.

NOTICE

- **DECALCIFYING THE WATER HEATER SHOULD BE DONE SEPARATE FROM THE FRESH WATER FIXTURES, SUCH AS THE FAUCETS AND TOILET, AS VINEGAR IS USED IN THE MAIN FRESH WATER SYSTEM LINES BUT SHOULD NOT BE USED IN THE WATER HEATER. YOU CAN PERFORM THE WATER HEATER DECALCIFICATION PRIOR TO PERFORMING THE VINEGAR FLUSH OR AT A COMPLETELY DIFFERENT TIME. THE TRUMA WILL INFORM YOU WHEN IT IS NECESSARY TO DECALCIFY AND YOU SHOULD FOLLOW THE GUIDELINES OUTLINED IN THE TRUMA AQUAGO SECTION OF THIS MANUAL.**
- **THE USE OF A WATER FILTER DOES NOT PROTECT THE PLUMBING SYSTEM FROM CALCIFICATION.**

Decalcification of the fresh water fixtures can be done at any time and should be done periodically when hard water has been used in the fresh water system.


WHAT IS HARD WATER?

All water contains dissolved minerals and nutrients, but some sources of water contain more minerals than others. Water is considered hard when it contains high amounts of calcium-carbonate and magnesium. These minerals – in particular – have a high propensity to adhere to surfaces and form scale on surfaces the water comes into contact with, such as pipes and fixtures. In fact, soap scum and scale buildup on bathroom fixtures are how most people realize they have hard water in their home.

USING VINEGAR TO DECALCIFY THE FRESH WATER FIXTURES

1. Place 3 gallons of vinegar at the rear water inlet.
2. Connect a short piece of water hose, approximately 2 feet long to the inlet and in the gallon jug of vinegar.

BACK OF SUBURBAN WATER HEATER

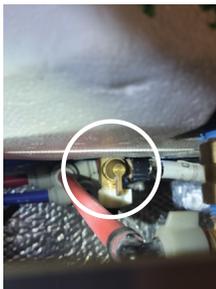

Valve Open
(allows water into water heater)



Water Heater Bypassed
(does not allow water into water heater)

BACK OF TRUMA WATER HEATER



Valve Open
(allows water into water heater)




Water Heater Bypassed
(does not allow water into water heater)

HANDLE SHOULD BE POINTED TOWARD THE WHITE HOSE ON BOTH MODELS TO BYPASS THE WATER HEATER

3. Bypass the water heater if it is not already set.
4. If water pump valves are not already in the Boondocking Valve Configuration, then reconfigure valves accordingly. **See diagram on page 48.**
5. Turn water pump on, open kitchen faucet cold line and let the pump pull the vinegar into the system, run approximately 15-20 seconds and then open the hot water side and allow to run for another 10-15 seconds.
6. Open the Bath faucet cold line and run approximately 15-20 seconds, then open the hot side and run for 10-15 seconds.
7. Flush the toilet twice.
8. Turn off the water pump.
9. Flush the system with fresh water.

NOTE: In some cases you may have to use more than 3 gallons of vinegar to clean out calcium buildup in the lines and at the fixtures. If this is the case then simply start over with step number one with a new gallon of vinegar and continue until the system has been completely decalcified.

LEGACY ELITE II PLUMBING DIAGRAM

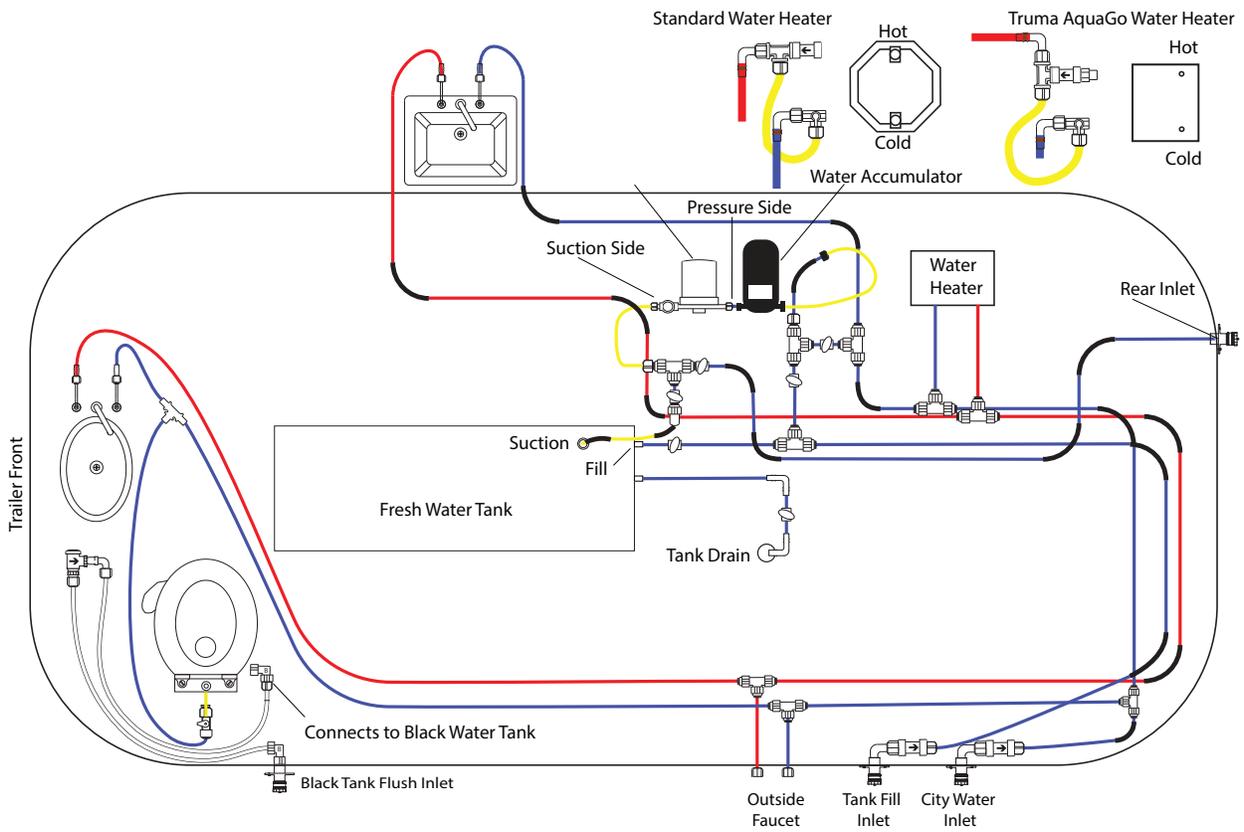

Rev. 10/2022



PROPANE

OVERVIEW

The propane tanks are stored in the fiberglass propane tank housing located at the front of your travel trailer. Your Oliver comes standard with two 20 pound propane tanks or you may have upgraded to two 30 pound propane tanks.

The propane system helps operate several components on your travel trailer. The water heater, furnace, stove, and optional propane quick connects all work using propane as fuel. Read all manufacturer appliance literature, including the information on the LP bottles and regulator, provided in the unit packet, and follow any instructions. Refer to manufacturers manual.

⚠ DANGER

FOR ADDITIONAL SAFETY, IT IS RECOMMENDED TO TURN OFF YOUR PROPANE TANKS WHILE TRAVELING.

PURGING THE SYSTEM

If you happen to run your propane tanks completely out or if your trailer has been in storage, you will likely need to purge the propane lines to ensure a flow of propane is supplied to the components that use the gas.

Since several components have built-in safety functions that require a reset if the burners do not ignite, we suggest turning on the flow of propane to the stove and attempting to light the burner. Once your stove is lit, you should then be able to turn on your other components that use propane.

PROPANE TANK HOUSING

Your Oliver is equipped with a removable lid that allows you full access to the tanks.

1. The housing lid is held in place by two easy-to-use hood latches. To release the latch, simply pull the latch back from the top.
2. Once both hood latches have been released, carefully lift the fiberglass lid up and over the propane cylinders inside.
3. The two propane cylinders are each tightly secured in the propane tray mounted to the frame. The securing mechanism also holds the propane regulator in place.
4. If you are simply needing to open or close the tank or access the regulator controls, you can also simply open the round propane deck port located on the front of the housing lid for quick access.

USING THE REGULATOR

To supply gas to the components that use propane, you will need to open the valves on the propane tanks. The regulator controls the flow of propane throughout the LP lines. The two-stage automatic changeover regulator controls the flow of propane throughout the LP lines.

1. Point the changeover lever to the left or right to indicate your primary propane tank. When gas is present in your primary tank, the indicator on the front of the regulator will be green.
2. Once your primary tank is depleted, the automatic changeover function of the regulator will automatically switch to the reserve tank and the indicator will be red, letting you know the primary tank is depleted and the reserve tank is now being used.
3. If needed, you can point the changeover lever toward your reserve tank and view the indicator to let you know how much gas remains in the reserve tank.

USING THE QUICK CONNECTS OPTION

Most propane grills or campfires come with a hose that connects directly to a propane bottle. In order to use the propane quick connects on your trailer, you will need a hose that uses a 1/4 inch male NPT quick connect fitting. A propane hose is not supplied with your travel trailer.

1. Turn the lever on the quick connect to the OFF position.
2. Next, pull the dust cap off the quick connect, push the sleeve back on the connection and insert the male fitting into the female quick connect socket.
3. Push the fitting in until you feel it lock.
4. Turn the lever on the quick connection back to the on position to open the flow of propane to your grill, campfire, or other propane components.

REPLACING OR REMOVING THE TANKS

1. To remove your propane tanks for refilling, first, ensure the tank is turned off and unscrew the hose connection by turning the connector counter-clockwise.
2. Between the tanks, remove the large wing-nut by turning it counter-clockwise until it comes off the threaded rod and then lift the regulator up and set it to the side.
3. Now, lift the bar that secures the two tanks and remove or allow it to drop between the tanks.
4. Carefully lift the tank from the propane housing.
5. Once the propane tank is refilled, reverse the steps to secure the tanks inside the propane housing.



EXTERIOR

ENTRY STEPS

A two step entry system is provided as standard equipment on all Oliver Travel Trailers. Lift up on the steps and pull forward, then fold out the bottom step. The steps are held in place by a detent on each side. To retract the steps, fold the bottom step and lift the steps out of the detent and push them back to the original stored position. Make sure that the steps are secure in the retracted position before moving the Oliver Travel Trailer.

Make sure to keep fingers away from the sliding mechanism when extending or retracting the steps. Use extra caution if exiting or entering the Oliver without the use of the step.

ENTRY DOOR

The entry doors consist of both the exterior door and the screen door. The screen door is used for ventilation when the Oliver is parked. Always use the door retainer latch if you want to leave the door open. Failure to do so may result in damage to the door.

⚠ WARNING

- **DO NOT ATTEMPT TO DRIVE OR PULL THE OLIVER WITH THE DOORS OPEN.**
- **DO NOT USE THE EXTERIOR DOOR RETAINER DURING WINDY CONDITIONS**
- **DO NOT DRIVE OR PULL THE OLIVER WITH THE OUTER DOOR OPEN AND THE SCREEN DOOR CLOSED. THE DOORS MAY BE DAMAGED AND IT IS A SAFETY HAZARD.**
- **THE SCREEN DOES NOT FULLY SEAL AND LEAVING IT OPEN MAY ALLOW INSECTS INTO THE TRAVEL TRAILER.**

EXTERIOR STORAGE

If you purchased an Oliver Legacy Elite II, it will come equipped with a basement storage compartment. The basement storage can be accessed from the inside or the outside of the trailer. From the outside, the basement storage is located on the rear street side of the trailer. It is secured by a marine-style latch that can also be locked using the small key found on the supplied key ring. You will find an LED light mounted inside that conveniently illuminates the entire storage area. To turn the light on or off, reach inside and simply toggle the switch built into the light as needed.

AWNING

⚠ WARNING

- **WHEN PERIODS OF RAIN AND OR HIGH WIND ARE EXPECTED THE AWNING MUST BE CLOSED. NEVER LEAVE THE AWNING OPEN AND UNATTENDED.**
- **DAMAGE CAUSED BY WIND AND RAIN IS NOT COVERED BY WARRANTY.**
- **ALL AWNINGS MUST BE CLOSED PRIOR TO MOVING THE VEHICLE FOR ANY REASON. AS AN EXTRA SAFETY PRECAUTION A VISUAL CHECK THAT EVERY AWNING IS FULLY CLOSED IS REQUIRED.**
- **DAMAGE CAUSED BY FAILURE TO COMPLY WITH THESE INSTRUCTIONS IS NOT COVERED BY WARRANTY.**
- **BEFORE USING YOUR AWNING, ENSURE THAT THE AREA INTO WHICH THE AWNING WILL BE DEPLOYED IS FREE OF OBSTRUCTIONS (TREES, WALLS, PILLARS, POSTS, OTHER VEHICLES ETC.)**
- **DAMAGE CAUSED BY COLLISIONS WITH ANY OF THE ABOVE OR SIMILAR IS NOT COVERED BY WARRANTY.**

All Oliver Travel Trailers come standard with a powered curbside awning. On Legacy Elite II models, we also offer an optional awning available on the street side of the trailer. Before you open your awning, be sure that you have enough open space next to the side of the trailer to fully extend the awning open.

You will find the remote stored in a kitchen galley drawer. Ensure it is secured in a safe place while in transit as it could fall and be damaged.

Turns on/off led light strip		Retracts awning in
Locks awning controls		Stops awning from being retracted or extended
Unlocks awning controls		Extends awning out
Toggles through channels (if equipped with dual awnings)		Ch. 0 - Controls both awnings Ch. 1 - Controls curbside awning Ch. 2 - Controls street side awning

* Ensure the master awning switch(es) is turned on to operate the awning remote.

NOTICE

BEFORE USING THE REMOTE, ENSURE THE AWNING POWER SWITCH(ES) ON THE MAIN SWITCH PANEL IS IN THE ON POSITION. ALWAYS CLOSE THE AWNING AND TURN OFF THE AWNING POWER SWITCH TO THE AWNING BEFORE TRAVELING. BE SURE TO CHECK FOR DEBRIS ON THE AWNING BEFORE RETRACTING.

On your remote, you will find controls for opening and closing the awning along with buttons to turn the integrated LED lights on or off. The powered awning also features a motion sensor. In the case the sensor detects strong winds, the awning will automatically close. The sensitivity of the sensor can be adjusted if necessary. See your awning manual for more details.

For operating instructions, adjustments, and troubleshooting, view the manufacturer’s manual.

STORAGE BASKET (OPTIONAL EQUIPMENT)

⚠ WARNING

NEVER OPERATE A PORTABLE GENERATOR IN THIS BASKET. CHECK WITH YOUR GENERATOR’S MANUFACTURER TO DETERMINE A SAFE OPERATING DISTANCE FROM THE LP GAS SYSTEM.

A popular add-on, your storage basket will be secured on the front of your travel trailer; it is useful for transporting generators or other camping accessories.

LEGACY ELITE II STORAGE BASKET LIMIT - 150 LBS

	<p>NEVER remove this label</p>	<p>NE JAMAIS N'enlevezr JAMAIS cette étiquette</p>
	<p>⚠ WARNING To prevent SERIOUS INJURY, DEATH, or PROPERTY DAMAGE:</p>	<p>⚠ ATTENTION AVERTISSEMENT Pour éviter les accidents entraînant des BLESSURES GRAVES, des DÉCÈS Ou ou des DOMMAGES MATÉRIELS :</p>
	<ul style="list-style-type: none"> • Ensure that the contents of the storage basket are properly secured. • DO NOT exceed the storage basket's MAXIMUM WEIGHT CAPACITY of 150 LBS. • NEVER operate a portable generator in the storage basket. • CHECK with your generator's manufacturer to determine a safe operating distance. • ALWAYS CHECK whether your trailer's weight is properly distributed. • For additional information visit us at olivertraveltrailers.com 	<ul style="list-style-type: none"> • Il faut s'assurer que le contenu de panier de rangement est correctement sécurisé. • NE PAS dépasser le POIDS MAXIMAL de 150 lb (équivalent de 68 Kg) pour le panier de rangement. • NE JAMAIS Ne faites re JAMAIS fonctionner un générateur portable dans le panier de rangement. • VÉERIFIER avec votre fabricant du générateur pour déterminer une distance de fonctionnement en toute sécurité. • TOUJOURS VÉERIFIER que le poids de la remorque est correctement réparti. • Pour plus d'informations, visitez nous à olivertraveltrailers.com

CURBSIDE EXTERIOR FOLDABLE TABLE

⚠ WARNING	NEVER EXCEED THE WEIGHT LIMIT OF 20 LBS ON THE TABLE.
------------------	--

Your travel trailer is equipped with an exterior foldable up table that is ideal for placing drinks, food, or cooking utensils on while cooking outside or enjoying a relaxing evening.



Exterior Table in Stowed Position



Exterior Table in Up Position

To use the exterior table, turn the marine-grade latch and pull the table up. The table is equipped with hardware that locks the table in the up position.

When you are ready to stow the table down, press the clips on the bottom of both arms and push the table down. The table should lock in the stowed position when pushed down all the way.

REAR BUMPER RECEIVER (OPTIONAL EQUIPMENT)

Useful for a bike rack or other compatible camping accessories. An RV-approved bike rack or other accessories that fit a 1.25" receiver is recommended.

ACCESSORY RECEIVER WEIGHT LIMIT - 150 LBS

	NEVER remove this label	Ne retirez JAMAIS cette étiquette olivertraveltrailers.com
 WARNING To prevent SERIOUS INJURY, DEATH, or PROPERTY DAMAGE:	 ATTENTION Pour prévenir les BLESSURES GRAVES, LE DÉCÈS ou LES DOMMAGES MATÉRIELS:	
<ul style="list-style-type: none"> • DO NOT exceed this receiver's MAXIMUM WEIGHT CAPACITY of 150 LBS. (This includes both racks and baskets, as well as their contents) • ALWAYS CHECK whether your trailer's weight is properly distributed. • DO NOT modify this receiver. • DO NOT use an adapter on this receiver. • DO NOT exceed a total length of 24" from the end of the receiver to the outside of the attached accessory. • For additional information, visit us at olivertraveltrailers.com. 	<ul style="list-style-type: none"> • NE PAS dépasser la CAPACITÉ MAXIMALE DE POIDS de cet attelage de 68 kg. (Y compris les supports et les paniers et leurs contenus) • Vérifiez TOUJOURS si le poids de votre remorque est correctement réparti. • NE PAS modifier cet attelage • NE PAS utiliser un adaptateur pour cet attelage • NE PAS dépasser une longueur totale de 61 cm (24") du bout de l'attelage à l'extérieur de l'accessoire attaché. • Pour plus d'informations, visitez olivertraveltrailers.com 	



INTERIOR

MAXXAIR CABIN FAN

The MaxxAir fan installed in your Oliver functions as an effective air exhaust or intake. The 12-volt fan is operated either remotely or using the built-in switch panel. It is recommended to use the MaxxAir fan while cooking. The remote will be located in either your kitchen galley drawer or pantry. The vent cover on the fan features a curved design and allows you to keep your fan open during the rain or even while in transit.

For operating instructions and troubleshooting, view the manufacturer's manual.

MAXXAIR BATH FAN

The bathroom exhaust fan is located in the ceiling and is easy to operate.

For operating instructions and troubleshooting, view the manufacturer's manual.

HEATING AND COOLING PACKAGES

There are two component packages for heating and cooling your travel trailer. Both packages use the Truma VarioHeat furnace.

- 1. STANDARD PACKAGE: Truma VarioHeat Furnace, Dometic A/C & Suburban Water Heater**
- 2. OPTIONAL UPGRADE PACKAGE: Truma VarioHeat Furnace, Truma Aventa Eco A/C, and Truma AquaGo On Demand Water Heater**

TRUMA COMPONENTS & CP PLUS CONTROL PANEL

The standard Truma furnace, optional Truma A/C, and optional Truma AquaGo Water Heater are controlled by the Truma CP Plus control panel mounted on the street side upper cabinet.

For operating instructions and troubleshooting, view the manufacturer's manual.

DOMETIC THERMOSTAT

If your trailer is equipped with the 'Dometic Package,' the Dometic Capacitive Touch Thermostat will be installed to control the Air Conditioner, along with the Truma CP Plus to control the VarioHeat Furnace.

For operating instructions and troubleshooting, view the manufacturer's manual.

GALLEY

The Kitchen Galley cabinet is one of only a few wood components you will find in the Oliver. These handcrafted dovetail drawers feature soft-close slides and a snap-close feature to provide an additional 10-pound capacity, helping to prevent them from opening in transit. Before traveling, always ensure you fully push the drawers in to activate the snap-close feature.

COUNTERTOPS

The standard countertops on both models is our luxury Fiber-Granite countertops packages. See our maintenance section for care instructions.

⚠ WARNING

FIBER-GRANITE IS NOT INTENDED FOR DIRECT CONTACT WITH HOT POTS, PANS, ETC.. ALWAYS USE A SUITABLE TRIVET MAT.

COOKTOP

For operating instructions and troubleshooting, view the manufacturer’s manual.

REFRIGERATOR

The refrigerator-freezer combo in your Oliver can be operated two ways; AC (120-volt shore power) or DC (12-volt battery power). When the refrigerator is in auto mode it will automatically switch between AC and DC. There is a cold setting button to cycle cold levels from 1 to 7. To open the refrigerator door, press the latch on the top and pull open.

⚠ WARNING

BEFORE SWITCHING ON THE UNIT, ALWAYS MAKE SURE THAT THE BATTERIES ARE IN OPTIMAL CONDITION.

For operating instructions and troubleshooting, view the manufacturer’s manual.

REFRIGERATOR VENTING

Your travel trailer is integrated with a vent on the curbside by the door. The compressor type refrigerator does not require exterior venting. A vent cover and vent blank is installed that closes the vent hole. In summer conditions, the vent blank can be removed to allow the compressor heat to vent outside.



Refrigerator Vent on Curbside of Trailer



Refrigerator Vent Blank

Turn the two knobs on the vent cover and remove. Remove the vent blank to close or open the vent as needed. Replace the vent cover.

FOOD STORAGE

If the recreational vehicle is left for a period of time without use, all foods should be removed from the storage areas and refrigerator. The refrigerator should be turned off and the door propped open for ventilation.

MICROWAVE

The microwave is located above the refrigerator.

NOTICE

IT IS IMPORTANT TO STOW AWAY THE MICROWAVE PLATE TO PREVENT IT FROM BREAKING DURING TRANSIT.

For operating instructions and troubleshooting of the microwave or optional convection microwave, view the manufacturer's manual.

SHOWER TRACK PACKAGE (OPTIONAL EQUIPMENT)

If you ordered the optional Shower Curtain Package, this will transform your Wet bath into a hybrid dry/wet bath.

The shower curtain package allows you to cover your shower door, as well as separate your toilet from the shower, giving you a hybrid bathing area.

For added convenience, we have installed an additional water pump switch in the bathroom on the front of the vanity. You will need to turn this switch on when using the water in the bathroom from your freshwater tank.

BATH VANITY

The vanity is integrated with a waterproof toilet paper dispenser on the side and flush-mounted hand towel bar in the front. You will also find a towel bar mounted on the wall above the toilet.

BATH LIGHT & STORAGE

The light switch is inside the bathroom on the bottom of the overhead storage. The overhead storage in the bathroom gives you storage space for extra toiletries.

ENTERTAINMENT SYSTEM

If your Oliver is equipped with the full entertainment system it consists of a stereo/DVD head unit, a TV, and four speakers located throughout the main cabin.

FURRION STEREO

The stereo offers many functions, such as FM radio, CD and DVD capabilities, an auxiliary port, a USB port, Bluetooth, a headphone jack, and dual output capabilities.

For operating instructions and troubleshooting, view the manufacturer's manual.

TELEVISION

You will find remotes for both the smart TV and stereo located in the kitchen galley drawer at delivery. The TV operates on 120-volt power. If you are camping off-grid and your trailer is equipped with an inverter, you will need to turn the inverter on to operate the TV. If your trailer is not equipped with an inverter and not hooked up to 120-volt power, you will need to install a small inverter in the attic to utilize the TV.

The TV is swivel mounted so it can be stowed while not in use, simply push upward on the bottom of the TV until the mount locks the TV in the stowed position. To unlock the TV from the stowed position, simply push up on the bottom of the TV to unlock and pull the TV down.

For operating instructions and troubleshooting, view the manufacturer’s manual.

PLAYING TV SOUND THROUGH THE ONBOARD SPEAKERS

The sound from the TV can be heard through the onboard speaker system that is integrated with the Furrion Stereo unit.

1. Press the Power button on the Furrion head unit to turn the radio ON
2. Select the “Aux” button multiple time on the radio until you get to “ARC”
3. Adjust volume from the radio’s dial or remote

Make sure Zones 1 and 2 are turned on or you will not hear sound from the speakers.

OMNI-DIRECTIONAL ANTENNA OPTION (OPTIONAL EQUIPMENT)

If you have added the Omni-directional antenna to your Ollie, it will allow you to watch over the air TV through your entertainment system. The TV may need to scan for channels before it can display programs and their associated information. A channel scan is required for free over-the-air channels.

To turn on the Omni-Directional antenna...

- Press the black power button on the power injector plate, located on the left in the rear attic. The indicator light will be illuminated green when turned on.



To perform an auto channel scan on your TV...

- Menu > TV Channels > Find Channels

Wait until the channel scan is 100% complete. Highlight Done and press OK.

If the channel scan is canceled, the channels that were already discovered are retained.

PORTABLE SATELLITE ANTENNA OPTION (OPTIONAL EQUIPMENT)

If you have ordered the Satellite Antenna, the portable satellite antenna comes with a tripod stand. The portable option allows you to manually move your antenna to gain the best satellite reception. This is ideal when camping in areas that have overhanging trees. While this option gives you some flexibility, it does require it to be stored in your closet or tow vehicle when in transit. You will need a satellite receiver to gain access to the satellite TV signals. The satellite antenna is compatible with Direct TV, Dish Network, and Bell TV.

If you did not purchase an Omni-Directional or Satellite antenna, a standard antenna will be installed on your travel trailer to capture AM/FM signals for your stereo.

For operating instructions and troubleshooting, view the manufacturer's manual.

INTERIOR STORAGE

On the inside of your Ollie, you will find plenty of storage for all your personal items. The oversized closet in your Oliver provides Ample storage with its two shelves and clothes hanging rod. If you have opted for the standard floor plan, you will notice a filler panel on the wall in the closet. The filler panel is used when you are converting the seating area to a sleeping area. Also in the closet, you will notice that the bathroom vent pipe runs through the closet wall and out through the roof.

OVERHEAD CABINETS

The lighted overhead cabinets are great for storing all of your lightweight items. The doors come standard in a translucent frosted acrylic or all black. Each door is operated with the marine-style latches that you have seen throughout the trailer. All of the overhead cabinets are dressed with a rubber mat to reduce contents from sliding around during transit. The lights in the upper cabinets are controlled from the upper switch panel just to the right of the kitchen galley.

The Legacy Elite II has a pantry with two shelves next to the dinette that can be used for storing dry foods or other personal items. You can also access the basement storage from the access panel below the bedding on the street side of the trailer or from the optional basement access door installed on the bottom of the rear seating area or nightstand.

SEATING AND SLEEPING

If you have purchased the Standard Floor Plan, you will find a rear dining table with seating that can be converted to a bed.

STANDARD FLOOR PLAN REAR SEATING/SLEEPING CONVERSION

1. To convert the rear seating area into a bed, you will need to retrieve the filler panel from the closet. You will find it velcroed to the left wall.
2. Lift the tabletop off of the legs and set it aside.
3. Turn the collar on the table legs clockwise to loosen.
4. Next, turn the leg counterclockwise to remove it.
5. Take the tabletop and slide it along the edges of the curbside and streetside seating areas.
6. Use the filler panel to fill in the extra space in the front.
7. Now simply move the back cushions to fill in the space.
8. Reverse the steps when you want to use the rear dining table again.

If you purchased the Twin Bed floor plan, you will find a rear nightstand that allows you to store personal items inside it. The two twin beds are 75 inches long by 30 inches wide. You may have purchased the upgraded mattress option. While custom sheets are not currently available, you can use standard bed sheets for these mattresses and use straps or pins to keep them in place.

DINETTE

The dinette area of your Oliver is furnished with a table and two seats that easily transform into a sleeping area. It is easy to convert the dinette into a single bed.


DINETTE SEATING/SLEEPING CONVERSION

1. Loosen the two threaded fasteners on the bottom of the table that connect to the wall. Now, you can lift the dinette table out of the brackets and off the table leg.
2. Set the table to the side. Turn the collar on the table leg clockwise to loosen. Then turn the leg a quarter turn counterclockwise and remove. Take the tabletop and place it between the base of the two dinette seats.
3. Now, simply use your back cushions to fill in the space.
4. Reverse the steps when you want to use the dinette as a table with seating for two.

For more information about converting the seating areas to sleeping, see our videos on Oliver University - <https://olivertraveltrailers.com/oliver-university/>


OLIVER
LEGACY ELITE II

STANDARD FLOOR PLAN
SEATING DIAGRAM

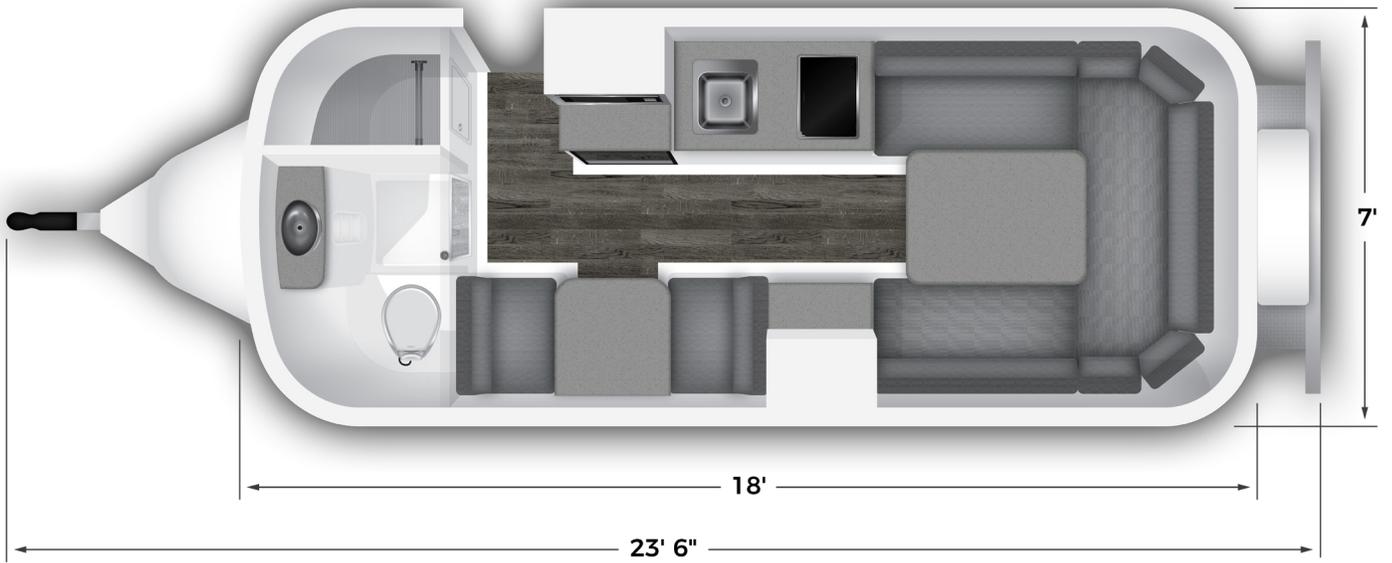


OLIVER
LEGACY ELITE II

STANDARD FLOOR PLAN
SLEEPING DIAGRAM

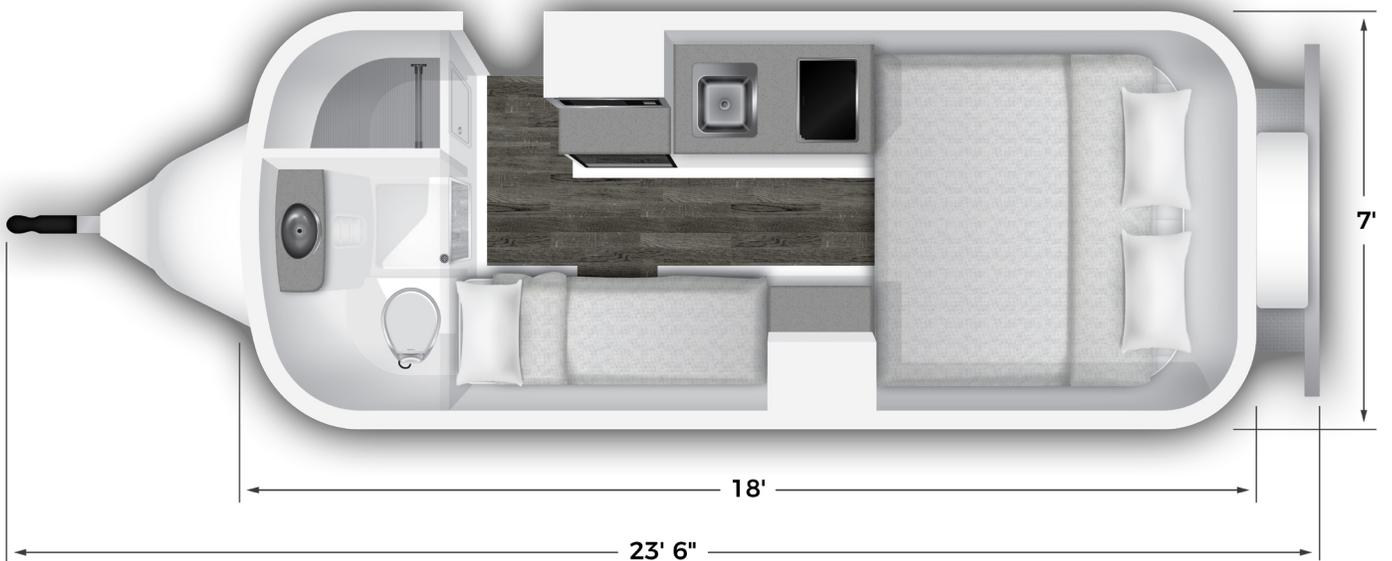


OLIVER
LEGACY ELITE II

TWIN BED FLOOR PLAN
SEATING DIAGRAM

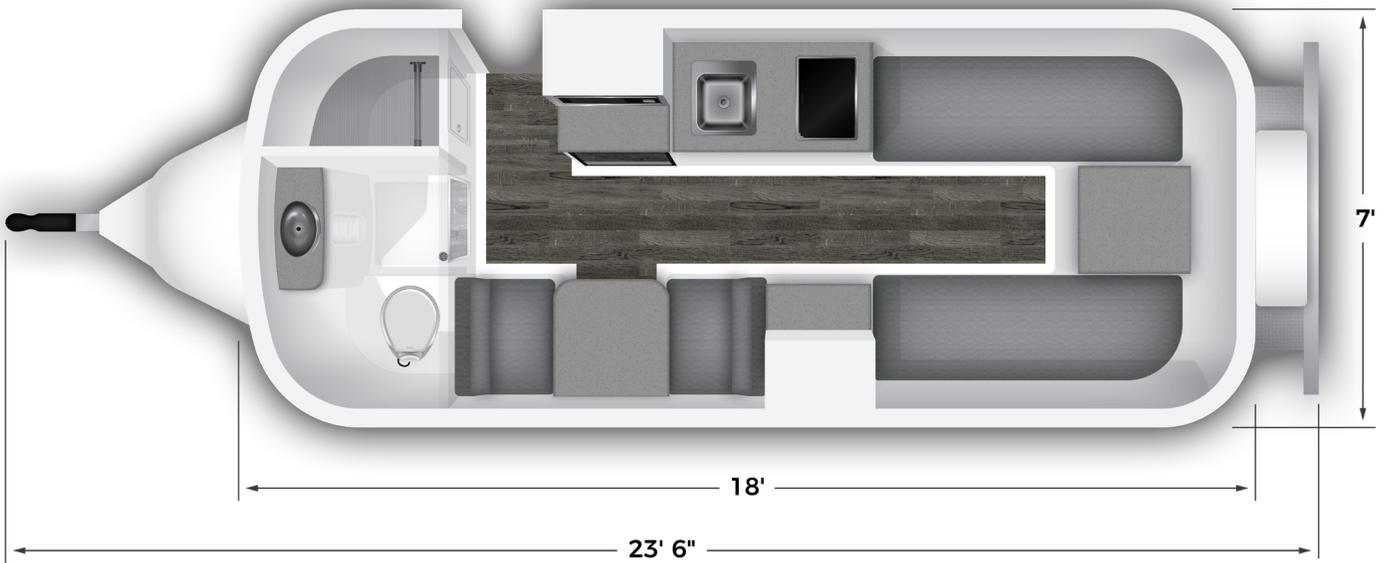

OLIVER
LEGACY ELITE II

TWIN BED FLOOR PLAN
SLEEPING DIAGRAM

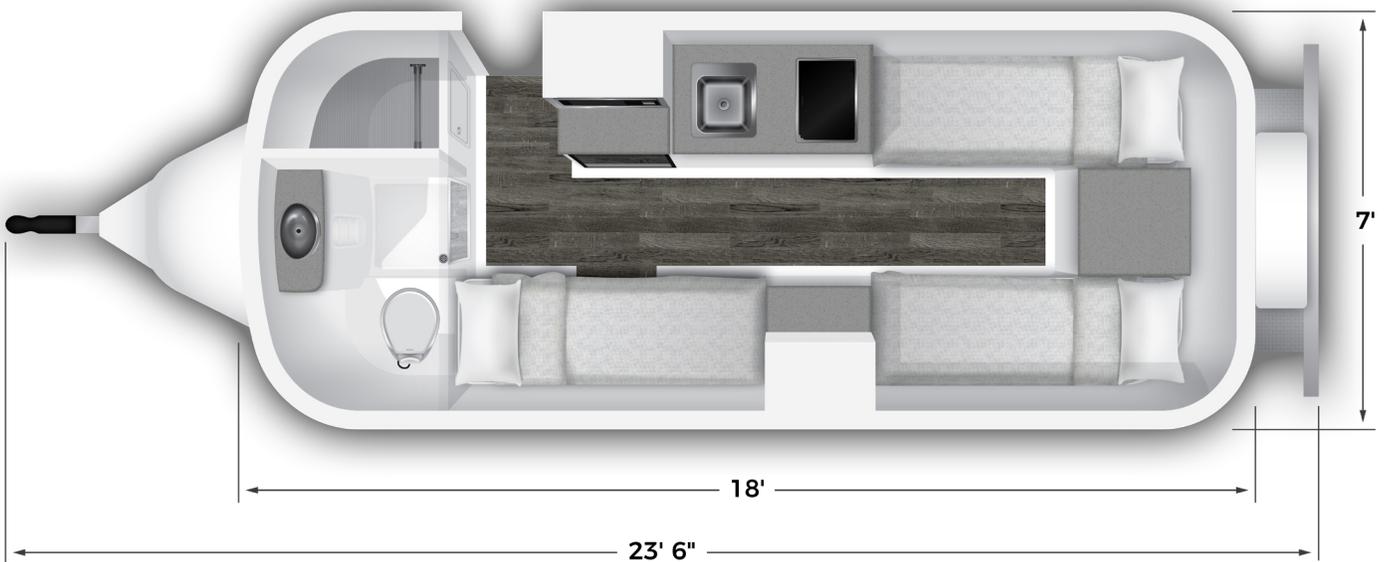



MAINTENANCE

OVERVIEW

The limited warranty and the limited warranties issued by component manufacturers require periodic service and maintenance and the owner's failure to provide this service and/or maintenance may result in loss of warranty coverage for that item. The owner should review Oliver Travel Trailer's (OTT) limited warranty and the limited warranty of all manufacturers of component parts of your Oliver.

Care and maintenance of the recreational vehicle is an important step in maintaining the safety, dependability, and appearance of the unit. Keep good records of all maintenance performed since these may be necessary for warranty information or may assist in possible repairs needed.

Operational usage and climate may affect the frequency of necessary maintenance. Preventative maintenance is important to the life and enjoyment of any recreational vehicle. Many problems can be caught before they occur. Please do not hesitate to call your dealer with a question on maintenance or care of any items.

Always refer to the manufacturers' recommendations located within their operating manual.

FIBERGLASS

Your Oliver Travel Trailer is composed of finished fiberglass in both inner and outer shells. It requires the same care as a fine automobiles' finish. Wash your Oliver at least once a month. Use warm water and a mild detergent to clean the finish. Take care to avoid spraying water directly into the refrigerator, water heater, and furnace vents when washing the Oliver. Remove bird and tree sap droppings, insects, and tar as soon as possible to avoid staining of the finish.

Any finish will deteriorate with time. Dulling and fading can be increased by exposure to extreme sunlight, air pollutants, and excessive moisture. Surface weathering of fiberglass does not change the strength of the fiberglass.

Regular washing and waxing of exterior surfaces is the best insurance against surface deterioration such as fading, yellowing, or chalking.

Wax fiberglass surfaces at least once a year with standard liquid or paste wax. (In some areas it is best to wax twice a year). Make sure to follow the directions for use as outlined by the product manufacturer. Make sure to wash and wax your unit out of the hot sun and when exterior surfaces are cool.

Storage of the Oliver out of direct sun also helps preserve its fiberglass finishes. Physical damage to fiberglass should be taken care of immediately to avoid moisture from entering through breaks, reducing its exceptional insulative properties and possibly causing problems with interior walls and components. Cover breaks in the fiberglass with plastic, sealing the edges with tape until proper repairs can be made.

NOTE: Do not use a rubbing compound or any abrasive cleaner or abrasive cloth on the Oliver. If using a tar and insect remover, make sure it is safe for use on painted surfaces.



FRAMES

We use a 2" x 5" 6061 boxed aluminum that is ¼ inch thick for most of the frame along with cross-sections for added strength. The tongue section of the frame is a heavy-duty 5/8" thick aluminum.

The galvanized-dipped steel sub-assembly is attached to the aluminum frame and allows us to attach the Dexter axles, gas shocks, and leaf springs.

To help reduce corrosion to the frame, we also install sacrificial zinc-anodes in several locations on the bottom of the frame. When two different metals are in contact and subject to corrosion, the current flow between the two metals will cause the least corrosion-resistant Zinc to corrode more and the more corrosion-resistant steel to corrode less. This will add years of life to your chassis.

You will need to check these every few years and replace as needed. You should wash the frame regularly, especially when towing the Oliver in the winter, in areas where road salts are used.

AXLES & SUSPENSION

The axles feature Dexter's Never Adjust electric brakes that will give you exceptional control when braking. The axles are also equipped with bronze bushings and grease zerks rather than brass, giving them a longer lifespan and more resistance to corrosion. The Nev-R-Lube axle(s) are sealed for life which means increased durability and reliability and no more bearing maintenance. They are warrantied for 5-years or 100,000 miles against defects in material and workmanship.

Legacy Elite II models are also equipped with the Dexter EZ-Flex Suspension that helps reduce downward force by up to 80 percent, giving you a smoother ride. The bushings require periodic maintenance by greasing the wet-bolts.

SEALS AND ADHESIVES

It is important to maintain the seals and adhesives of your Oliver to prevent moisture from entering and destroying your Oliver. When washing your Oliver inspect the seals for signs of drying out and wear. You should also inspect the exterior caulk and reseal as necessary. Weather, sun, and road vibration will affect the seals and silicone/caulk causing them to dry, crack or separate. Oliver recommends resealing the exterior shell of your camper at least once every year. It may be necessary to reseal more often in some environments.

DRAINAGE SYSTEM

The drainage system, including the tanks and associated drain piping, should be periodically inspected for road damage. Any deterioration of the sealant around joints and fittings should be repaired immediately. We recommend using a valve lubricant periodically to keep the seals in the blade valves operating smoothly.

WINDOWS AND DOORS

Check the seals around the windows and doors at regular intervals. Follow previous instructions for checking the condition of seals and repairing as necessary.

- Make sure that windows remain operative by adjusting and lubricating latches and moving parts annually.
- Check the condition and operation of the door locks, lubricating as necessary.
- Use powdered graphite or light oil to lubricate moving parts on doors and windows.
- Keep screens and window slides clean and free of debris to maintain proper operation.
- Be sure to check the weep holes in the slides and remove any obstructions.
- Test the operation of all windows occasionally to make sure they are working properly, closing flush and that the locks are holding tight.

UPHOLSTERY

Regular vacuuming will help keep colors fresh and prolong wear. Apply a quality upholstery shampoo [mixed to the manufacturer's instructions], to a small inconspicuous area of the fabric. If there are no adverse effects, clean the remaining area. Use suds (not water) and apply with a soft brush in a light, circular motion. When dry, vacuum. If the shampoo does not clean the test area properly, contact a professional cleaner.

NOTE: Cushion seats are subject to normal deterioration and to wear and exposure. Normal protective measures can help ensure longer fabric life.

ELECTRICAL

The electrical system requires minimal maintenance under normal circumstances. Most electrical maintenance in the recreational vehicle involves the battery. Keeping the battery properly maintained will help to eliminate many frustrating electrical problems. If you experience electrical problems with your recreational vehicle, make sure to have it checked by a qualified electrician. For AGM and Lithium batteries, see the manufacturer's component manual in the Optional Component Manual.

TV ANTENNA: Keep the antenna clear of bugs or dust. Wash it with a mild soap detergent. Never use an abrasive type cleaner on the finish. While traveling in heavily wooded areas watch for trees, limbs, etc., to be sure the antenna clears.



PROPANE

⚠ WARNING

FAILURE TO COMPLY COULD RESULT IN SERIOUS INJURY OR DEATH.

The hoses, pipes, tubes, and fittings used in your LP system are designed to withstand pressures far exceeding those of the LP system. However, because environment and time can contribute to the deterioration of these components, they must be inspected for wear at regular intervals. Be sure to inspect the hose before each Season, and when having the tank refilled. Look for signs of deterioration such as cracks or loss of flexibility. When replacing the hose or other LP components, make sure to always replace them with components of the same type and rating.

NOTICE

ROAD VIBRATION CAN LOOSEN LP GAS FITTINGS. IT IS IMPORTANT TO CHECK YOUR LP SYSTEM FOR LEAKS AT LEAST EVERY 5000 MILES AND WHENEVER THE TANK IS FILLED. IT IS ALSO A GOOD IDEA TO HAVE YOUR ENTIRE LP GAS SYSTEM CHECKED ANNUALLY BY A QUALIFIED LP GAS SERVICE REPRESENTATIVE.

CABINETS, COUNTERTOPS AND APPLIANCES

- Clean with hot soapy water or a good liquid cleaner. Avoid using abrasive cleaners or ammonia-based cleaners.
- When cleaning stainless steel with a mild cleanser, rub gently with the grain and rinse well. Rinse after each use and wipe down.
- Be sure to remove all food and ice from the refrigerator at the end of each trip.
- Prop the door open slightly to keep the interior dry and free of mold, mildew and odors.
- Make sure to read all literature provided with each of the appliances and follow the maintenance instructions included.
- Pay particular attention to any cautions or warnings included. Also read the rest of this manual and follow the instructions for the care and use of appliances.
- Do not place hot pans directly on countertops because they can damage or scorch the surface.

PRE-FINISHED PANELS AND WOOD SURFACES

Treat cabinetry surfaces as you would any fine furniture product in your home. Proper care and maintenance of wood products will help extend their life.

- Clean pre-finished panels with a spray-type furniture polish.
- Avoid getting wood surfaces wet.
- Wipe off and dry immediately if you do get wet.

- Do not use abrasive cleansers around wood finishes.
- Clean regularly with a soft cloth and cleaner designed for wood products such as lemon oil or any oil-based wood cleaning product.
- Avoid constant exposure to direct sunlight, which can cause fading and drying of wood surfaces.

CARE OF TABLE

Your table will warp if left in the wrong position for any length of time. During storage or non-use, the table should be left in the bed position, with the cushions left in the dining position. Never leave heavy items sitting on the table.

ABS PLASTIC

Some components of the recreational vehicle are constructed of strong, lightweight ABS plastic. Sometimes, it may be necessary to remove stains or generally clean. A mild solution of soap and water will clean many stains and should be used initially. Tougher stains may require stronger cleaners. Be sure to read the label to determine if the product is safe for use on ABS.

Avoid abrasive cleansers (even the liquid and cream types), alcohol-based products, and solvents such as acetone and MEK (methyl ethyl ketone). Gasoline and kerosene should not be used because of the damaging effect they have on the plastic surface, as well as the fire hazard they present. Often the damage caused by solvents, alcohol and oil-based products, may not be immediately noticeable, but the plastic is made weaker and prone to stress cracking.

ROOF VENTS

Check roof vents regularly for debris that may block airflow or jam the cranking mechanism and clean as necessary. Lubricate the cranking mechanism with light oil.

LIGHTING

Make sure to check the operation of all exterior lights often. Even though many of the exterior lights are closed LED systems you can never account for external road hazards. Check all lights, including turn signals, headlights, running lights, brake, and backup lights, etc. to make sure they are working correctly. Replace burnt-out bulbs or cracked reflectors immediately.

CONDENSATION

Every Oliver camper is designed for 4-Season camping however cold weather can bring along with it unwanted moisture. This natural phenomenon brings positive and negative effects for your camper. The increase of moisture in the air can make the air feel warmer but it also brings the possibility of condensation inside your camper. Eventually, this condensation as it builds up can become a problem as the water may start to fog up your windows, run down the side of your camper, or even drip onto your mattresses.



MAINTENANCE

In a typical RV, you might not even notice this issue as it may hide in your wood walls and floors or carpeted walls, eventually turning into mold and rot. In the Oliver, there is nothing to hide this natural phenomenon which definitely puts a spotlight on the problem at hand but also keeps you safe from future major repairs. The main question is how to deal with this so it does not cause problems in the future.

- 1. USE A DEHUMIDIFIER:** Just like you might have a dehumidifier at home in your basement, you should have one in your camper during the cold season. If you choose to use one with a holding tank be sure to empty it out frequently. You can also use a dehumidifier that has special beads that absorb moisture in the air and then they can be replenished. Be sure to replenish these units outside the camper so you aren't just putting the moisture right back inside the camper.
- 2. USE YOUR EXHAUST FANS WHEN COOKING OR SHOWERING:** Water vapor is being put into the air inside your camper every time you cook or shower. To help rid your camper of this unwanted water vapor that will turn into condensation, turn on your exhaust fans and exhaust it outside the camper.
- 3. OPEN A WINDOW:** Just by opening a window when it's chilly outside it can help reduce the inside humidity. This may make your heat source work a bit harder and it isn't recommended when it's raining outside but the payoff on reducing the inside moisture may be worth it.
- 4. INCREASE THE TEMPERATURE:** Condensation is created because water vapor in the air is cooled and turned back to liquid form. By increasing the inside temperature it may help reduce the amount of condensation.
- 5. MONITOR THE HUMIDITY:** Some moisture in the air is good for you so monitoring the inside humidity and keeping it somewhere between 30 – 50% is okay. You can buy a hygrometer that displays the humidity level inside your camper.
- 6. USE A MOISTURE ABSORBER:** You can get different products that absorb moisture in the air and helps prevent excessive humidity. This type of product works well in closed areas of your camper like a closet or other closed storage area that may not be heated.
- 7. USE AN ANTI-MOISTURE MATTRESS UNDERLAY:** You can purchase a special underlay material that provides airflow under your mattress. This will help to prevent moisture buildup, mold, and mildew.

STORING YOUR OLIVER

If storing the travel trailer (or other extreme conditions), certain precautions need to be taken to protect it until you use it again. Make sure to talk with Oliver concerning any special requirements for storage in your particular geographic area. The following steps are general and Oliver can help you choose those that are most appropriate for your needs.

1. Make sure to park the recreational vehicle on a level surface.
2. Make sure to winterize the Oliver as outlined in the next few pages.
3. Clean the recreational vehicle thoroughly, both inside and out, as previously outlined, including the refrigerator.
4. Make sure all electrical switches and appliances are off.
5. Close all mini-blinds to protect the trailer interior from UV sunlight.
6. Make sure all windows, doors, and vents are closed securely. Cover exterior vents on appliances to prevent moisture and insects from entering during storage.
7. Make sure the tires are inflated to correct pressures.
8. Check the interior of the recreational vehicle periodically while in storage to make sure leaks have not developed or condensation formed that can damage interior components. Condensation can most readily be observed as moisture accumulation on windows and mirrors. To reduce condensation, make sure to occasionally air out the recreational vehicle during storage.
9. If snow accumulates on the Travel Trailer, try to remove it as often as you can.
10. Leave the refrigerator door open.
11. Refer to the Electrical section of this manual for proper storage and maintenance of all battery types..

TIRES

Tires play an important role in the load carrying capacity of the vehicle. To ensure good tire life, check them often. Inspect the general condition of the tires, as well as the air pressure.

Always check the air pressure when the tire is cold. Tires that are hot from traveling will show high pressures. The maximum tire pressure and the load carrying capacity of the tire are imprinted on each tire sidewall. Always inflate your tires to their correct pressure. Don't over or under inflate. Under inflated tires will run hot, shorten the tire's life and decrease the Oliver safe load limit. Over inflated tires will cause a rough and bouncing ride that can damage RV components or cargo. It is a good idea to always carry an accurate tire pressure gauge in the RV to make these checks. If pressure checks indicate a tire is losing air, check for signs of valve leakage, penetration or wheel and rim damage. Under or over inflating tires can cause tires to fail.

The way you drive can have a significant effect on the wear and life of tires. High speeds, unusual use of the brakes, taking corners too quickly and bad roads all can contribute to the early wear and failure of your tires. When you drive on surfaces with holes or rocks and other loose objects that can damage tires and cause misalignment, make sure to reduce speed and drive carefully. If you notice damage to a tire such as a bulge, uneven wear or damage by a foreign object or the road, have it inspected and repaired or replaced as needed at a reputable repair facility.



MAINTENANCE

NOTE: Cold tire inflation pressure is defined as a tire that has not been used for three or more hours, or has been driven less than one mile. Tire inflation pressure of a hot tire may show an increase of as much as 6 psi over a cold tire. Measure and adjust tire pressure when the tires are cold.

⚠ WARNING

- **SOME MAINTENANCE MAY REQUIRE THE USE OF SPECIAL TOOLS. DO NOT ATTEMPT TO SERVICE, REPAIR OR WORK ON ANY AXLE, BRAKE OR WHEEL SYSTEM UNLESS YOU HAVE APPROPRIATE SKILLS, KNOWLEDGE AND THE PROPER TOOLS. LACK OF PROPER TRAINING, FAILURE TO FOLLOW PROCEDURES OR USE SPECIAL TOOLS AND SAFETY EQUIPMENT COULD RESULT IN PROPERTY DAMAGE, SERIOUS INJURY OR LOSS OF LIFE.**
- **WHEN REPLACING A TIRE, MAKE SURE TO REPLACE IT WITH A TIRE OF THE SAME SIZE AND SPECIFICATIONS. NEVER USE DIFFERENT TYPES OF TIRES TOGETHER ON THE RV (I.E. RADIAL AND BIAS-BELTED). MIXING OF TIRES CAN CAUSE HANDLING PROBLEMS, AS WELL AS UNUSUAL TIRE WEAR, BOTH OF WHICH CAN CREATE UNSAFE OR EVEN DANGEROUS DRIVING CONDITIONS. IF YOUR SPARE IS OF A DIFFERENT SIZE BE ESPECIALLY CAREFUL AND USE ONLY TO GET TO THE NEAREST REPAIR FACILITY.**

LUG NUT TORQUE SPECS

It is also important to have the wheel nuts checked regularly to make sure they have not loosened during travel. Follow the schedule for regular wheel nut torque checks. If you suspect that wheel nuts have loosened at any time, have them checked and torqued to proper limits immediately (110 ft/lbs).

OWNER AWARENESS

If you suspect or notice cracked or broken wheel stud bolts, they must be replaced, along with adjacent bolts. Adjacent bolts probably also have been weakened due to additional stress placed on them.

Make frequent inspections of wheels and tires, looking for signs of wear or damage. Avoid abusive driving habits, such as hitting curbs, or chug holes at high speed, which can damage tires and wheel components.

NOTICE

THE PROPER METHOD OF TIGHTENING WHEEL NUTS IS WITH A TORQUE WRENCH, NOT WITH AN IMPACT WRENCH OR BY HAND. BECAUSE OF THE IMPORTANCE OF HAVING PROPER TORQUE ON WHEEL NUTS, YOU SHOULD HAVE WHEELS MOUNTED AND PROPERLY TORQUED BY QUALIFIED PERSONNEL WITH THE PROPER TOOLS.

CHANGING A TIRE

⚠ WARNING

- **NEVER CHANGE ANY TIRE WITHOUT SECURELY CHOCKING THE REMAINING WHEELS. NEVER POSITION YOURSELF UNDER A RAISED TRAILER THAT COULD FALL ON YOU AND CAUSE SERIOUS INJURY OR EVEN DEATH!**
- **FAILURE TO RE-TIGHTEN WHEEL NUTS AS REQUIRED COULD ALLOW WHEELS TO COME OFF WHILE THE VEHICLE IS IN MOTION, CAUSING LOSS OF CONTROL, POSSIBLE COLLISION, SERIOUS INJURY OR EVEN DEATH!**

Turn on tow vehicle hazard warning flashers. Set emergency brake. If close to moving vehicles, set up flares or warning lights. Chock opposite tire and leave trailer hitched to tow vehicle. Set main tongue jack to stabilize front end.

REMOVE SPARE TIRE

The spare tire is located behind the custom formed fiberglass spare tire shell. Be sure to visually inspect the spare tire for any deterioration or damage.

Removing it takes a couple of steps:

1. Flip down license plate holder to access wing nut.
2. Remove wing nut and washer.
3. Now pull tire cover off and rest it on the ground.
4. Disconnect wiring for license plate light.
5. Remove the retainer ring holding spare tire
6. Remove tire.

Slightly loosen the lug nuts on the tire you want to remove. Locate the approved jack points on the steel sub frame. Using a bottle or scissor jack, raise the trailer until the tire clears the ground, then finish loosening and removing them. Pull off the old tire, slide the hubcap out backwards and insert it on spare. Set spare tire evenly on the lug nuts and hand tighten lug nuts. Retract front jack back to travel position and remove all external jacks. Now tighten lug nuts completely. Lug nuts should be torqued to 120 ft/lbs. Place the flat tire in the spare location. Have the damaged tire checked and repaired or replaced. Be sure to have lug nuts re-torqued within 50 miles since they may loosen and every 200 miles thereafter.

TIRE SAFETY INFORMATION

This portion of the User's Manual contains tire safety information as required by 49 CFR 575.6.

Section 1.1 contains "**Steps for Determining Correct Load Limit - Trailer**".

Section 1.2 contains "**Steps for Determining Correct Load Limit – Tow Vehicle**".

Section 1.3 contains a **Glossary of Tire Terminology**, including "cold inflation pressure", "maximum inflation pressure", "recommended inflation pressure", and other non-technical terms.

Section 1.4 contains information from the NHTSA brochure entitled "Tire Safety – Everything Rides On It".

This brochure, as well as the preceding subsections, describes the following items;

- Tire labeling, including a description and explanation of each marking on the tires, and information about the DOT Tire Identification Number (TIN).
- Recommended tire inflation pressure, including a description and explanation of:
 - A. Cold inflation pressure.
 - B. Vehicle Placard and location on the vehicle.
 - C. Adverse safety consequences of under inflation (including tire failure).
 - D. Measuring and adjusting air pressure for proper inflation.
- Tire Care, including maintenance and safety practices.
- Vehicle load limits, including a description and explanation of the following items:
 - A. Locating and understanding the load limit information, total load capacity, and cargo capacity.
 - B. Calculating total and cargo capacities with varying seating configurations including quantitative examples showing / illustrating how the vehicles cargo and luggage capacity decreases as combined number and size of occupants' increases. This item is also discussed in Section 3.
 - C. Determining compatibility of tire and vehicle load capabilities.
 - D. Adverse safety consequences of overloading on handling and stopping on tires.

1.1. STEPS FOR DETERMINING CORRECT LOAD LIMIT – TRAILER

Determining the load limits of a trailer includes more than understanding the load limits of the tires alone. On all trailers there is a Federal certification/VIN label that is located on the forward half of the left (road) side of the unit. This certification/VIN label will indicate the trailer's Gross Vehicle Weight Rating (GVWR). This is the most weight the fully loaded trailer can weigh. It will also provide the Gross Axle Weight Rating (GAWR). This is the most a particular axle can weigh. If there are multiple axles, the GAWR of each axle will be provided.


If your trailer has a GVWR of 10,000 pounds or less, there is a vehicle placard located in the same location as the certification label described above. This placard provides tire and loading information. In addition, this placard will show a statement regarding maximum cargo capacity. Cargo can be added to the trailer, up to the maximum weight specified on the placard. The combined weight of the cargo is provided as a single number. In any case, remember: the total weight of a fully loaded trailer can not exceed the stated GVWR.

For trailers with living quarters installed, the weight of water and propane also need to be considered. The weight of fully filled propane containers is considered part of the weight of the trailer before it is loaded with cargo, and is not considered part of the disposable cargo load. Water however, is a disposable cargo weight and is treated as such. If there is a fresh water storage tank of 100 gallons, this tank when filled would weigh about 800 pounds. If more cargo is being transported, water can be off-loaded to keep the total amount of cargo added to the vehicle within the limits of the GVWR so as not to overload the vehicle. Understanding this flexibility will allow you, the owner, to make choices that fit your travel needs.

When loading your cargo, be sure it is distributed evenly to prevent overloading front to back and side to side. Heavy items should be placed low and as close to the axle positions as reasonable. Too many items on one side may overload a tire. The best way to know the actual weight of the vehicle is to weigh it at a public scale. Talk to your dealer to discuss the weighing methods needed to capture the various weights related to the trailer. This would include the weight empty or unloaded, weights per axle, wheel, hitch or king-pin, and total weight.

Excessive loads and/or underinflation cause tire overloading and, as a result, abnormal tire flexing occurs. This situation can generate an excessive amount of heat within the tire. Excessive heat may lead to tire failure. It is the air pressure that enables a tire to support the load, so proper inflation is critical. The proper air pressure may be found on the certification/VIN label and/or on the Tire Placard. This value should never exceed the maximum cold inflation pressure stamped on the tire.

1.1.1. TRAILERS 10,000 POUNDS GVWR OR LESS

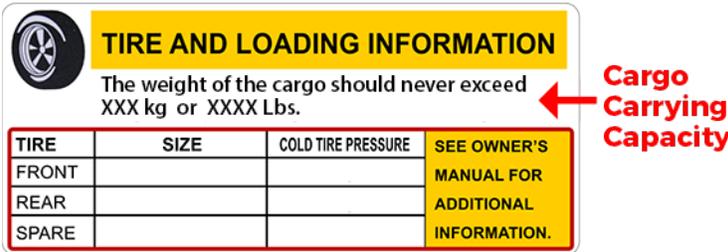

1. Locate the statement, “The weight of cargo should never exceed XXX kg or XXX lbs.,” on your vehicle’s placard. See figure 1-1.
2. This figure equals the available amount of cargo and luggage load capacity.
3. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity.



MAINTENANCE

The trailer's placard refers to the Tire Information Placard attached adjacent to or near the trailer's VIN (Certification) label at the left front of the trailer.

1.1.2. TRAILERS OVER 10,000 POUNDS GVWR (NOTE: THESE TRAILERS ARE NOT REQUIRED TO HAVE A TIRE INFORMATION PLACARD ON THE VEHICLE)

1. Determine the empty weight of your trailer by weighing the trailer using a public scale or other means. This step does not have to be repeated.
2. Locate the GVWR (Gross Vehicle Weight Rating) of the trailer on your trailer's VIN (Certification) label.
3. Subtract the empty weight of your trailer from the GVWR stated on the VIN label. That weight is the maximum available cargo capacity of the trailer and may not be safely exceeded.

1.2. STEPS FOR DETERMINING CORRECT LOAD LIMIT – TOW VEHICLE

1. Locate the statement, "The combined weight of occupants and cargo should never exceed XXX lbs.," on your vehicle's placard.
2. Determine the combined weight of the driver and passengers who will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kilograms or XXX pounds.
4. The resulting figure equals the available amount of cargo and luggage capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage capacity is 650 lbs. ($1400 - 750 (5 \times 150) = 650$ lbs.).
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage capacity calculated in Step # 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the tow vehicle's manual to determine how this weight transfer reduces the available cargo and luggage capacity of your vehicle.

1.3. GLOSSARY OF TIRE TERMINOLOGY

ACCESSORY WEIGHT: The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

BEAD: The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

BEAD SEPARATION: This is the breakdown of the bond between components in the bead.

BIAS PLY TIRE: A pneumatic tire in which the ply cords that extend to the beads are laid at alternate angles substantially less than 90 degrees to the centerline of the tread.

CARCASS: The tire structure, except tread and sidewall rubber which, when inflated, bears the load.

CHUNKING: The breaking away of pieces of the tread or sidewall.

COLD INFLATION PRESSURE: The pressure in the tire before you drive.

CORD: The strands forming the plies in the tire.

CORD SEPARATION: The parting of cords from adjacent rubber compounds.

CRACKING: Any parting within the tread, sidewall, or inner liner of the tire extending to cord material.

CT: A pneumatic tire with an inverted flange tire and rim system in which the rim is designed with rim flanges pointed radially inward and the tire is designed to fit on the underside of the rim in a manner that encloses the rim flanges inside the air cavity of the tire.

CURB WEIGHT: The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, and, if so equipped, air conditioning and additional weight optional engine.

EXTRA LOAD TIRE: A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

GROOVE: The space between two adjacent tread ribs.

GROSS AXLE WEIGHT RATING: The maximum weight that any axle can support, as published on the Certification / VIN label on the front left side of the trailer. Actual weight determined by weighing each axle on a public scale, with the trailer attached to the towing vehicle.

GROSS VEHICLE WEIGHT RATING: The maximum weight of the fully loaded trailer, as published on the Certification / VIN label. Actual weight determined by weighing trailer on a public scale, without being attached to the towing vehicle.

HITCH WEIGHT: The downward force exerted on the hitch ball by the trailer coupler.

INNERLINER: The layer(s) forming the inside surface of a tubeless tire that contains the inflating medium within the tire.

INNERLINER SEPARATION: The parting of the innerliner from cord material in the carcass.

INTENDED OUTBOARD SIDEWALL: The sidewall that contains a white-wall, bears white lettering or bears manufacturer, brand, and/or model name molding that is higher or deeper than the same molding on the other sidewall of the tire or the outward facing sidewall of an asymmetrical tire that has a particular side that must always face outward when mounted on a vehicle.



MAINTENANCE

LIGHT TRUCK (LT) TIRE: A tire designated by its manufacturer as primarily intended for use on lightweight trucks or multipurpose passenger vehicles.

LOAD RATING: The maximum load that a tire is rated to carry for a given inflation pressure.

MAXIMUM LOAD RATING: The load rating for a tire at the maximum permissible inflation pressure for that tire.

MAXIMUM PERMISSIBLE INFLATION PRESSURE: The maximum cold inflation pressure to which a tire may be inflated.

MAXIMUM LOADED VEHICLE WEIGHT: The sum of curb weight, accessory weight, vehicle capacity weight, and production options weight.

MEASURING RIM: The rim on which a tire is fitted for physical dimension requirements.

PIN WEIGHT: The downward force applied to the 5th wheel or gooseneck ball, by the trailer kingpin or gooseneck coupler.

NON-PNEUMATIC RIM: A mechanical device which, when a non-pneumatic tire assembly incorporates a wheel, supports the tire, and attaches, either integrally or separably, to the wheel center member and upon which the tire is attached.

NON-PNEUMATIC SPARE TIRE ASSEMBLY: A non-pneumatic tire assembly intended for temporary use in place of one of the pneumatic tires and rims that are fitted to a passenger car in compliance with the requirements of this standard.

NON-PNEUMATIC TIRE: A mechanical device which transmits, either directly or through a wheel or wheel center member, the vertical load and tractive forces from the roadway to the vehicle, generates the tractive forces that provide the directional control of the vehicle and does not rely on the containment of any gas or fluid for providing those functions.

NON-PNEUMATIC TIRE ASSEMBLY: A non-pneumatic tire, alone or in combination with a wheel or wheel center member, which can be mounted on a vehicle.

NORMAL OCCUPANT WEIGHT: This means 68 kilograms (150 lbs.) times the number of occupants specified in the second column of Table I of 49 CFR 571.110.

OCCUPANT DISTRIBUTION: The distribution of occupants in a vehicle as specified in the third column of Table I of 49 CFR 571.110.

OPEN SPLICE: Any parting at any junction of tread, sidewall, or innerliner that extends to cord material.

OUTER DIAMETER: The overall diameter of an inflated new tire.

OVERALL WIDTH: The linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

PLY: A layer of rubber-coated parallel cords.

PLY SEPARATION: A parting of rubber compound between adjacent plies.

PNEUMATIC TIRE: A mechanical device made of rubber, chemicals, fabric and steel or other materials, that, when mounted on an automotive wheel, provides the traction and contains the gas or fluid that sustains the load.

PRODUCTION OPTIONS WEIGHT: The combined weight of those installed regular production options weighing over 2.3 kilograms (5 lbs.) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

RADIAL PLY TIRE: A pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

RECOMMENDED INFLATION PRESSURE: This is the inflation pressure provided by the vehicle manufacturer on the Tire Information label and on the Certification / VIN tag.

REINFORCED TIRE: A tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire.

RIM: A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

RIM DIAMETER: This means the nominal diameter of the bead seat.

RIM SIZE DESIGNATION: This means the rim diameter and width.

RIM TYPE DESIGNATION: This means the industry of manufacturer's designation for a rim by style or code.

RIM WIDTH: This means the nominal distance between rim flanges.

SECTION WIDTH: The linear distance between the exteriors of the sidewalls of an inflated tire, excluding elevations due to labeling, decoration, or protective bands.

SIDEWALL: That portion of a tire between the tread and bead.

SIDEWALL SEPARATION: The parting of the rubber compound from the cord material in the sidewall.

SPECIAL TRAILER (ST) TIRE: The "ST" is an indication the tire is for trailer use only.

TEST RIM: The rim on which a tire is fitted for testing, and may be any rim listed as appropriate for use with that tire.

TREAD: That portion of a tire that comes into contact with the road.

TREAD RIB: A tread section running circumferentially around a tire.

TREAD SEPARATION: Pulling away of the tread from the tire carcass.

TREADWEAR INDICATORS (TWI): The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.



MAINTENANCE

VEHICLE CAPACITY WEIGHT: The rated cargo and luggage load plus 68 kilograms (150 lbs.) times the vehicle's designated seating capacity.

VEHICLE MAXIMUM LOAD ON THE TIRE: The load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

VEHICLE NORMAL LOAD ON THE TIRE: The load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with Table I of CRF 49 571.110) and dividing by 2.

WEATHER SIDE: The surface area of the rim not covered by the inflated tire.

WHEEL CENTER MEMBER: In the case of a non-pneumatic tire assembly incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the non-pneumatic rim and provides the connection between the non-pneumatic rim and the vehicle; or, in the case of a non-pneumatic tire assembly not incorporating a wheel, a mechanical device which attaches, either integrally or separably, to the non-pneumatic tire and provides the connection between tire and the vehicle.

WHEEL-HOLDING FIXTURE: The fixture used to hold the wheel and tire assembly securely during testing.

1.4. TIRE SAFETY - EVERYTHING RIDES ON IT

The National Traffic Safety Administration (NHTSA) has published a brochure (DOT HS 809 361) that discusses all aspects of Tire Safety, as required by CFR 575.6. This brochure is reproduced in part below. It can be obtained and downloaded from NHTSA, free of charge, from the following web site:

http://www.nhtsa.dot.gov/cars/rules/TireSafety/ridesonit/tires_index.html

Studies of tire safety show that maintaining proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tires or vehicle can safely handle), avoiding road hazards, and inspecting tires for cuts, slashes, and other irregularities are the most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

- Improve vehicle handling
- Help protect you and others from avoidable breakdowns and accidents
- Improve fuel economy
- Increase the life of your tires.

This booklet presents a comprehensive overview of tire safety, including information on the following topics:

- Basic tire maintenance
- Uniform Tire Quality Grading System

- Fundamental characteristics of tires
- Tire safety tips.

Use this information to make tire safety a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with the inconvenience and safety consequences of a flat tire or other tire failure.

1.5. SAFETY FIRST—BASIC TIRE MAINTENANCE

Properly maintained tires improve the steering, stopping, traction, and load-carrying capability of your vehicle. Underinflated tires and overloaded vehicles are a major cause of tire failure. Therefore, as mentioned above, to avoid flat tires and other types of tire failure, you should maintain proper tire pressure, observe tire and vehicle load limits, avoid road hazards, and regularly inspect your tires.

1.5.1. FINDING YOUR VEHICLE’S RECOMMENDED TIRE PRESSURE AND LOAD LIMITS

Tire information placards and vehicle certification labels contain information on tires and load limits. These labels indicate the vehicle manufacturer’s information including:

- Recommended tire size
- Recommended tire inflation pressure
- Vehicle capacity weight (VCW—the maximum occupant and cargo weight a vehicle is designed to carry)
- Front and rear gross axle weight ratings (GAWR—the maximum weight the axle systems are designed to carry).

Both placards and certification labels are permanently attached to the trailer near the left front.

1.5.2. UNDERSTANDING TIRE PRESSURE AND LOAD LIMITS

Tire inflation pressure is the level of air in the tire that provides it with load-carrying capacity and affects the overall performance of the vehicle. The tire inflation pressure is a number that indicates the amount of air pressure—measured in pounds per square inch (psi)—a tire requires to be properly inflated. (You will also find this number on the vehicle information placard expressed in kilopascals (kpa), which is the metric measure used internationally.)

Manufacturers of passenger vehicles and light trucks determine this number based on the vehicle’s design load limit, that is, the greatest amount of weight a vehicle can safely carry and the vehicle’s tire size. The proper tire pressure for your vehicle is referred to as the “recommended cold inflation pressure.” (As you will read below, it is difficult to obtain the recommended tire pressure if your tires are not cold.)

Because tires are designed to be used on more than one type of vehicle, tire manufacturers list the “maximum permissible inflation pressure” on the tire sidewall. This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.



1.5.3. CHECKING TIRE PRESSURE

It is important to check your vehicle's tire pressure at least once a month for the following reasons:

- Most tires may naturally lose air over time.
- Tires can lose air suddenly if you drive over a pothole or other object or if you strike the curb when parking.
- With radial tires, it is usually not possible to determine underinflation by visual inspection.

For convenience, purchase a tire pressure gauge to keep in your vehicle. Gauges can be purchased at tire dealerships, auto supply stores, and other retail outlets.

The recommended tire inflation pressure that vehicle manufacturers provide reflects the proper psi when a tire is cold. The term cold does not relate to the outside temperature. Rather, a cold tire is one that has not been driven on for at least three hours. When you drive, your tires get warmer, causing the air pressure within them to increase. Therefore, to get an accurate tire pressure reading, you must measure tire pressure when the tires are cold or compensate for the extra pressure in warm tires.

1.5.4. STEPS FOR MAINTAINING PROPER TIRE PRESSURE

- Step 1: Locate the recommended tire pressure on the vehicle's tire information placard, certification label, or in the owner's manual.
- Step 2: Record the tire pressure of all tires.
- Step 3: If the tire pressure is too high in any of the tires, slowly release air by gently pressing on the tire valve stem with the edge of your tire gauge until you get to the correct pressure.
- Step 4: If the tire pressure is too low, note the difference between the measured tire pressure and the correct tire pressure. These "missing" pounds of pressure are what you will need to add.
- Step 5: At a service station, add the missing pounds of air pressure to each tire that is underinflated.
- Step 6: Check all the tires to make sure they have the same air pressure (except in cases in which the front and rear tires are supposed to have different amounts of pressure).

If you have been driving your vehicle and think that a tire is underinflated, fill it to the recommended cold inflation pressure indicated on your vehicle's tire information placard or certification label. While your tire may still be slightly underinflated due to the extra pounds of pressure in the warm tire, it is safer to drive with air pressure that is slightly lower than the vehicle manufacturer's recommended cold inflation pressure than to drive with a significantly underinflated tire. Since this is a temporary fix, don't forget to recheck and adjust the tire's pressure when you can obtain a cold reading.

1.5.5. TIRE SIZE

To maintain tire safety, purchase new tires that are the same size as the vehicle's original tires or another size recommended by the manufacturer. Look at the tire information

placard, the owner's manual, or the sidewall of the tire you are replacing to find this information. If you have any doubt about the correct size to choose, consult with the tire dealer.

1.5.6. TIRE TREAD

The tire tread provides the gripping action and traction that prevent your vehicle from slipping or sliding, especially when the road is wet or icy. In general, tires are not safe and should be replaced when the tread is worn down to 1/16 of an inch. Tires have built-in treadwear indicators that let you know when it is time to replace your tires. These indicators are raised sections spaced intermittently in the bottom of the tread grooves. When they appear "even" with the outside of the tread, it is time to replace your tires. Another method for checking tread depth is to place a penny in the tread with Lincoln's head upside down and facing you. If you can see the top of Lincoln's head, you are ready for new tires.

1.5.7. TIRE BALANCE AND WHEEL ALIGNMENT

To avoid vibration or shaking of the vehicle when a tire rotates, the tire must be properly balanced. This balance is achieved by positioning weights on the wheel to counterbalance heavy spots on the wheel-and-tire assembly. A wheel alignment adjusts the angles of the wheels so that they are positioned correctly relative to the vehicle's frame. This adjustment maximizes the life of your tires. These adjustments require special equipment and should be performed by a qualified technician.

1.5.8. TIRE REPAIR


The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall should not be repaired. Tires must be removed from the rim to be properly inspected before being plugged and patched.

1.5.9. TIRE FUNDAMENTALS

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and also provides a tire identification number for safety standard certification and in case of a recall.



1.5.9.1. INFORMATION ON PASSENGER VEHICLE TIRES

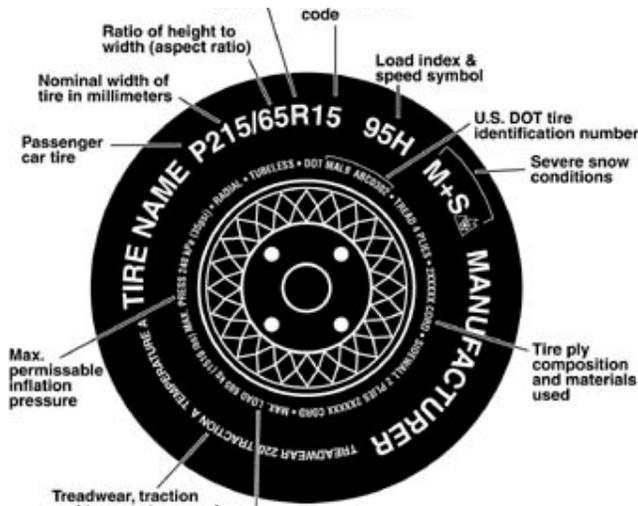

P: The “P” indicates the tire is for passenger vehicles.

NEXT NUMBER: This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge. In general, the larger this number is, the wider the tire.

NEXT NUMBER: This two-digit number, known as the aspect ratio, gives the tire’s ratio of height to width. Numbers of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

R: The “R” stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

NEXT NUMBER: This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

NEXT NUMBER: This two- or three-digit number is the tire’s load index. It is a measurement of how much weight each tire can support. You may find this information in your owner’s manual. If not, contact a local tire dealer.

NOTE: You may not find this information on all tires because law does not require it.

M+S: The “M+S” or “M/S” indicates that the tire has some mud and snow capability. Most radial tires have these markings; hence, they have some mud and snow capability.

SPEED RATING: The speed rating denotes the intended speed at which a tire is designed for extended periods of driving. The ratings range from 99 miles per hour (mph) to 186 mph.

NOTE: You may not find this information on all tires because law does not require it.

LETTER RATING	SPEED RATING
Q	99 MPH
R	106 MPH
S	112 MPH
T	118 MPH
U	124 MPH
H	130 MPH
V	149 MPH
W	168* MPH
Y	186* MPH

* For tires with a maximum speed capability over 149 mph, tire manufacturers sometimes use the letters ZR.

For those with a maximum speed capability over 186 mph, tire manufacturers always use the letters ZR.

U.S. DOT TIRE IDENTIFICATION NUMBER: This begins with the letters “DOT” and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer’s discretion. This information is used to contact consumers if a tire defect requires a recall.

TIRE PLY COMPOSITION AND MATERIALS USED: The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others.

MAXIMUM LOAD RATING: This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

MAXIMUM PERMISSIBLE INFLATION PRESSURE: This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

1.5.9.2. UTQGS INFORMATION

TREAD WEAR NUMBER: This number indicates the tire’s wear rate. The higher the tread wear number is, the longer it should take for the tread to wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.


TRACTION LETTER: This letter indicates a tire’s ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from highest to lowest as “AA,” “A,” “B,” and “C”.



MAINTENANCE

TEMPERATURE LETTER: This letter indicates a tire’s resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded. Excessive speed, under inflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire’s resistance to heat is graded as “A”, “B”, or “C”.

1.5.9.3. ADDITIONAL INFORMATION ON LIGHT TRUCK TIRES

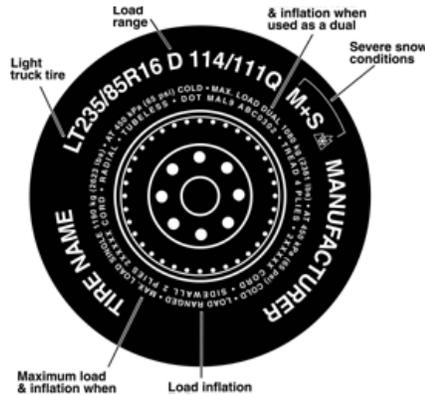

Tires for light trucks have other markings besides those found on the sidewalls of passenger tires.

LT: The “LT” indicates the tire is for light trucks or trailers.

ST: An “ST” is an indication the tire is for trailer use only.

MAX. LOAD DUAL KG (LBS.) AT KPA (PSI) COLD : This information indicates the maximum load and tire pressure when the tire is used as a dual, that is, when four tires are put on each rear axle (a total of six or more tires on the vehicle).

MAX. LOAD SINGLE KG (LBS.) AT KPA (PSI) COLD: This information indicates the maximum load and tire pressure when the tire is used as a single.

LOAD RANGE

This information identifies the tire’s load-carrying capabilities and its inflation limits.

1.6. TIRE SAFETY TIPS

PREVENTING TIRE DAMAGE

- Slow down if you have to go over a pothole or other object in the road.
- Do not run over curbs or other foreign objects in the roadway, and try not to strike the curb when parking.

TIRE SAFETY CHECKLIST

- Check tire pressure regularly (at least once a month), including the spare.
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects, or other signs of wear or trauma.
- Remove bits of glass and foreign objects wedged in the tread.
- Make sure your tire valves have valve caps.
- Check tire pressure before going on a long trip.

Do not overload your vehicle. Check the Tire Information and Loading Placard or User’s Manual for the maximum recommended load for the vehicle.

MAINTENANCE SCHEDULE

1. Heavy usage such as using the recreational vehicle as a residential vehicle will require more frequent maintenance even if the camper is stationary.
2. Dusty environments will require more frequent maintenance.
3. Heavy use in Coastal and/or Snowy area with road salts will require more frequent maintenance.
4. Heavy use of Hard water will require more frequent maintenance.

Mileage recommendation based on mileage or interval, whichever occurs first.

BEFORE EACH TRIP
INSPECT TIRES & TIRE PRESSURE
INSPECT 7-PIN
INSPECT BRAKE, TURN SIGNALS, REVERSE, & MARKER LIGHTS
INSPECT COUPLER OPERATION
BI-WEEKLY
INSPECT A/C & CLEAN FILTER - 1 & 2
MONTHLY
INSPECT & CLEAN WATER PUMP FILTER - 1
LUBRICATE WASTE BLADE VALVES - 1
INSPECT LP SYSTEM - 1
INSPECT WINDOW TRACKS/WEEP HOLES - 1 & 2
INSPECT SAFETY BREAKAWAY
WASH THE EXTERIOR & APPLY UV INHIBITOR OR POLISH - 1 & 2
INSPECT SEALS & CAULK FOR DETERIORATION - 1
TEST GFCI FUNCTION

EVERY 3 MONTHS
FLUSH FRESH WATER SYSTEM - 1 & 4
FLUSH FRESH WATER SYSTEM - 1 & 4
LUBRICATE DEXTER EZ FLEX - 2
INSPECT SUSPENSION COMPONENTS
DECALCIFY PLUMBING SYSTEM - WHEN HEAVY USE OF HARD WATER - 4
EVERY 12 MONTHS
WAX EXTERIOR - 1 & 2
INSPECT WATER HEATER ANODE (IF EQUIPPED) - 1
INSPECT & GREASE JACKS
INSPECT & CLEAN FURNACE - 1 & 2
SANITIZE FRESH WATER SYSTEM - 1
DECALCIFY PLUMBING SYSTEM - NORMAL WATER
INSPECT NEV-R-LUBE AXLE (12 MTHS OR 12K MILES, WHICHEVER COMES 1ST)
INSPECT BRAKE LININGS/MAGNETS

NOTICE	THE WHEEL LUG NUTS SHOULD BE CHECK APPROXIMATELY EVERY 200 MILES. THE RECOMMENDED TORQUE IS 110 FT/LBS.
---------------	--



OLIVER TRAVEL TRAILERS SERVICE DEPT.

228 INDUSTRIAL AVE

HOHENWALD, TENNESSEE 38462

TOLL FREE: 888-526-3978

EMAIL: SERVICE@OLIVERTRAVELTRAILERS.COM

SEE OUR VIDEOS AT OLIVERTRAVELTRAILERS.COM